



Front Door Panel: Service and Repair

REMOVAL

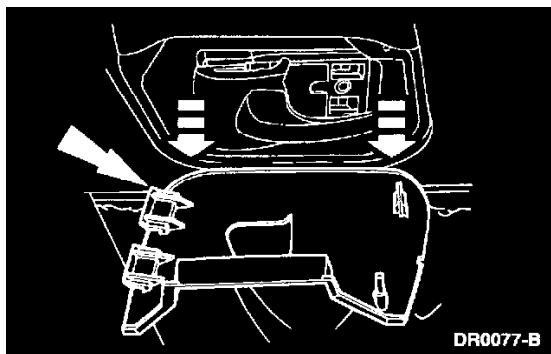


1. Remove the door handle bezel.

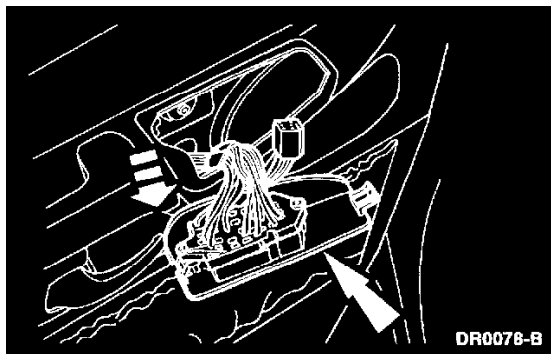

2. Remove the power window/door lock switch bezel, if so equipped.



3. Remove the rearview mirror fastener trim cover.

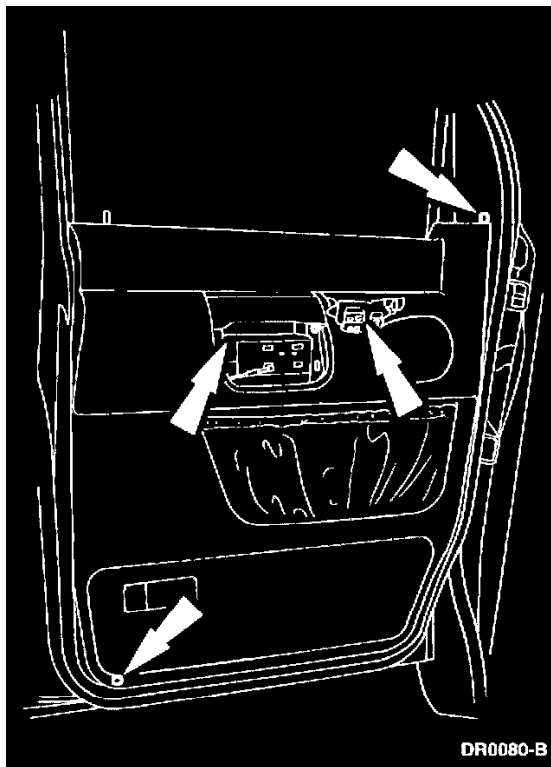

DR0080-B

4. Remove the door trim panel retaining screws.
5. Lift the door trim panel up from the door to disengage the trim panel clips.
6. Remove the courtesy lamp wiring harness connector and remove the door trim panel.

INSTALLATION

1. Follow the removal procedure in reverse order.