

Wiper Arm: Service and Repair

Wiper Mounting Arm and Pivot Shaft

WIPER MOUNTING ARM AND PIVOT SHAFT

Removal and Installation

1. Remove the cowl grille.
2. Remove the 2 nuts and position the evaporative emission canister purge valve aside.
 - To install, tighten to **6 Nm (53 lb-in)**.
3. Remove the 6 bolts and position the wiper mounting arm and pivot shaft aside.
 - To install, tighten to **12 Nm (9 lb-ft)**.
4. Disconnect the windshield wiper motor electrical connector.
5. Disconnect the windshield washer hose and remove the wiper mounting arm and pivot shaft.
6. To install, reverse the removal procedure.