


Fuel Injector: Diagrams

Injector 1


C1181 (GV)
12B637
 Fuel Injector 1
 (9F593)

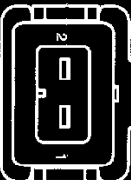

F02089

Pin	Circuit	Circuit function
1	555 (TN)	Fuel Injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1181 (GV)
***12B637** (GV)
9D930 (BK)
 Fuel Injector 1 (9F593)

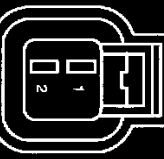


F02069

Pin	Circuit	Circuit function
1	555 (TN)	Fuel Injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

Fuel Injector: Diagrams Injector 2


C1182 (GY)
12B637
 Fuel Injector 2
 (9F593)

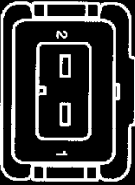

F02089

Pin	Circuit	Circuit function
1	556 (WH)	Fuel Injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1182 (GY)
***12B637** (GY)
9D930 (BK)
 Fuel Injector 2
 (9F593)

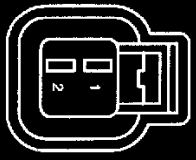

F02089


* 6.8L

Pin	Circuit	Circuit function
1	556 (WH)	Fuel Injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

Fuel Injector: Diagrams

Injector 3


C1183 (GY)
12B637
 Fuel Injector 3
 (9F593)

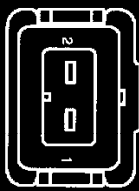

F02089

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel Injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1183
***12B637** (GY)
9D930 (BK)
 Fuel Injector 3
 (9F593)

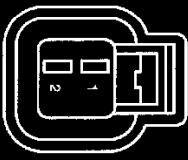

F02089


* 6.8L

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel Injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

Fuel Injector: Diagrams

Injector 4


C1184 (GV)
12B637
 Fuel Injector 4
 (9F563)

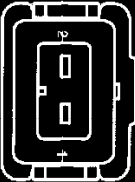

F02089

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel Injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1184
***12B637** (GV)
9D930 (BK)
 Fuel Injector 4
 (9F693)

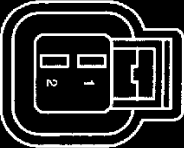

F02089


Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

* 6.8L

Fuel Injector: Diagrams

Injector 5


C1185 (GY)
12B637
 Fuel Injector 5
 (9F593)

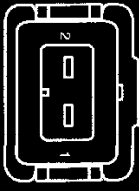

F02099

Pin	Circuit	Circuit function
1	559 (T/NBK)	Fuel Injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1185 (GY)
***12B637**
9D930 (BK)
 Fuel Injector 5
 (9F593)

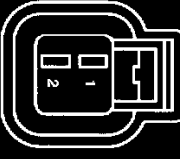

F02069


Pin	Circuit	Circuit function
1	559 (T/NBK)	Fuel Injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

* 6.8L

Fuel Injector: Diagrams

Injector 6


C1186 (GY)
12B637
 Fuel Injector 6
 (9F-993)

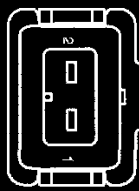

F02069

Pin	Circuit	Circuit function
1	560 (L/G/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1186 * 6.8L
***12B637** (GY)
9D930 (BK)
 Fuel Injector 6
 (9F-993)

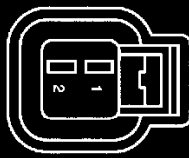


F02069

Pin	Circuit	Circuit function
1	560 (L/G/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

Fuel Injector: Diagrams Injector 7


C187 (GV)
12B637
Fuel Injector 7
(9F5933)

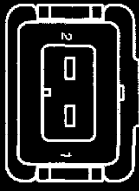

F02089

Pin	Circuit	Circuit function
1	561 (TN/RD)	Fuel Injector 7, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1312 (GV)
12B637
Fuel Injector 7
(9F5933)

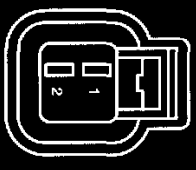


F02069

Pin	Circuit	Circuit function
1	561 (TN/RD)	Fuel Injector 7, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

Fuel Injector: Diagrams Injector 8


C188 (GV)
12B637
Fuel Injector 8
(9F593)

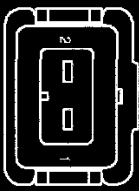

F02089

Pin	Circuit	Circuit function
1	562 (LB)	Fuel Injector 8, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1313 (GV)
12B637
Fuel Injector 8
(9F593)

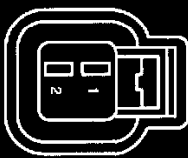

F02089

Pin	Circuit	Circuit function
1	562 (LB)	Fuel Injector 8, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)