


Rear Door Panel: Service and Repair

Trim Panel - Dual Rear Cargo Doors


TRIM PANEL - DUAL REAR CARGO DOORS

Removal and Installation


NOTE: The following procedure applies to both the left and the right dual rear cargo doors.

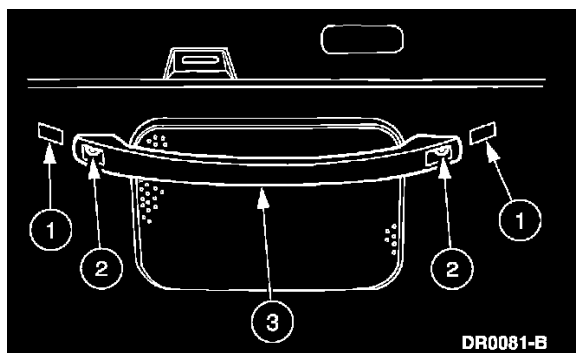

1. Remove the door pull handle.
 - 1 Remove the screw access covers.
 - 2 Remove the screws.
 - 3 Remove the door pull handle.

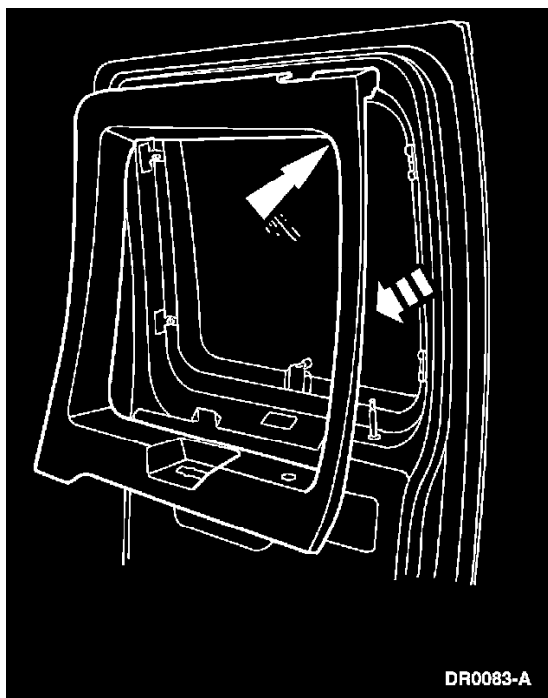

2. Lift the window garnish moulding upward slightly and pull the moulding from the door.

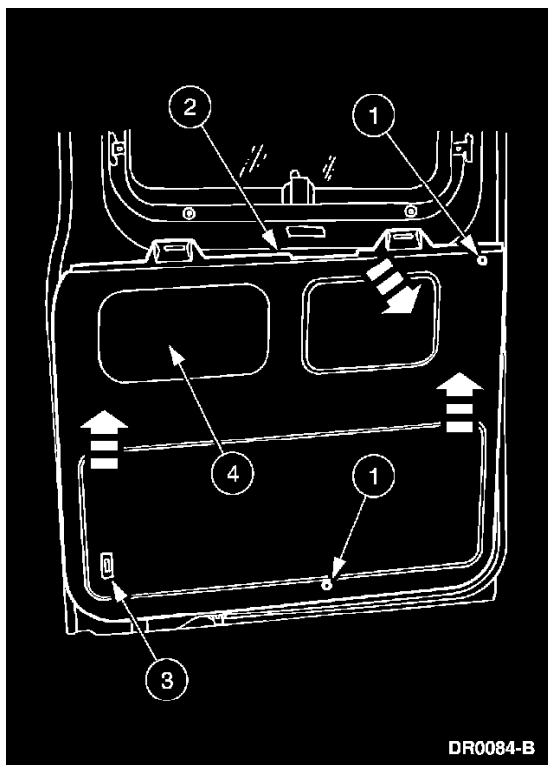

DR0084-B

3. Remove the door trim panel.
 - 1 Remove the screws.
 - 2 Lift the door trim panel slightly upward.
 - 3 Disconnect the power door lock electrical connector, if so equipped.
 - 4 Remove the door trim panel.
4. To install, reverse the removal procedure.