

Vehicle: Locations

Component Locations

If the component you are looking for is not listed here, please refer to **System** or **Sub-Assembly Locations**. Example: If Air Flow Meter is not found here, refer to **Powertrain Management/Computers and Control Systems/Air Flow Meter/Locations**.

Connector Locations

- Connector C100:** Center Of Firewall
- Connector C101:** Center Of Firewall
- Connector C102:** Center Of Firewall
- Connector C103:** LH Fender Apron, Near Dual Brake Warning Switch
- Connector C104:** Lower LH Side Of Firewall, Near Dual Brake Warning Switch
- Connector C105:** Center Of Firewall
- Connector C106:** Behind LH Side Of Engine, Near Neutral Safety Switch
- Connector C107:** Behind LH Side Of Engine, Below Vehicle
- Connector C108:** On LH Front Of Floor Pan, Next To Wheel Hub
- Connector C109:** Below Driver Seat Next To Seat Belt Buckle
- Connector C110:** Behind LH Side Of Instrument Panel, Through Bottom Of Firewall
- Connector C111:** RH Fender Apron, Near Electronic Engine Control
- Connector C112:** Lower LH Side Of Firewall
- Connector C113:** Behind LH Cowl Panel
- Connector C114:** Center Of Firewall
- Connector C115:** Center Of Firewall
- Connector C116:** Center Of Firewall
- Connector C118:** RH Fender Apron, Above EEC Power Relay
- Connector C119:** LH Side Of Engine, Next To Valve Cover
- Connector C120:** Center Of Firewall, Near Engine Control Barometric Pressure Sensor
- Connector C121:** LH Side Of Firewall
- Connector C122:** RH Fender Apron, Near Battery
- Connector C123:** Top RH Side Of Engine, Near Alternator
- Connector C124:** Top RH Side Of Engine, Near Alternator
- Connector C125:** Front Of LH Fender Apron, Near Horns
- Connector C126:** Lower LH Corner Of Firewall
- Connector C129:** Top Rear Of Engine
- Connector C131:** Lower RH Rear Of Engine
- Connector C132:** Center Of Firewall
- Connector C133:** Lower LH Side Of Firewall
- Connector C136:** LH Side Of Firewall, On Wiper Motor & Switch
- Connector C137:** LH Side Of Firewall, On Wiper Motor & Switch
- Connector C138:** Inside RH Front Fender
- Connector C139:** Inside RH Front Fender
- Connector C159:** RH Fender Apron, Near Blower Motor
- Connector C160:** RH Fender Apron, Near Blower Motor
- Connector C161:** On RH Fender Apron, Near Blower Resistor
- Connector C163:** Front RH Side Of Engine, Near Distributor
- Connector C166 (4.9L/6-300 & 7.5L/V8-460):** LH Side Of Engine, Near Tape Out To Ignition Coil
- Connector C166 (5.0L/V8-302 & 5.8L/V8-351):** RH Side Of Engine, Near Tape Out To Water Temperature Indicator
- Connector C199:** Near HEGO Sensor
- Connector C200:** Below LH Side Of Instrument Panel, Attached To Steering Column Support Near Speed Control Amplifier
- Connector C201:** Behind LH Cowl Panel
- Connector C202:** Behind LH Cowl Panel
- Connector C203:** Behind RH Cowl Panel
- Connector C204:** Behind Center Of Instrument Panel, On Radio
- Connector C205:** Behind Center Of Instrument Panel, On Radio
- Connector C206:** Behind Center Of Instrument Panel, On Radio Amplifier
- Connector C207:** Behind Center Of Instrument Panel, On Radio Amplifier
- Connector C208:** Behind LH Side Of Instrument Panel, Above Fuse Panel
- Connector C209:** Behind LH Cowl Panel
- Connector C210:** Behind LH Side Of Instrument Panel, Above Fuse Panel Bracket
- Connector C211:** Behind Center Of Instrument Panel, Near Instrument Cluster
- Connector C212:** Behind RH Side Of Instrument Panel, Above Cowl Panel
- Connector C213:** On Speed Control Amplifier
- Connector C214:** On Speed Control Amplifier
- Connector C215:** Behind RH Side Of Instrument Panel, Above Cowl Panel

Connector C216: Behind Lower RH Cowl Panel
Connector C217: Behind LH Cowl Panel
Connector C218: Behind RH Cowl Panel
Connector C219: Behind LH Cowl Panel
Connector C220: Behind RH Cowl Panel
Connector C221: Behind RH Side Of Instrument Panel, Near Top Of RH Cowl Panel
Connector C222: Behind LH Side Of Instrument Panel, Near Fuse Panel
Connector C223: Behind LH Cowl Panel
Connector C224: Behind Center Of Instrument Panel
Connector C225: Behind LH Side Of Instrument Panel, Near Fuse Panel
Connector C227: LH Side Of Instrument Panel, Near Main Light Switch
Connector C228: LH Side Of Instrument Panel, Near Fuse Panel
Connector C229: Upper RH Cowl, Near Access Hole
Connector C230: On Instrument Panel, RH Side Of Radio
Connector C231: Behind Center Of Instrument Panel, Near Rear Of Radio
Connector C252: Behind LH Side Of Instrument Panel, Near Base Of Steering Column
Connector C261: Behind RH Side Of Instrument Panel
Connector C300: Below Drivers Seat Next To Seat Belt Buckle
Connector C301: Below Vehicle, Along LH Frame Rail
Connector C302: Below Vehicle, Near Center Of LH Frame Rail
Connector C303: Below Vehicle, Along LH Frame Rail
Connector C304: Below Rear Of Vehicle, Along LH Frame Rail
Connector C305: Under Vehicle, Along LH Frame Rail
Connector C306: Below Vehicle, Along LH Frame Rail
Connector C307: Below Vehicle, Along LH Frame Rail
Connector C308: At Throw Away Fuel Gauge Sender & Pump
Connector C400: Below LH Rear Corner Of Vehicle, Near LH Frame Rail
Connector C401: Below Rear Of Vehicle, Near LH Frame Rail
Connector C402: In LH Rear Corner Of Van, Behind Stoplamp Assembly

Ground Locations

Ground G100 (4.9L/6-300): Lower RH Rear Of Engine, On Starter Bolt
Ground G100 (5.0L/V8-302, 5.8L/V8-351, 7.3L/V8-444 & 7.5L/V8-460): Lower RH Front Of Engine
Ground G101: Top Of RH Fender, Near Fuel Pump Relay
Ground G102: Top Of LH Fender
Ground G115: Lower LH Side Of 7.3L/V8-444 Diesel Engine
Ground G116: Top RH Front Of Engine, Near Alternator
Ground G200: Behind Center Of Instrument Panel, On Radio Rear Mounting Stud
Ground G201: Behind LH Side Of Instrument Panel, Near Fuel Tank Selector Switch
Ground G300: Below Vehicle, Along LH Frame Rail Near C306

Splice Locations

Splice S100: Engine Harness, In Tape Out To Battery Ground Pigtail
Splice S101: Engine Harness, Near Tape Out To RH Front Side Marker Lamp
Splice S102: Engine Harness, Near Tape Out To Dual Brake Warning Switch
Splice S103: Engine Harness, Near Center Of Firewall
Splice S104: Engine Harness, Near Tape Out To Electronic Engine Control Module
Splice S105: Alternator Rectifier Harness, Near Tape Out To C118
Splice S106: Engine Harness, Near Tape Out To Fuse Links S & W
Splice S109: Main Harness, Near Tape Out To Fuse Links S & W
Splice S111: Engine Harness, Near Tape Out To Blower Motor
Splice S112: Engine Harness, Near Tape Out To C110
Splice S113: Engine Harness, Near Tape Out To Dual Brake Warning Switch
Splice S115: Main Harness, In Tape Out To Ignition Switch
Splice S117: Engine Harness, Near Tape Out To RH Front Side Marker Lamp
Splice S120 (4.9L/6-300): Instrument Panel To Engine Jumper Harness, Near Tape Out To C129
Splice S120 (5.0L/V8-302, 5.8L/V8-351 & 7.5L/V8-460): Engine Harness, In Tape Out To C1984
Splice S121: Engine Harness, Near Tape Out To Blower Motor
Splice S122 (4.9L/6-300, 5.0L/V8-302 & 5.8L/V8-351): Engine Harness, Near Tape Out To Fuse Links D & E
Splice S122 (7.3L/V8-460): Engine Harness, Near Tape Out To C110
Splice S122 (7.5L/V8-460): Engine Harness, Near Tape Out To Fuse Links S & W
Splice S123: Engine Harness, Near Tape Out To Fuel Pump Relay
Splice S124 (Diesel): Engine Harness, Near Tape Out To C114
Splice S124 (Except Diesel): Engine Harness, Near Tape Out To C105

Splice S125: Back-Up To Rear Lamp Harness, Near Tape Out To E40D Transmission
Splice S126: Back-Up Lamp Harness, Near Tape Out To Transmission
Splice S127: Courtesy Lamp Harness, Near Tape Out To RH Seat Belt Retractor Solenoid
Splice S128: Engine Harness, In Tape Out To Blower Motor Resistors
Splice S129: Window Regulator Harness, Near Tape Out To Door Lock/ Unlock Control Relay
Splice S130: Window Regulator Harness, Near Tape Out To Door Lock/Unlock Control Relay
Splice S132: Window Regulator Harness, Near Tape Out To Door Lock/Unlock Control Relay
Splice S133: Window Regulator Harness, Near Tape Out To Door Lock/Unlock Control Relay
Splice S134: Main Harness, Near Tape Out To A/C Function Selector Switch
Splice S135: Engine Harness, Near Tape Out To Dual Brake Warning Switch
Splice S136: Main Harness, Near Tape Out To Main Light Switch
Splice S139: Main Harness, Near Tape Out To Fuel Tank Selector Switch
Splice S140: Main Harness, Near Tape Out To Wiper Motor & Switch
Splice S143 (5.0L/V8-302 & 5.8L/V8-351): Fuel Charge Harness, Near Tape Out To TFI Ignition Module
Splice S143 (7.5L/V8-460): Fuel Charge Harness, Near Tape Out To C100
Splice S144: Fuel Charge Harness, Near Tape Out To Ignition Coil
Splice S145: Main Harness, Near Tape Out To Anti-Lock Brake Module
Splice S146: Main Harness, Near Tape Out To Ignition Switch
Splice S147: Main Harness, Near Tape Out To Clutch Switch
Splice S148: Engine Harness, Near Tape Out To C100
Splice S150 (4.9L/6-300, 5.0L/V8-302, 5.8L/V8-351 & 7.5L/V8-460): Engine Harness, Near Tape Out To Electronic Engine Control
Splice S150 (7.3L/V8-444): Engine Harness, Near Tape Out To TECA Power Relay On RH Side Of Firewall
Splice S152 (4.9L/6-300, 5.0L/V8-302, 5.8L/V8-351 & 7.5L/V8-460): Engine Harness, Near Tape Out To Electronic Engine Control
Splice S152 (7.3L/V8-444): Engine Harness, Near Tape Out To TECA Power Relay On RH Side Of Firewall
Splice S153: Engine Harness, Near Tape Out To Engine Control Barometric Pressure Sensor
Splice S154 (4.9L/6-300): Instrument Panel To Engine Jumper Harness, Near Tape Out To C117
Splice S154 (5.0L/V8-302, 5.8L/V8-351 & 7.5L/V8-460): Fuel Charge Harness, Near Tape Out To Fuel Injector 3
Splice S154 (7.3L/V8-444): Fuel Charge Harness, Near Tape Out To Tachometer
Splice S155: Main Harness, Near Tape Out To Warning Chime Module
Splice S156: Main Harness, Near Tape Out To Inertia Switch
Splice S157: Main Harness, Near Tape Out To Clutch Switch
Splice S158: Main Harness, Near Tape Out To Inertia Switch
Splice S159: Engine Harness, Near Tape Out To Fuel Pump Relay
Splice S160: Main Harness, Near Tape Out To Warning Chime Module
Splice S161: Main Harness, Near Tape Out To Anti-Lock Brake Module
Splice S162: Engine Harness, Near Tape Out To TFI Ignition Module
Splice S163: Engine Harness, Near Tape Out To C121
Splice S164: Engine Harness, Near Tape Out To C121
Splice S165: Engine Harness, Near Tape Out To EEC Module
Splice S166: Engine Harness, Near Tape Out To Windshield Washer Pump Motor
Splice S167: Fuel Charge Harness, Near Tape Out To TFI Ignition Module
Splice S168: Main Harness, Near Tape Out To Warning Chime Module
Splice S170: Rear Lamp Harness, Near Tape Out To Throw Away Fuel Gauge & Sender
Splice S202: Main Harness, Near Tape Out To Windshield Wiper/Washer Switch
Splice S205: Interior Lamp Feed Harness, Near Tape Out To Dome/Map Lamps
Splice S221: Main Harness, Near Tape Out To Headlamp Switch
Splice S230: Main Harness, Near Tape Out To Parking Brake Switch
Splice S231: Window Regulator Harness, Near Tape Out To Lock/Unlock Control Relay
Splice S235: Rear Door Lock Harness, Near Tape Out To Side Door Switch
Splice S236: Rear Door Lock Harness, Near Tape Out To Side Door Switch
Splice S302: Main Harness, Near Tape Out To Stop Lamp Switch
Splice S400: Rear Lamp Harness, Near Tape Out To C303
Splice S401: Rear Lamp Harness, Near Tape Out To Front Fuel Tank
Splice S402: Rear Lamp Harness, Near Tape Out To RH Back-Up Lamp
Splice S403: Rear Lamp Harness, Near Tape Out To LH Back-Up Lamp
Splice S405: Rear Lamp Harness, Near Tape Out To Fuel Booster Pump
Splice S406: Rear Lamp Harness, Near Tape Out To C303
Splice S407: Rear Lamp Harness, Near Tape Out To RH Back-Up Lamp
Splice S408: Rear Lamp Connector Harness, Near Tape Out To LH Turn Signal Lamp
Splice S409: Rear Lamp Harness, Near Tape Out To C112
Splice S410: Rear Lamp Harness, Near Tape Out To C112
Splice S411: Rear Lamp Harness, Near Tape Out To C303
Splice S412: Rear Lamp Connector Harness, Near Tape Out To Trailer Lamps Relay
Splice S413: Rear Lamp Harness, Near Tape Out To ABS Rear Axle Sensor
Splice S414: Rear Lamp Harness, Near Tape Out To ABS Rear Axle Sensor

Splice S502: Engine Harness, Near Tape Out To C110

Splice S503: Engine Harness, Near Tape Out To C110

Splice S504: Engine Harness, Near Tape Out To C110

Splice S610: Rear Lamp Harness, Near Tape Out To C305

Splice S611: Rear Lamp Extension Harness, Near Tape Out To G300

Splice S615: Rear Lamp Harness, Near Tape Out To Trailer Lamps Relay

Splice S616: Rear Lamp Harness, Near Tape Out To C402

Splice S669 (4.9L/6-300 & 7.5L/V8-460): Fuel Charge Harness, Near Tape Out To Fuel Injector No. 3

Splice S669 (5.0L/V8-302 & 5.8L/V8-351): Fuel Charge Harness, Near Tape Out To Fuel Injector No. 8

Splice S678 (4.9L/6-300, 5.0L/V8-302 & 5.8L/V8-351): Fuel Charge Harness, Near Tape Out To Fuel Injector No. 4

Splice S678 (7.5L/V8-460): Fuel Charge Harness, Near Tape Out To Fuel Injector No. 7

Splice S811: Courtesy Lamp Harness, Near Tape Out To RH Seat Belt Retractor

Splice S819: Dash Of Engine Harness, Near Tape Out To Throttle Position Sensor

Splice S822: Main Harness, Near Tape Out To LH Door Jamb Switch

Splice S889: Fuel Charge Harness, Near Tape Out To EGR Valve Position Sensor

Splice S890 (4.9L/6-300): Fuel Charge Harness, Near Tape Out To Fuel Injector No. 5

Splice S890 (5.0L/V8-302, 5.8L/V8-351 & 7.5L/V8-460): Fuel Charge Harness, Near Tape Out To Fuel Injector No. 7

Splice S891 (4.9L/6-300): Fuel Charge Harness, Near Tape Out To Fuel Injector No. 3

Splice S891 (5.0L/V8-302, 5.8L/V8-351 & 7.5L/V8-460): Fuel Charge Harness, Near Tape Out To Fuel Injector No. 4

Splice S898: Fuel Charge Harness, Near Tape Out To Fuel Injector No. 1

Splice S899 (5.0L/V8-302 & 5.8L/V8-351): Fuel Charge Harness, Near Tape Out To Throttle Position Sensor

Splice S899 (7.5L/V8-460): Fuel Charge Harness, Near Tape Out To Air Charge Temperature Sensor