

Fuse Block: Electrical Diagrams

Engine Compartment Fuse Box


Circuit-to-Fuse Cross Reference

4 Wheel Anti-Lock Brake System Module	Fuse 19
Auxiliary Battery Relay	Fuse 10
Auxiliary A/C	Fuse 16
Blower Motor Relay	Fuse 13 & H
Blower Motor	Fuse 13
Daytime Running Lamp Module	Fuse 27
Electronic Brake Controller	Fuse 20
Engine Compartment Fuse 14	Fuse 10
Engine Compartment Fuse 22	Fuse 10
Engine Compartment Fuse 26	Fuse 12
Engine Compartment Fuse 27	Fuse 12
Fuel Pump Relay	Fuse 17 & K
Horn Relay	Fuse J
Horn	Fuse 27
I/P Fuse 10	Fuse 8
I/P Fuse 11	Fuse 8
I/P Fuse 16	Fuse 8
I/P Fuse 23	Fuse 8
I/P Fuse 28	Fuse 8
I/P Fuse 38	Fuse 8
I/P Fuse 40	Fuse 18
I/P Fuse 41	Fuse 18
I/P Fuse 4	Fuse 8
Ignition Switch	Fuse 23
Instrument Panel (I/P) Fuse 5	Fuse 8
Left Trailer Turn Signal	Fuse 6
Main Light Switch	Fuse 15
Modified Vehicle Power	Fuse 21
Modified Vehicle	Fuse 22
PCM Diode	Fuse 28
PCM Keep Alive Memory	Fuse 4
PCM Power Relay	Fuse 9
PCM Relay	Fuse G
Remote Keyless Entry Module	Fuse 16
Right Trailer Turn Signal	Fuse 5
Trailer Backup Lamps Relay	Fuse C
Trailer Backup Lamps	Fuse 14
Trailer Battery Charge Relay	Fuse 22 & E
Trailer Running Lamps Relay	Fuse D
Trailer Running Lamps	Fuse 14

Fuse 4

Fuse 4 - protects the following circuits:

- ^ PCM Keep Alive Memory

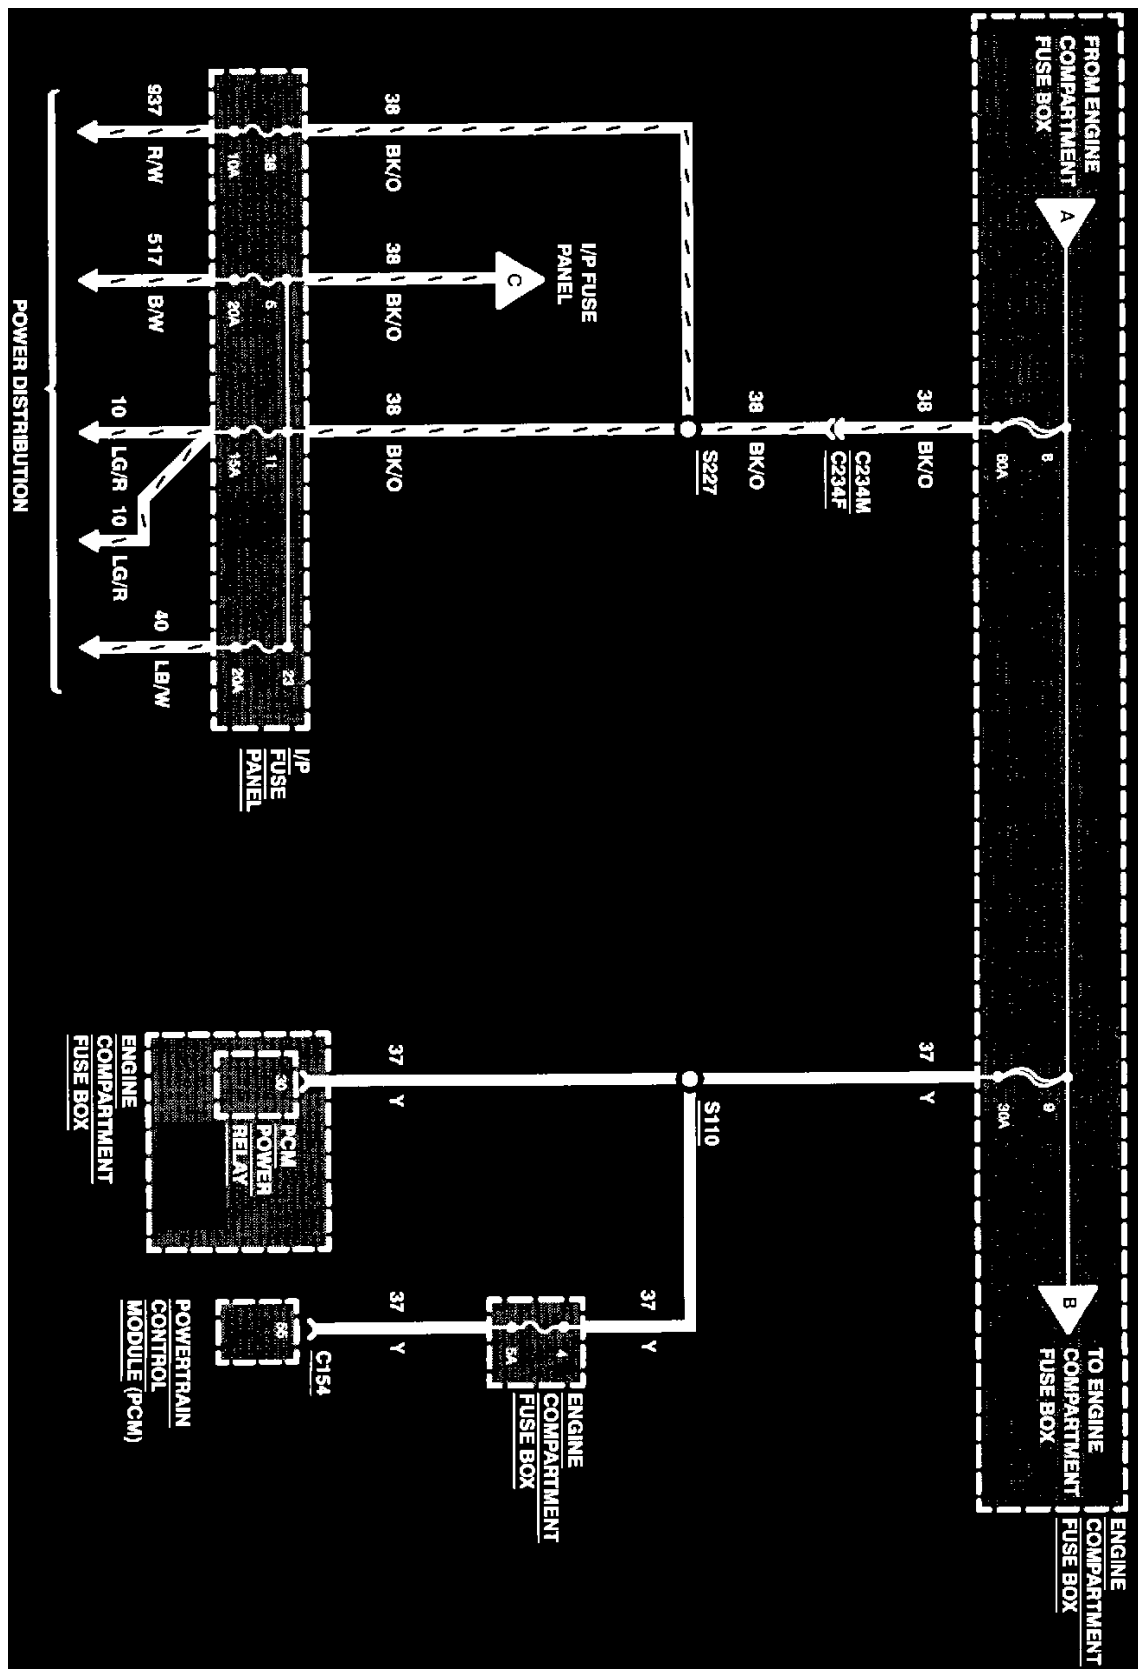


Power Distribution

Fuse 8

Fuse 8 - protects the following circuits:

- ^ Instrument Panel (I/P) Fuse 5
- ^ I/P Fuse 11
- ^ I/P Fuse 23
- ^ I/P Fuse 38
- ^ I/P Fuse 4

- ^ I/P Fuse 10
- ^ I/P Fuse 16
- ^ I/P Fuse 28

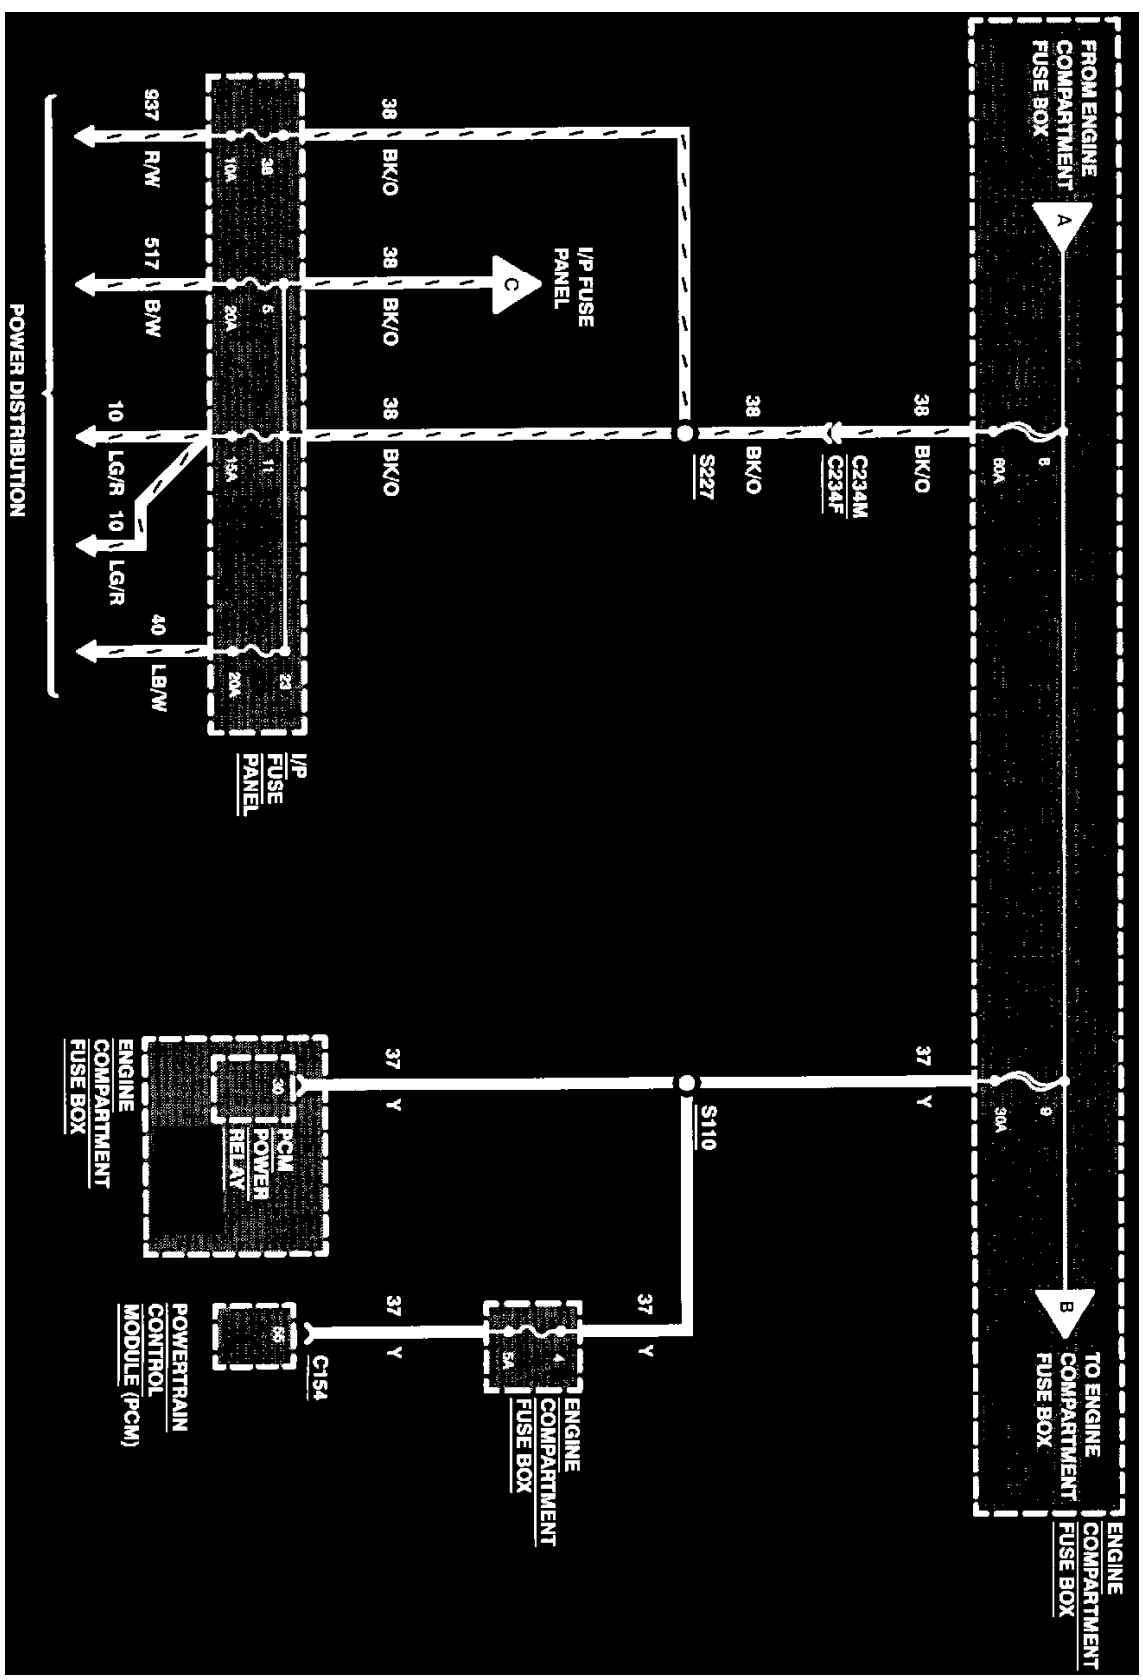


Power Distribution

Fuse 9

Fuse 9 - protects the following circuits:

- ^ PCM Power Relay

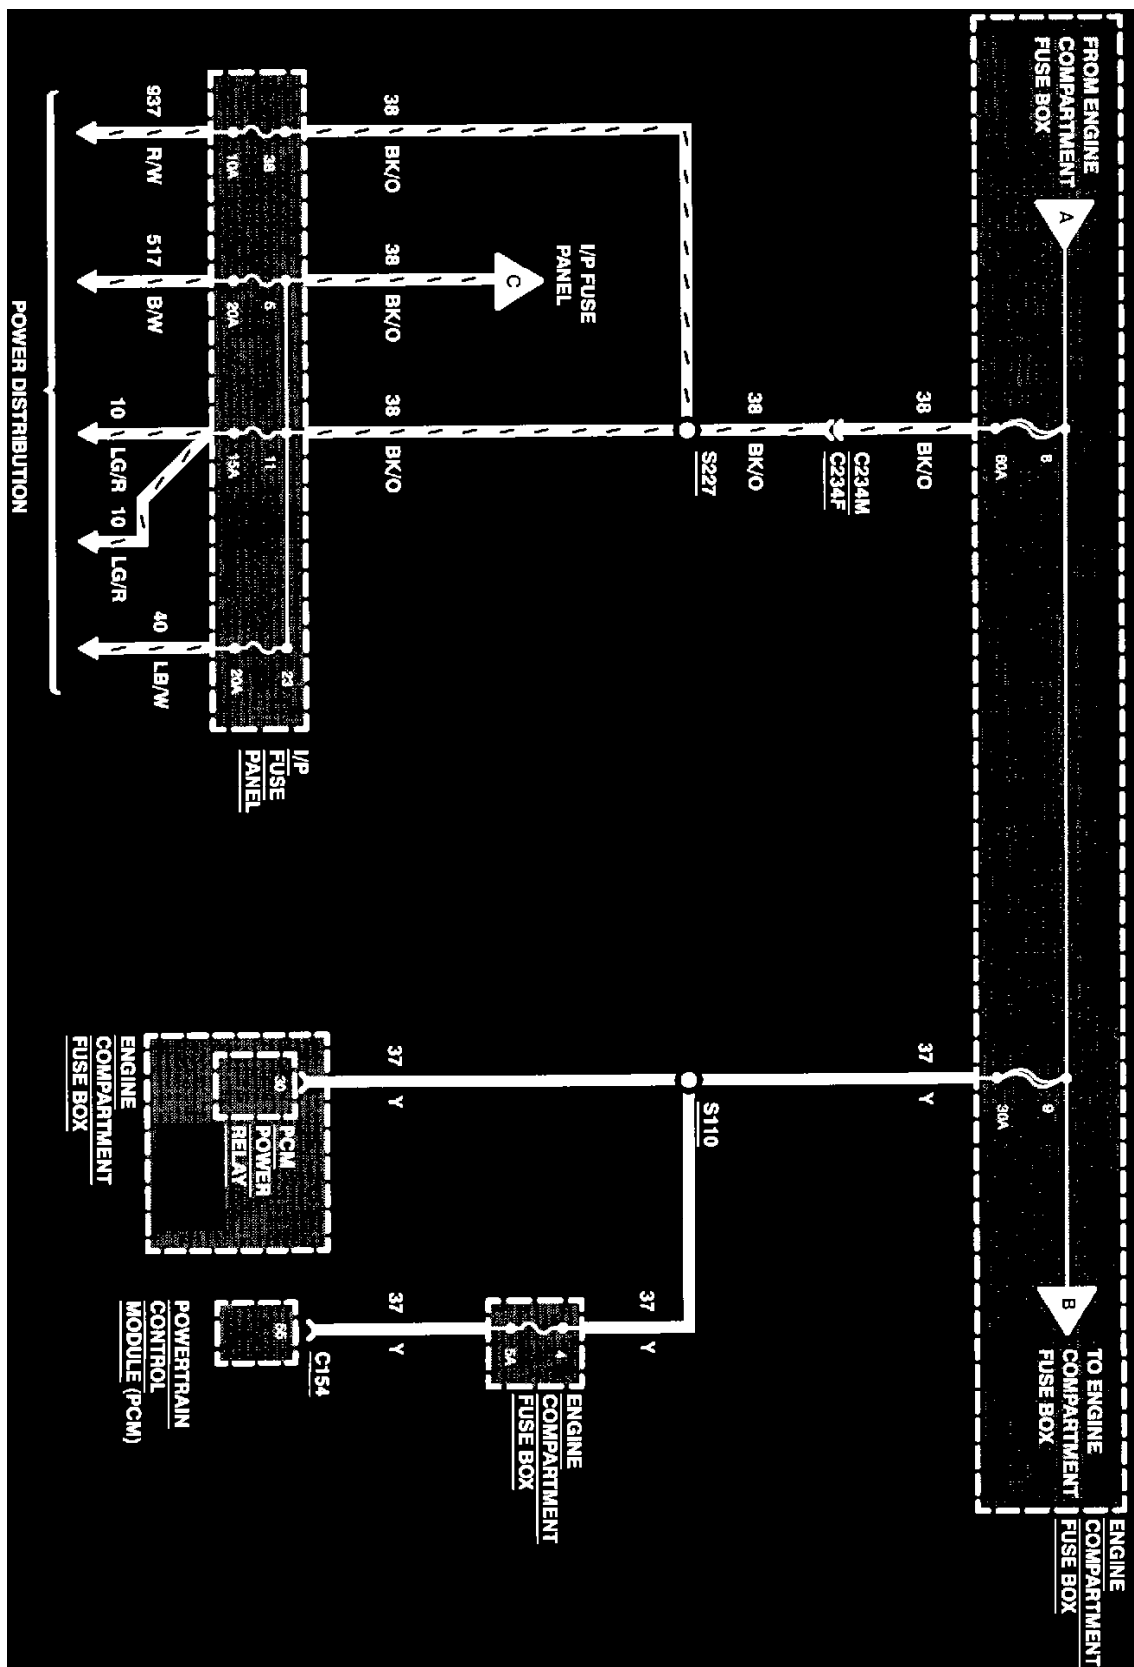


Power Distribution

Fuse 10

Fuse 10 - protects the following circuits:

- ^ Auxiliary Battery Relay
- ^ Engine Compartment Fuse 14
- ^ Engine Compartment Fuse 22

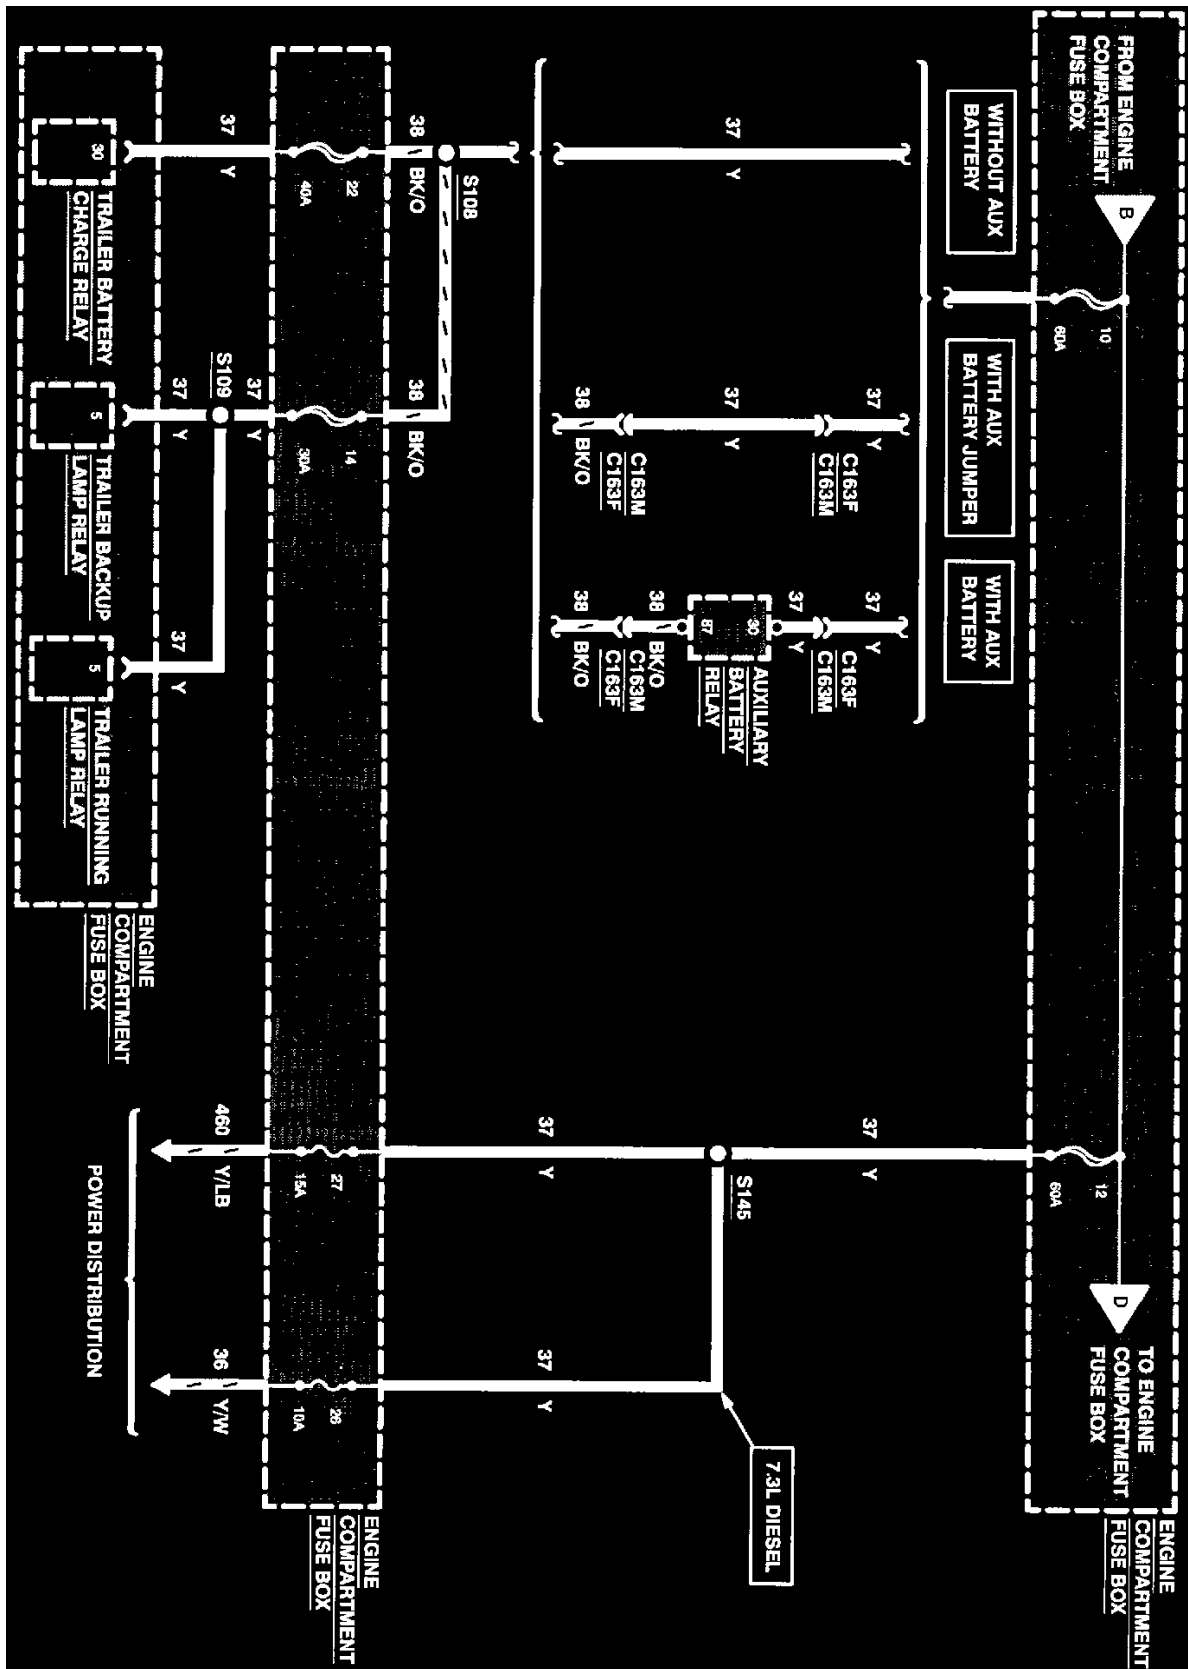


Power Distribution

Fuse 12

Fuse 12 - protects the following circuits:

- ^ Engine Compartment Fuse 26
- ^ Engine Compartment Fuse 27

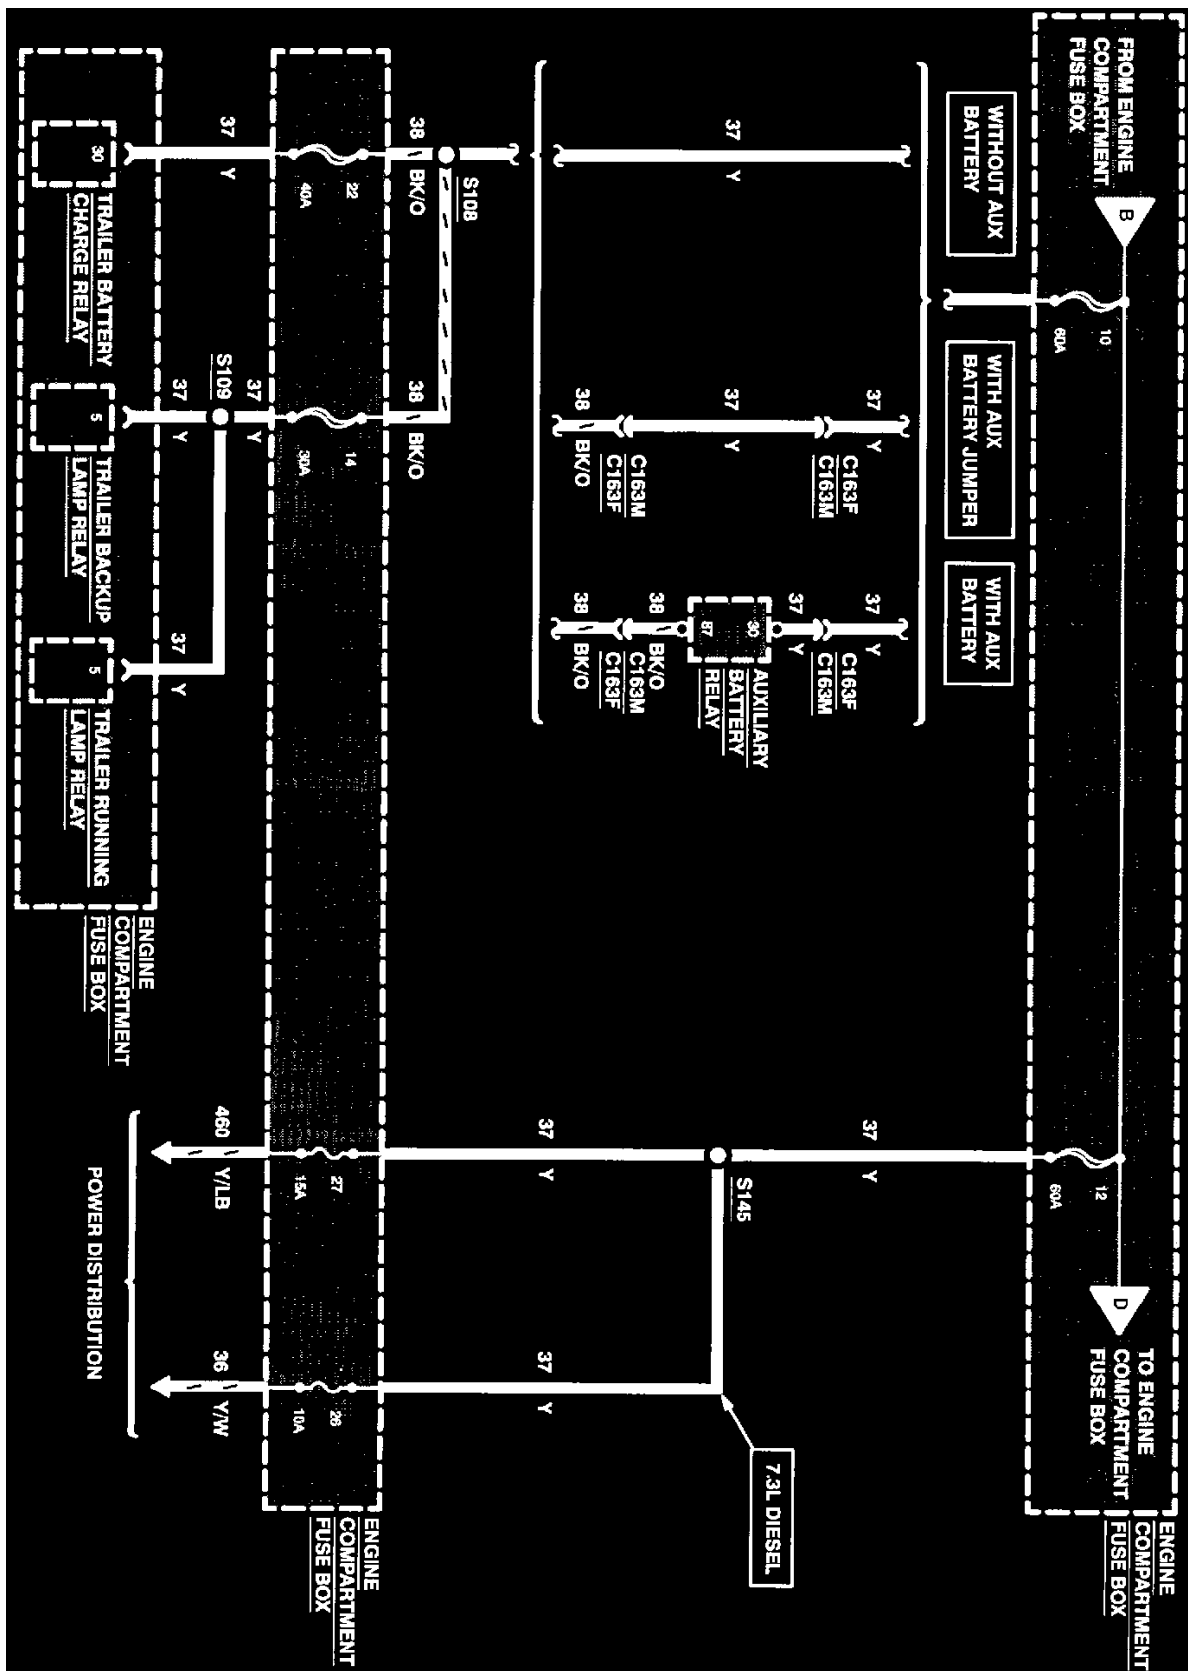


Power Distribution

Fuse 13

Fuse 13 - protects the following circuits:

- ^ Blower Motor Relay
- ^ Blower Motor

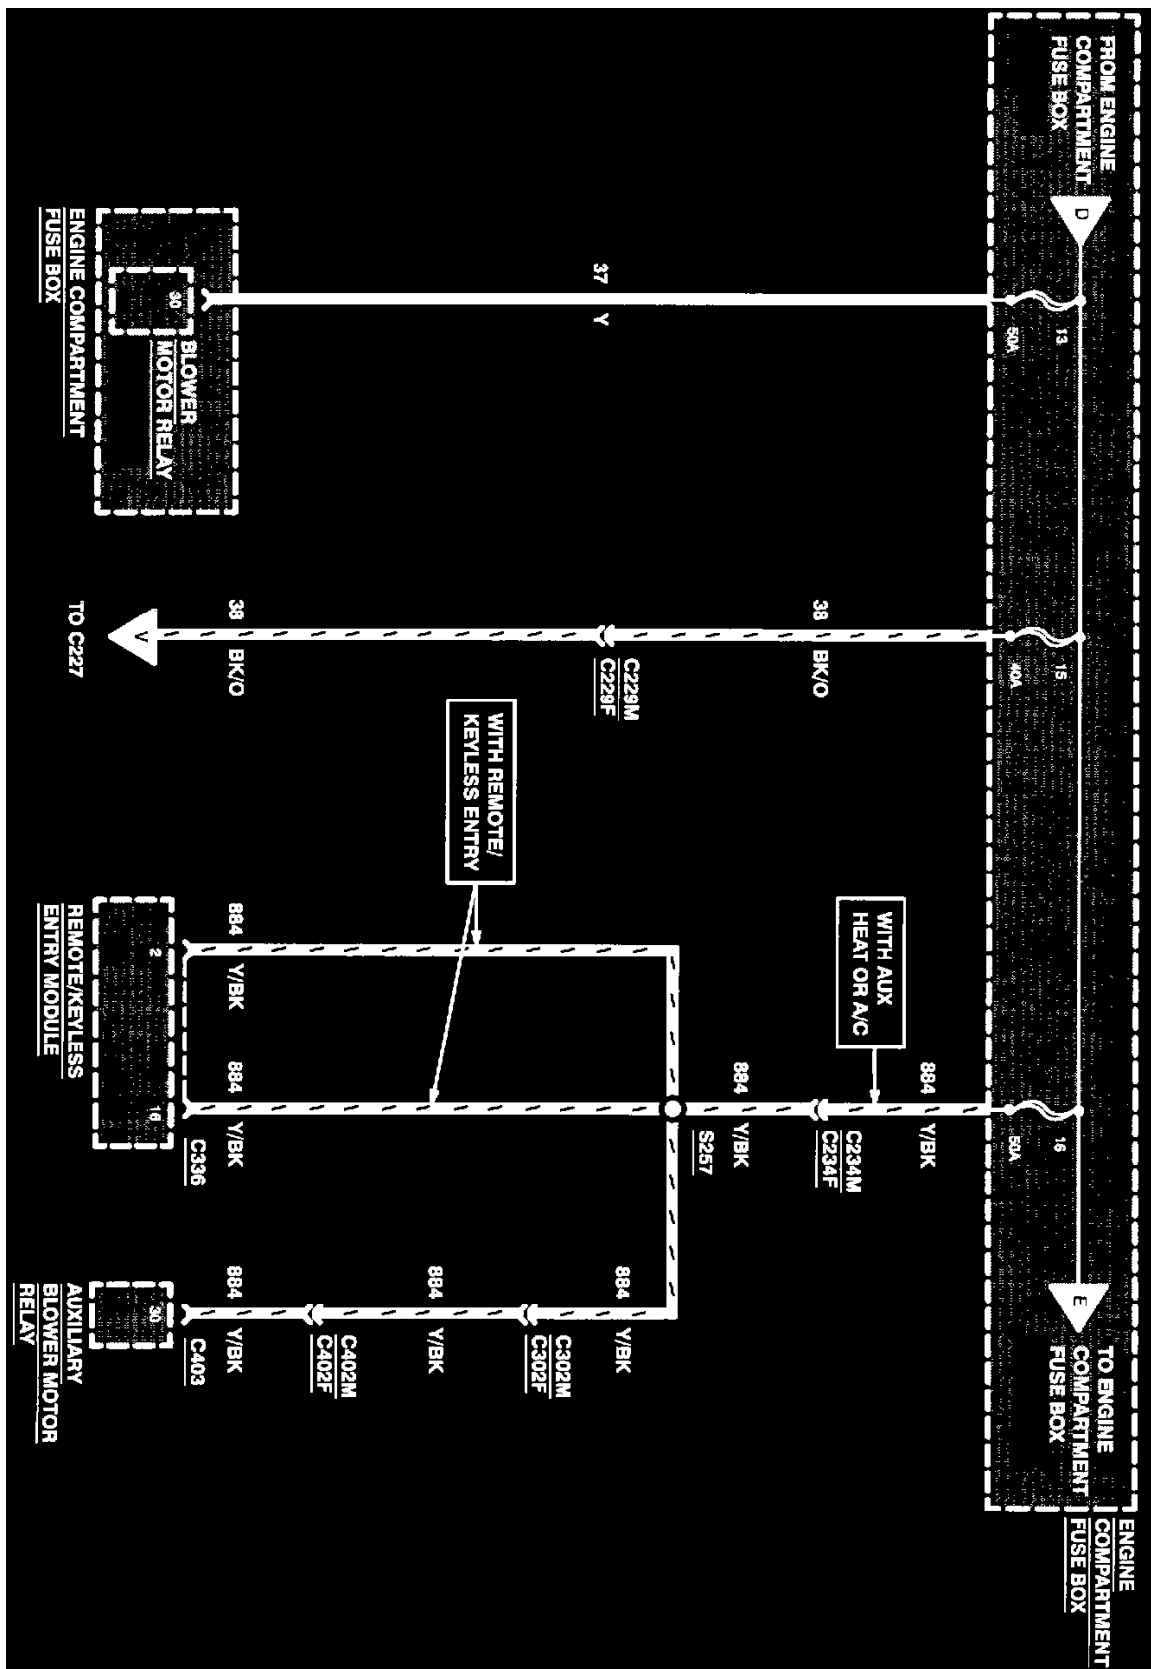


Power Distribution

Fuse 14

Fuse 14 - protects the following circuits:

- ^ Trailer Running Lamps
- ^ Trailer Backup Lamps

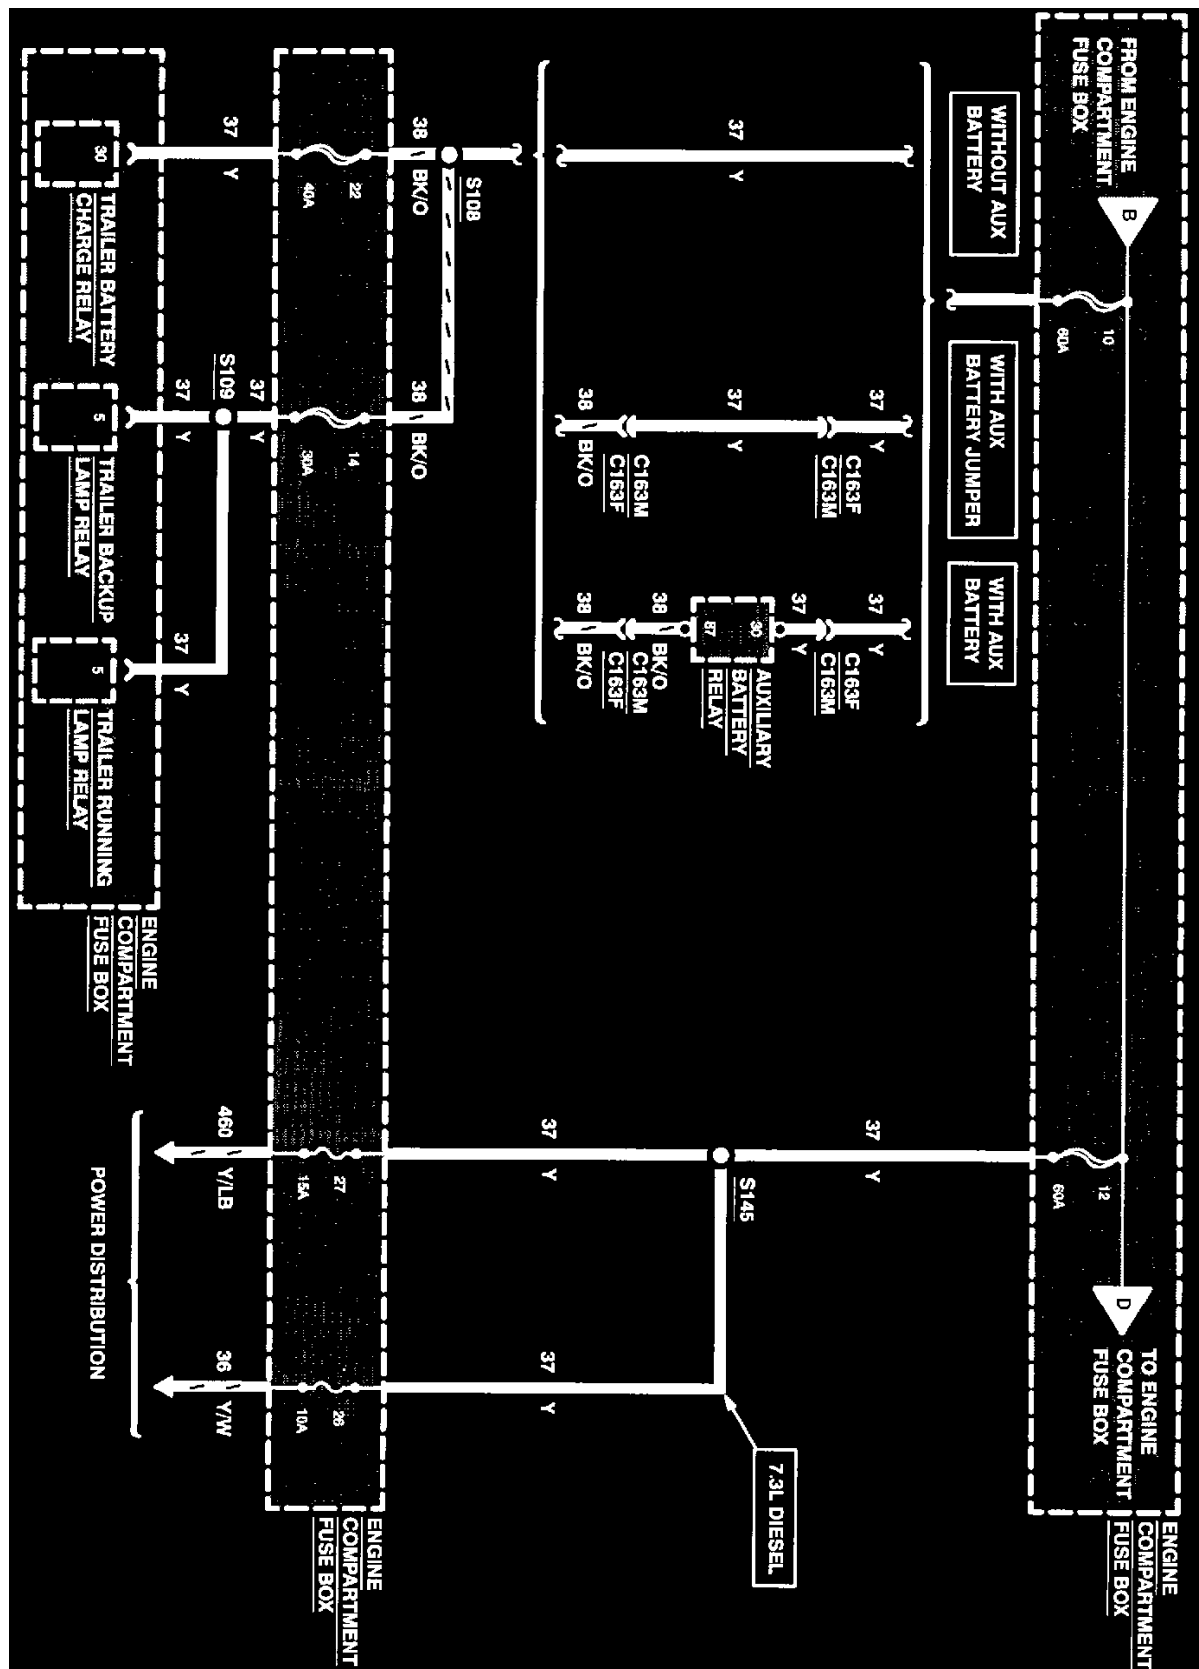


Power Distribution


Fuse 15

Fuse 15 - protects the following circuits:

- ^ Main Light Switch

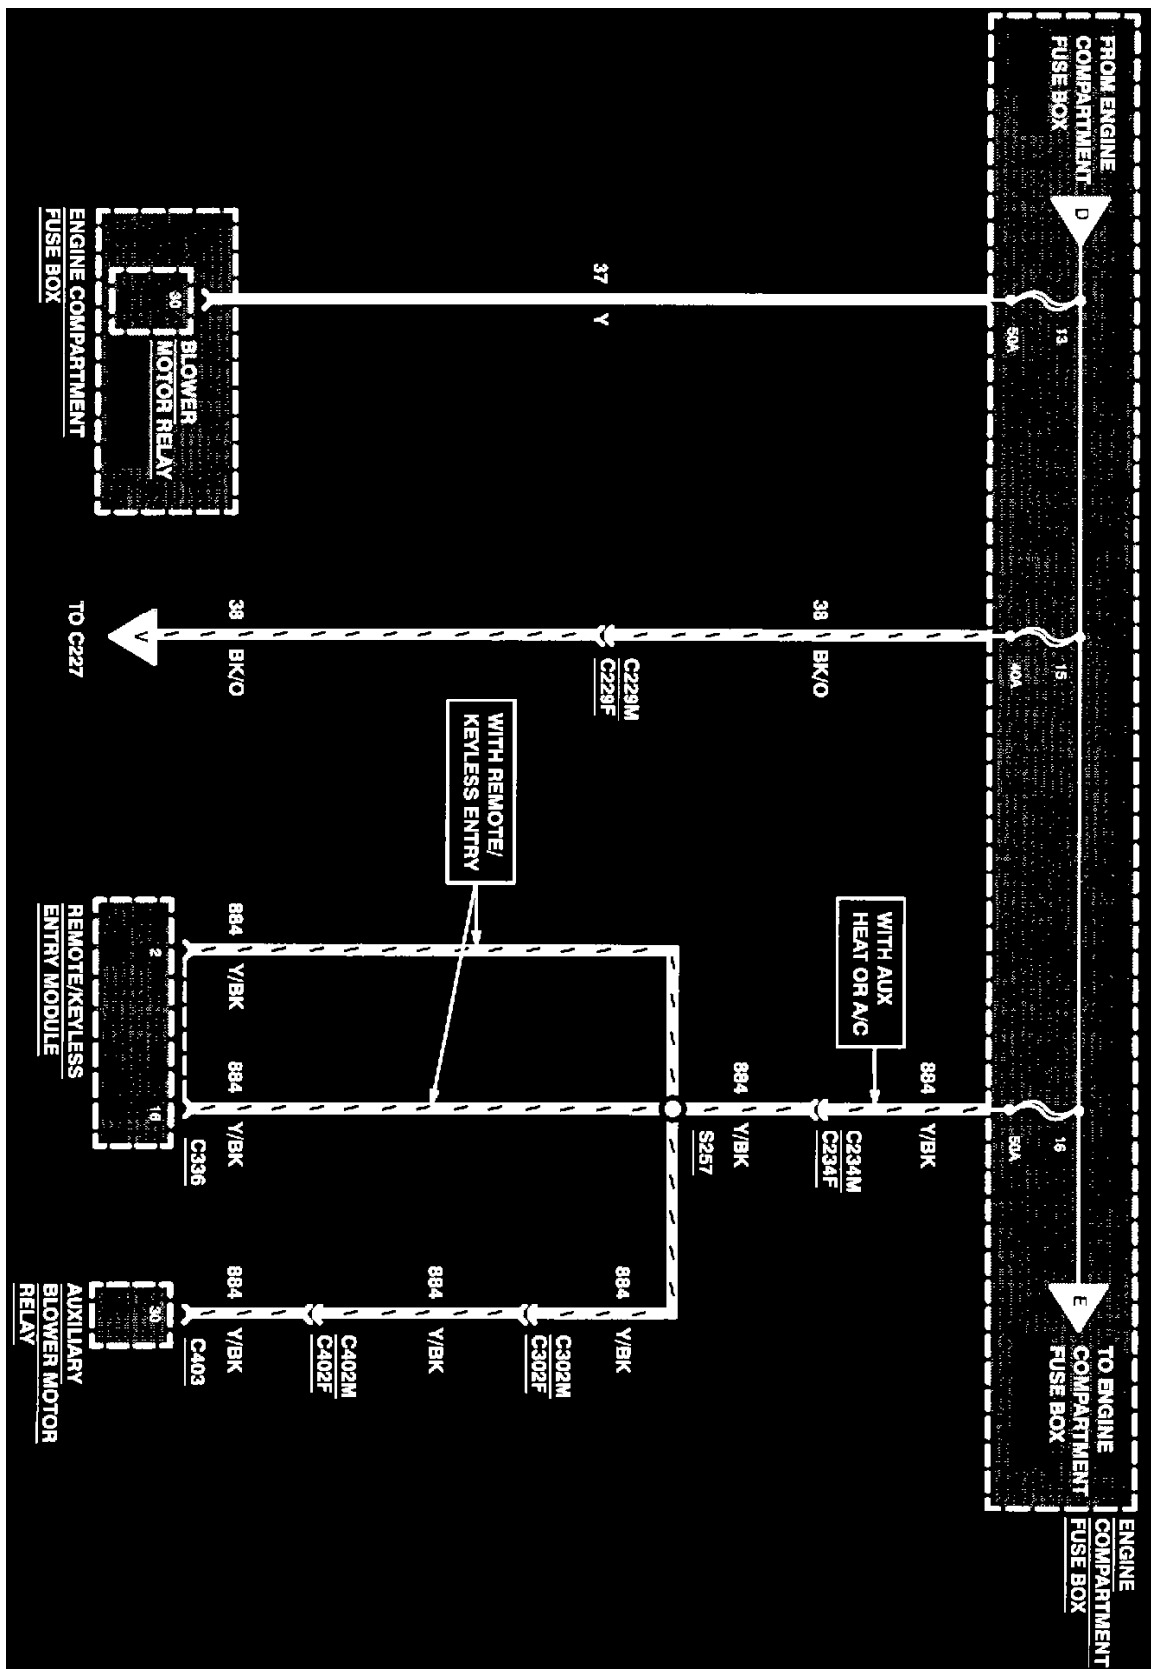

Power Distribution

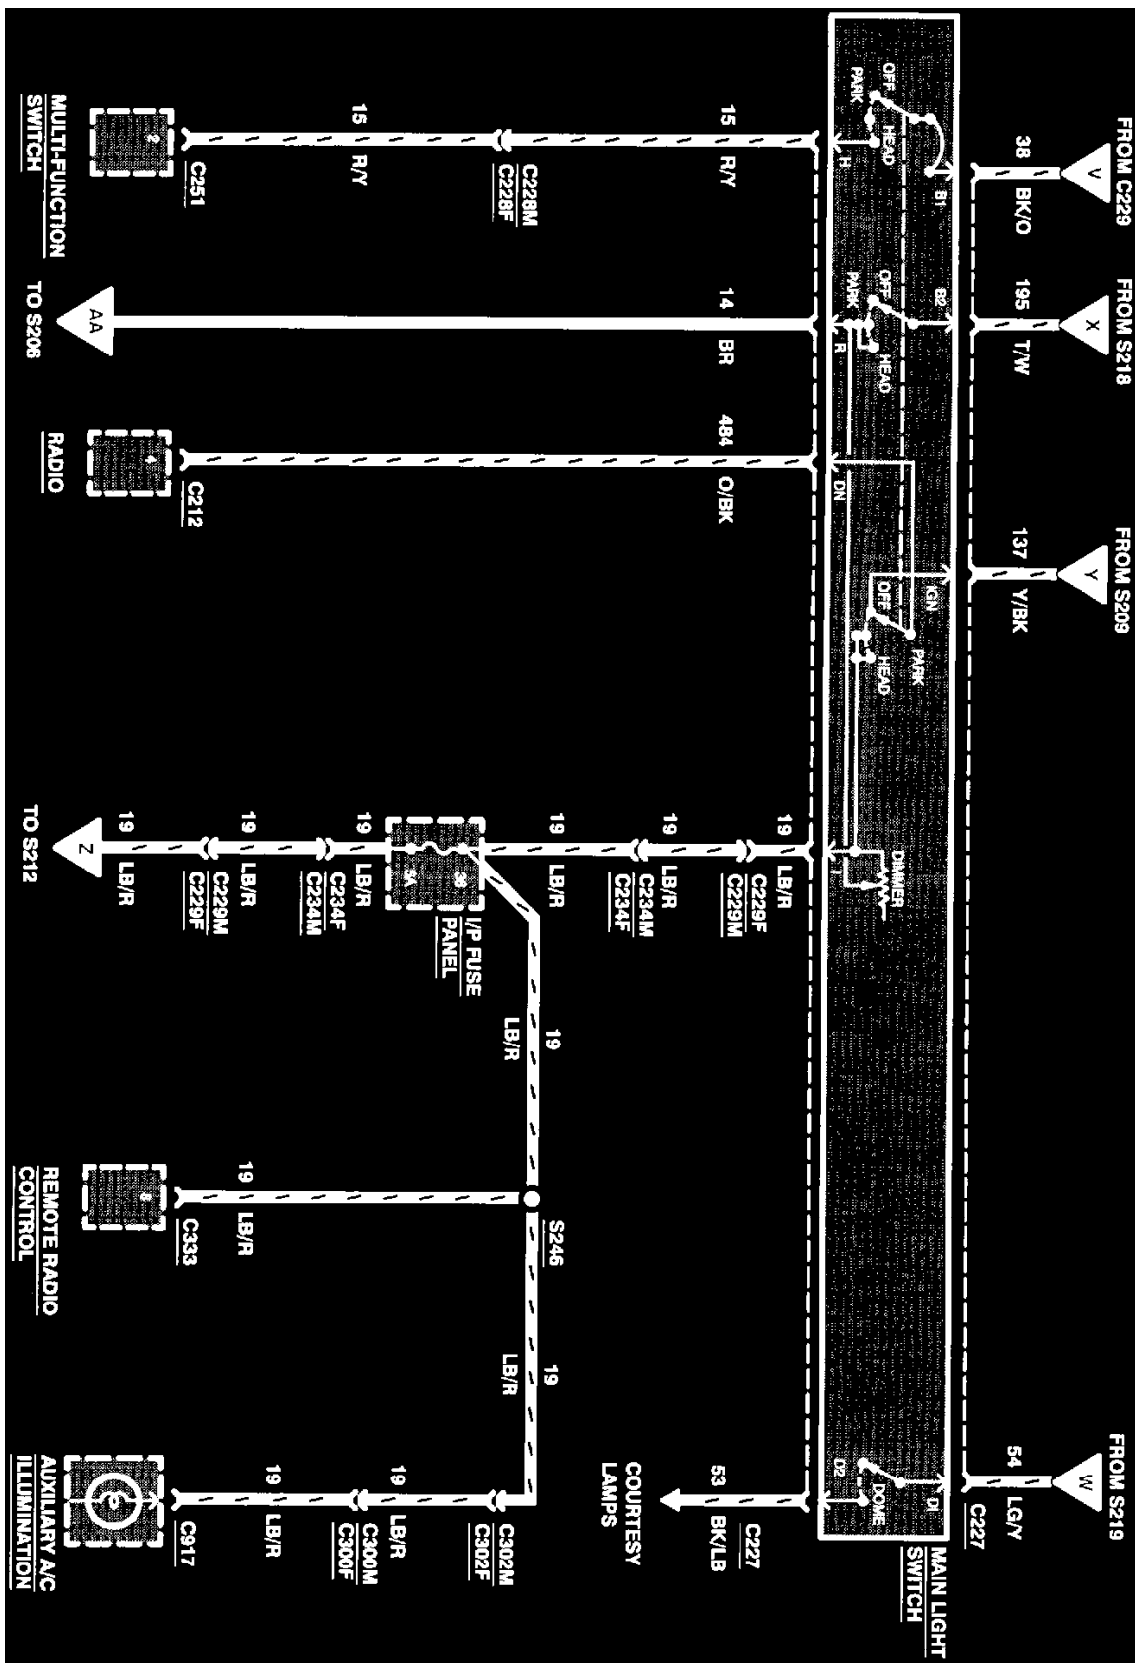


Power Distribution

Fuse 16

Fuse 16 - protects the following circuits:

- ^ Auxiliary A/C
- ^ Remote Keyless Entry Module

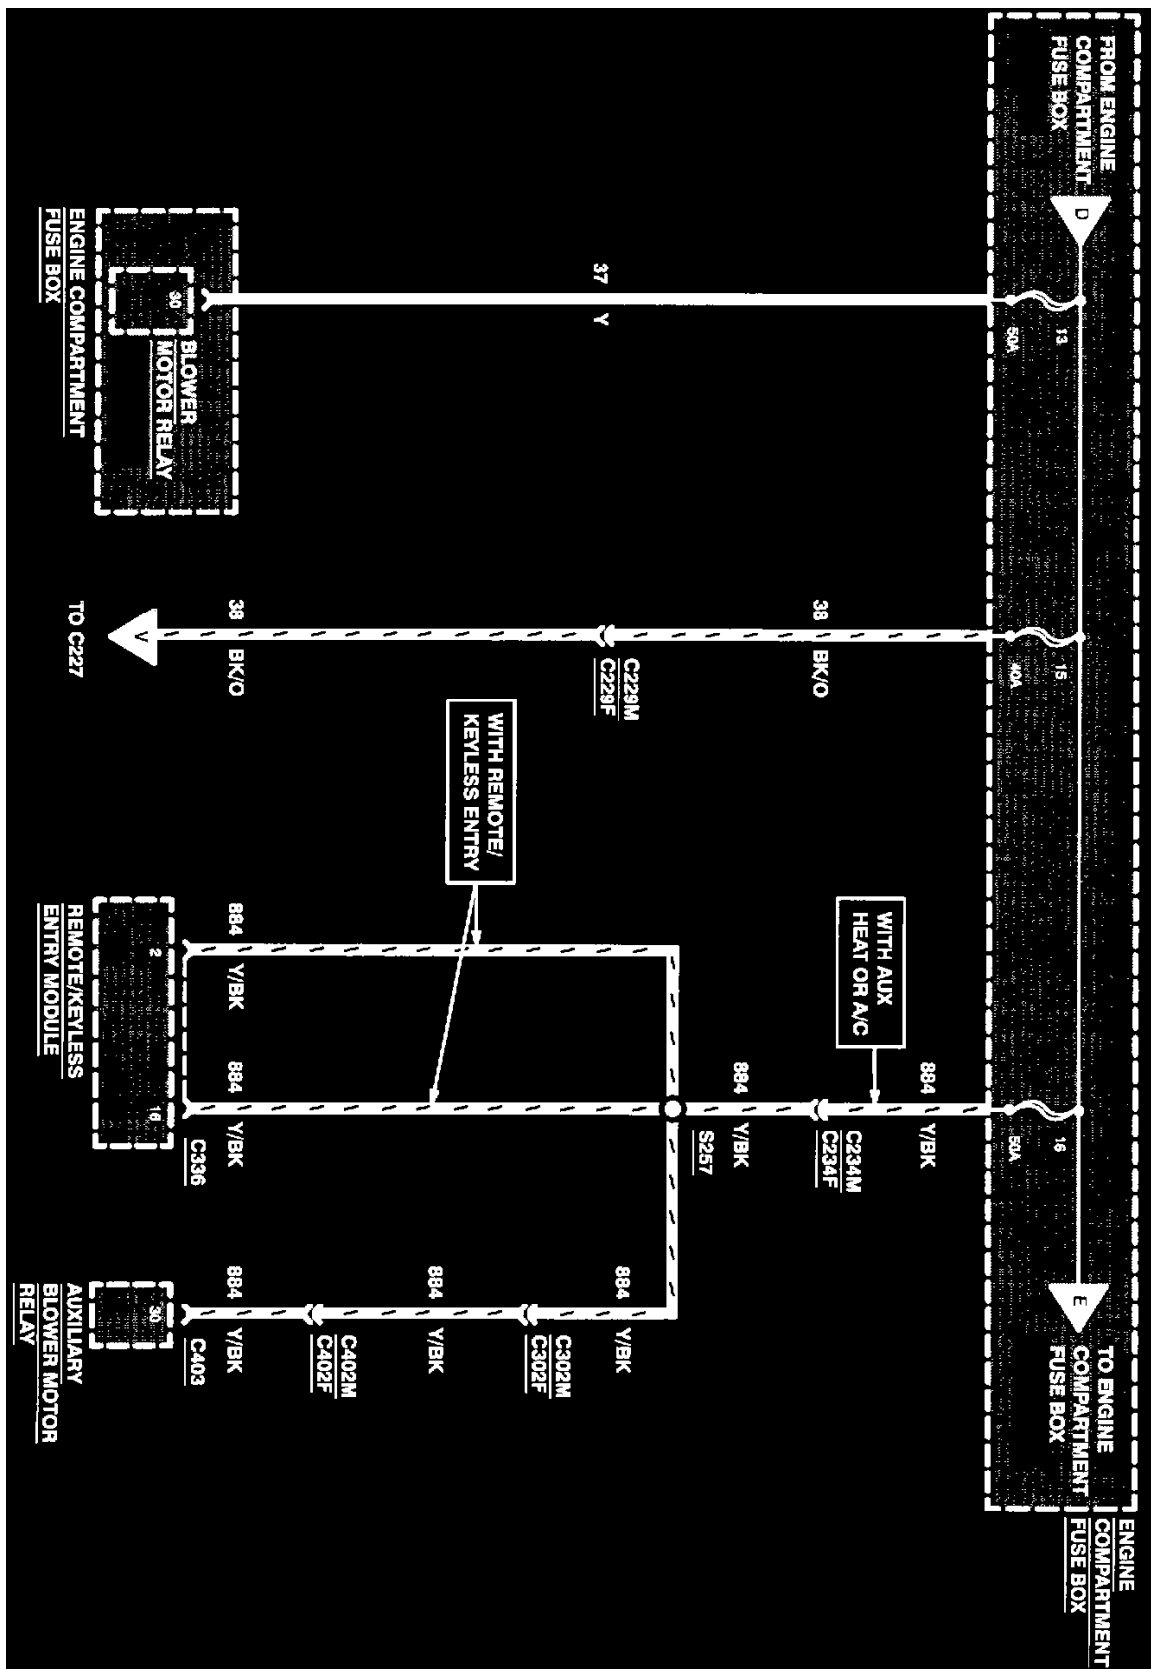


Power Distribution

Fuse 17

Fuse 17 - protects the following circuits:

- ^ Injector Driver Module

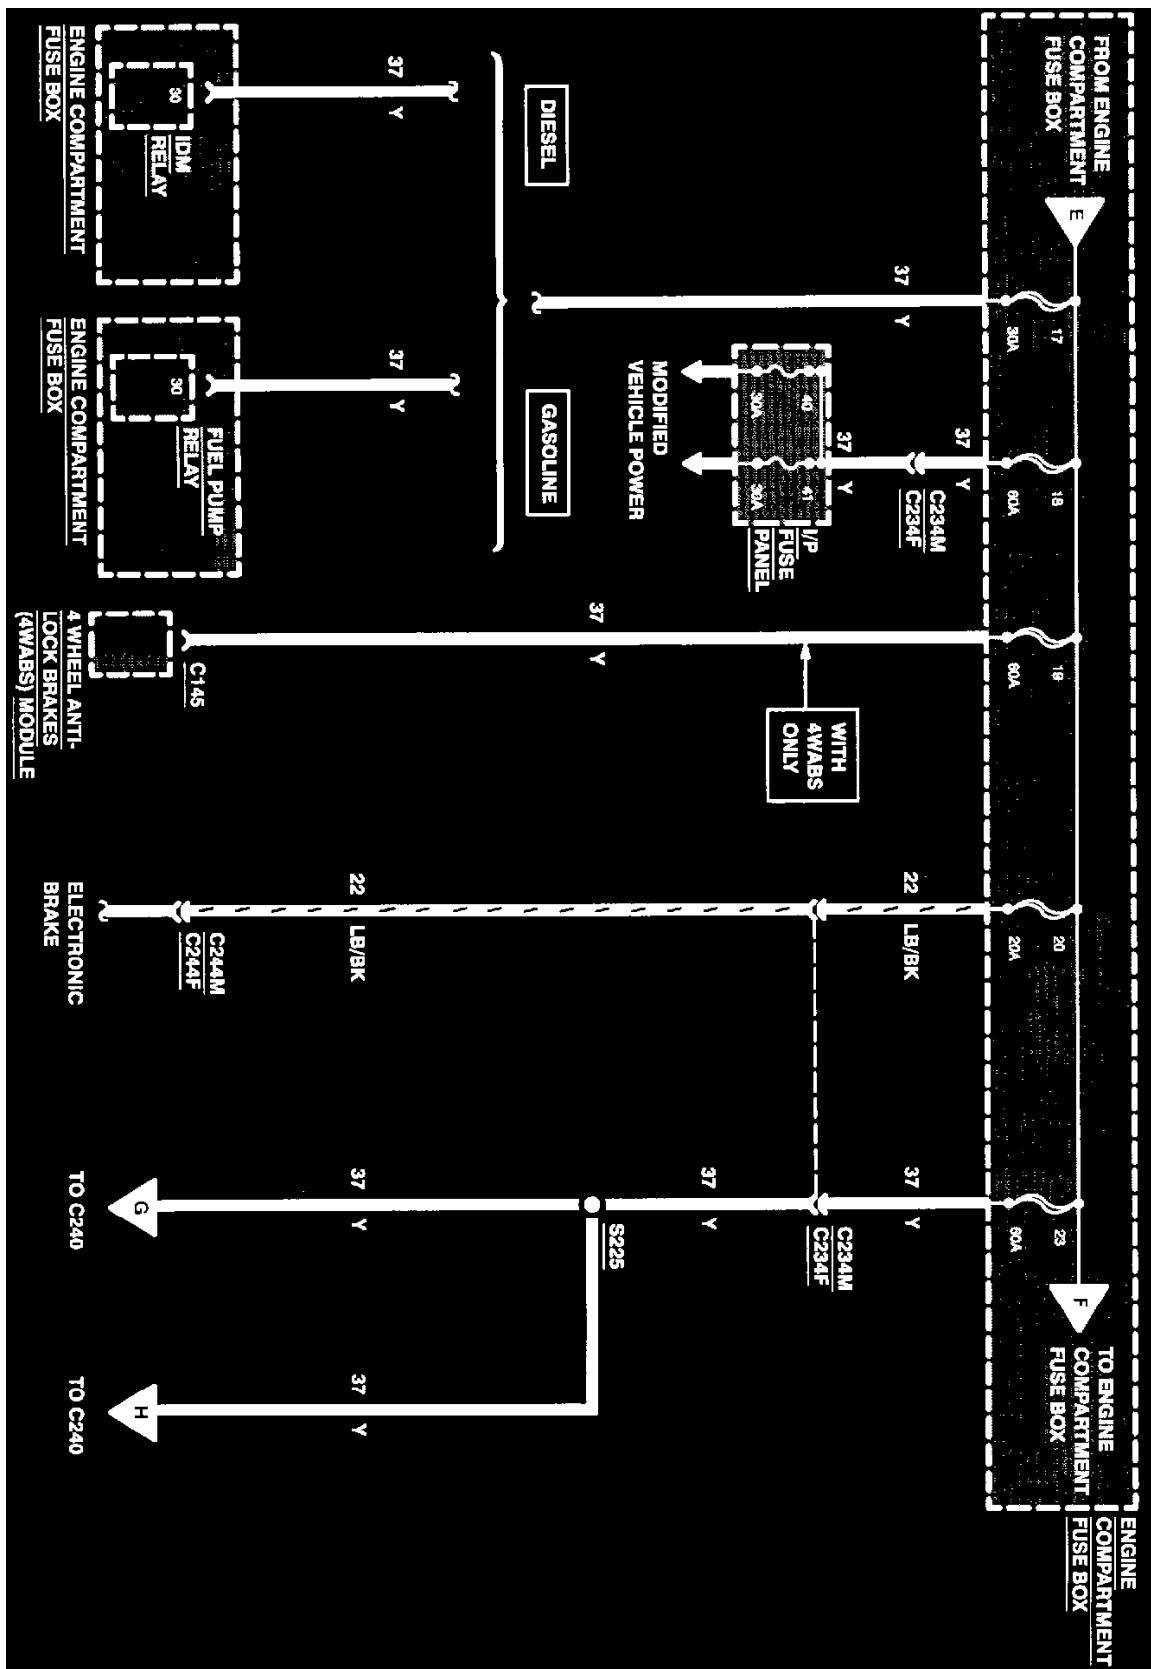


Power Distribution

Fuse 18

Fuse 18 - protects the following circuits:


- ^ Instrument Panel (I/P) Fuse 40
- ^ I/P Fuse 41

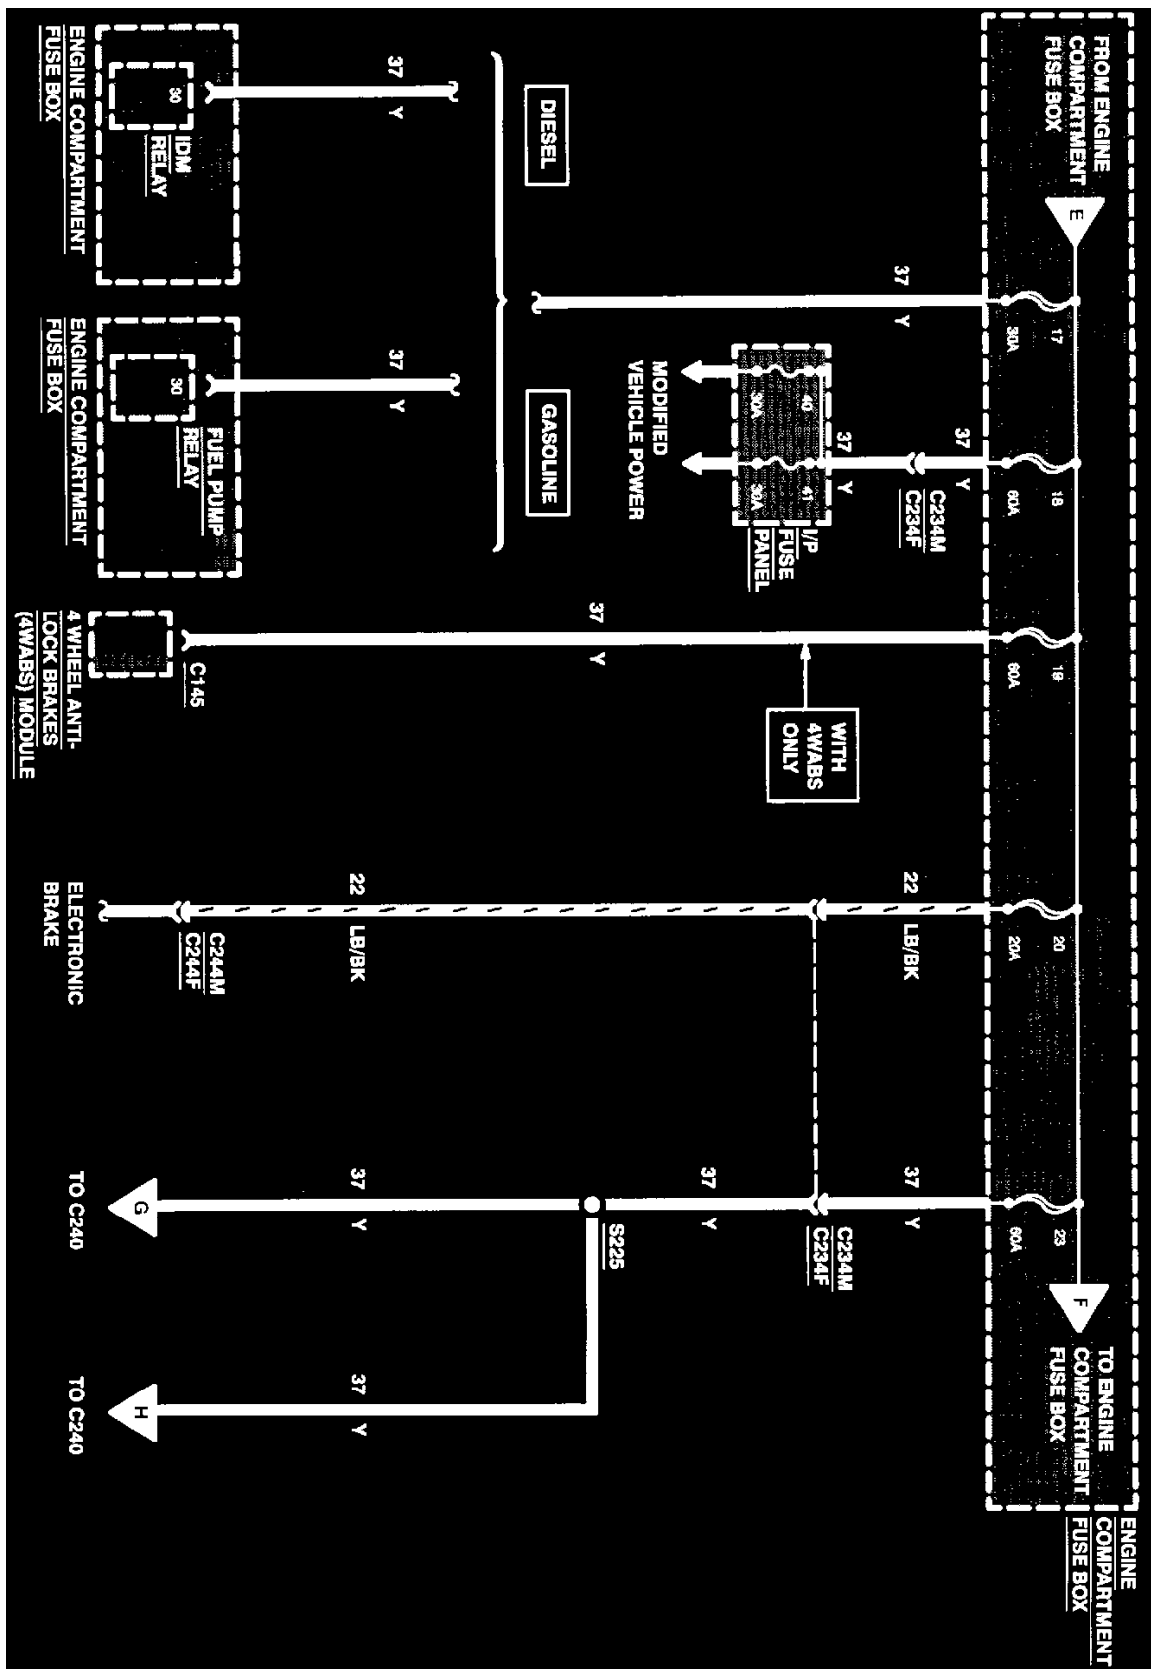

Power Distribution

Fuse 19


Fuse 19 - protects the following circuits:
 ^ 4 Wheel Anti-Lock Brake System Module

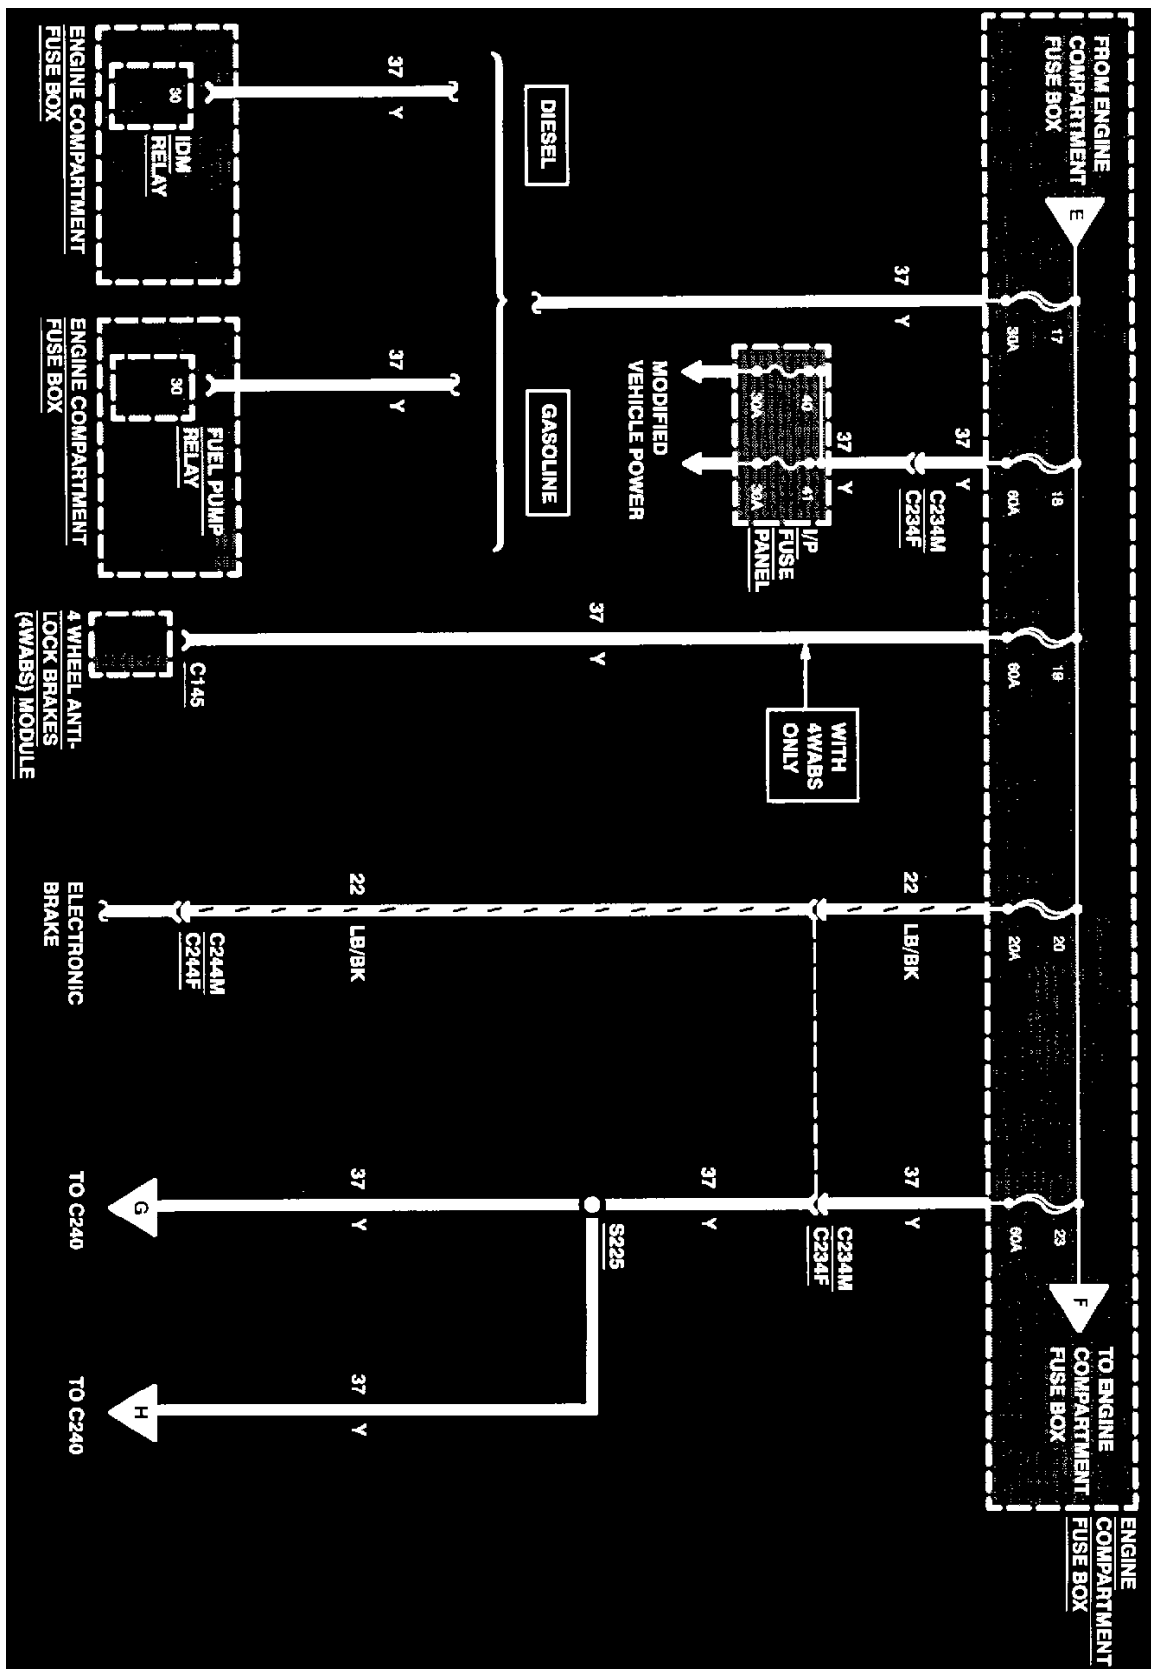

Power Distribution

Fuse 20

Fuse 20 - protects the following circuits:
 ^ Electric Brake Controller

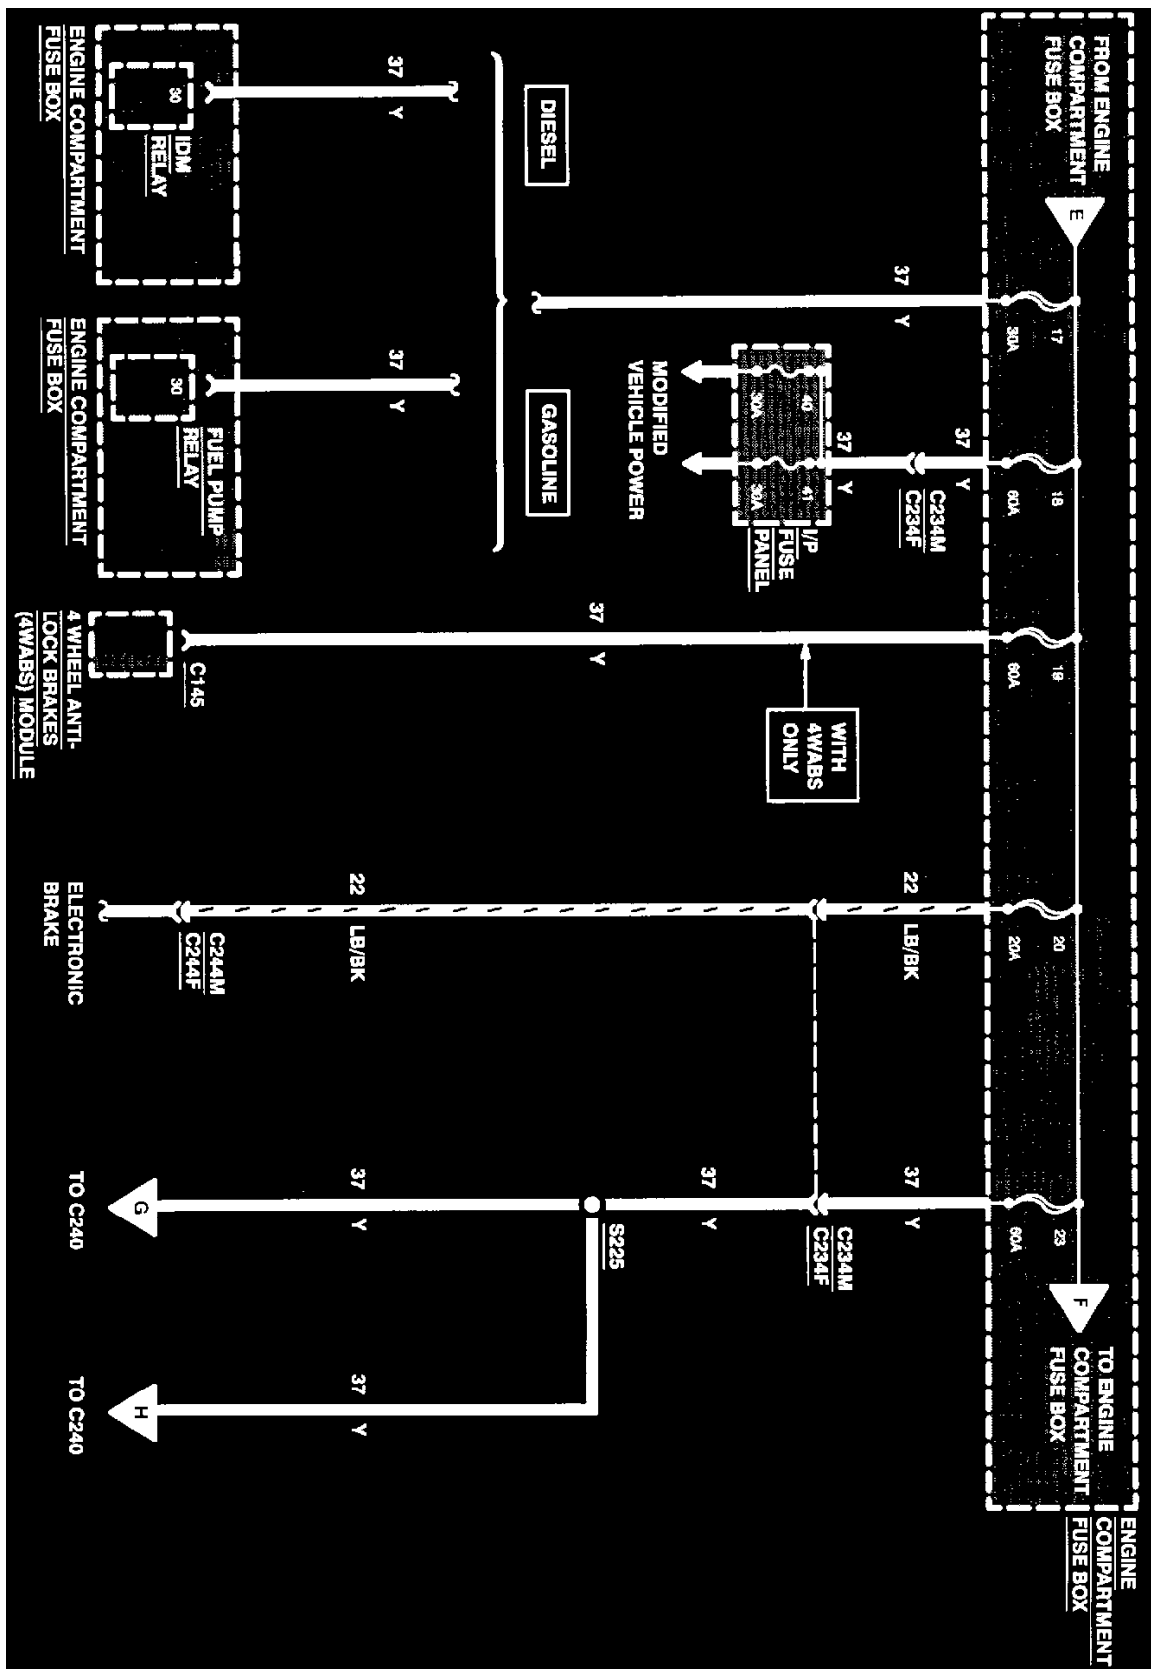


Power Distribution

Fuse 21

Fuse 21 - protects the following circuits:

- ^ Modified Vehicle Power

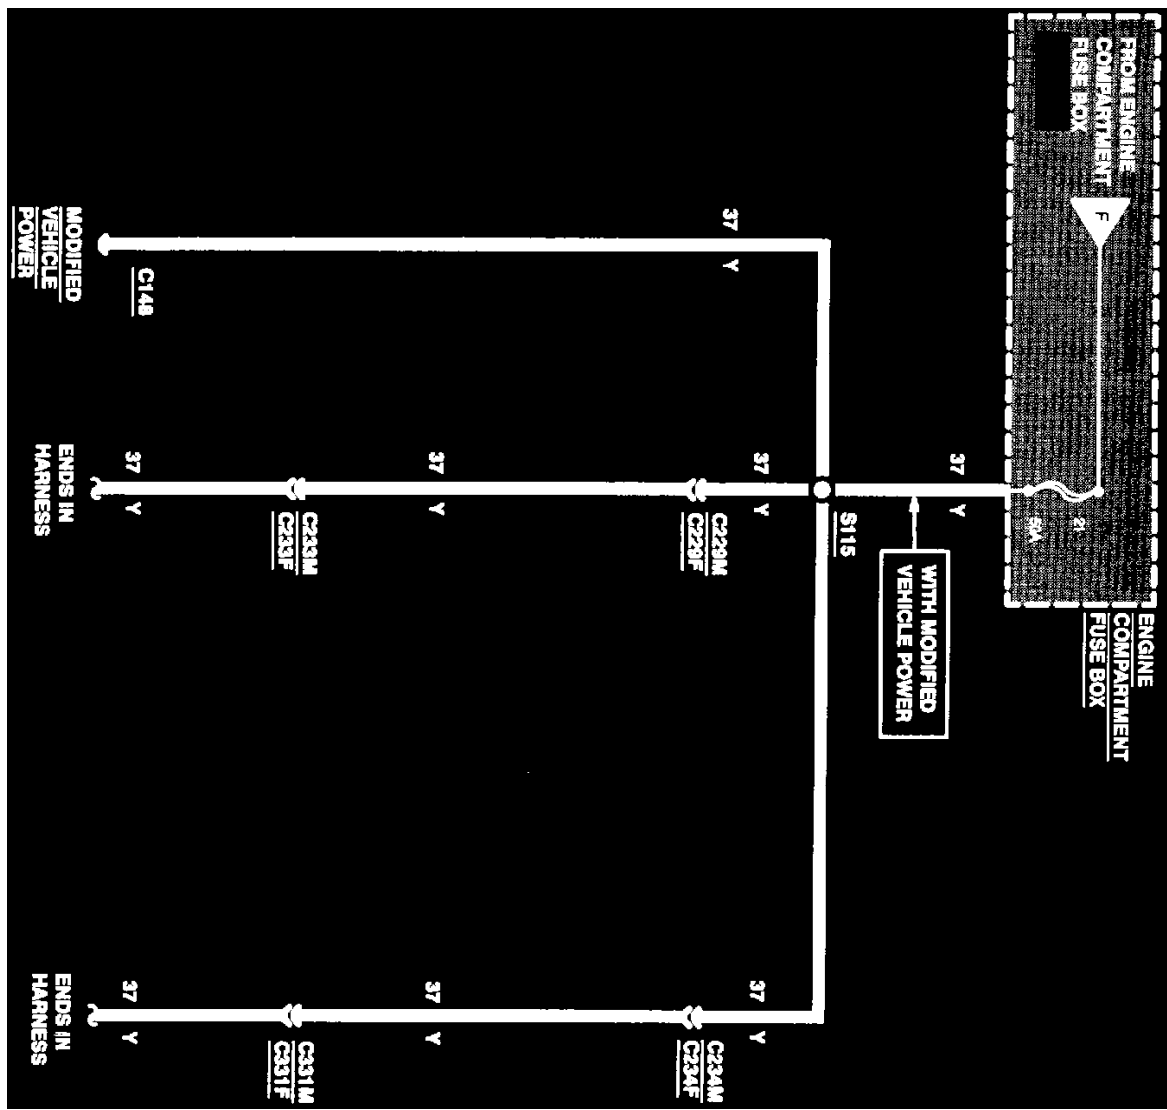


Power Distribution

Fuse 22

Fuse 22 - protects the following circuits:

- ^ Trailer Battery Charge Relay
- ^ Modified Vehicle

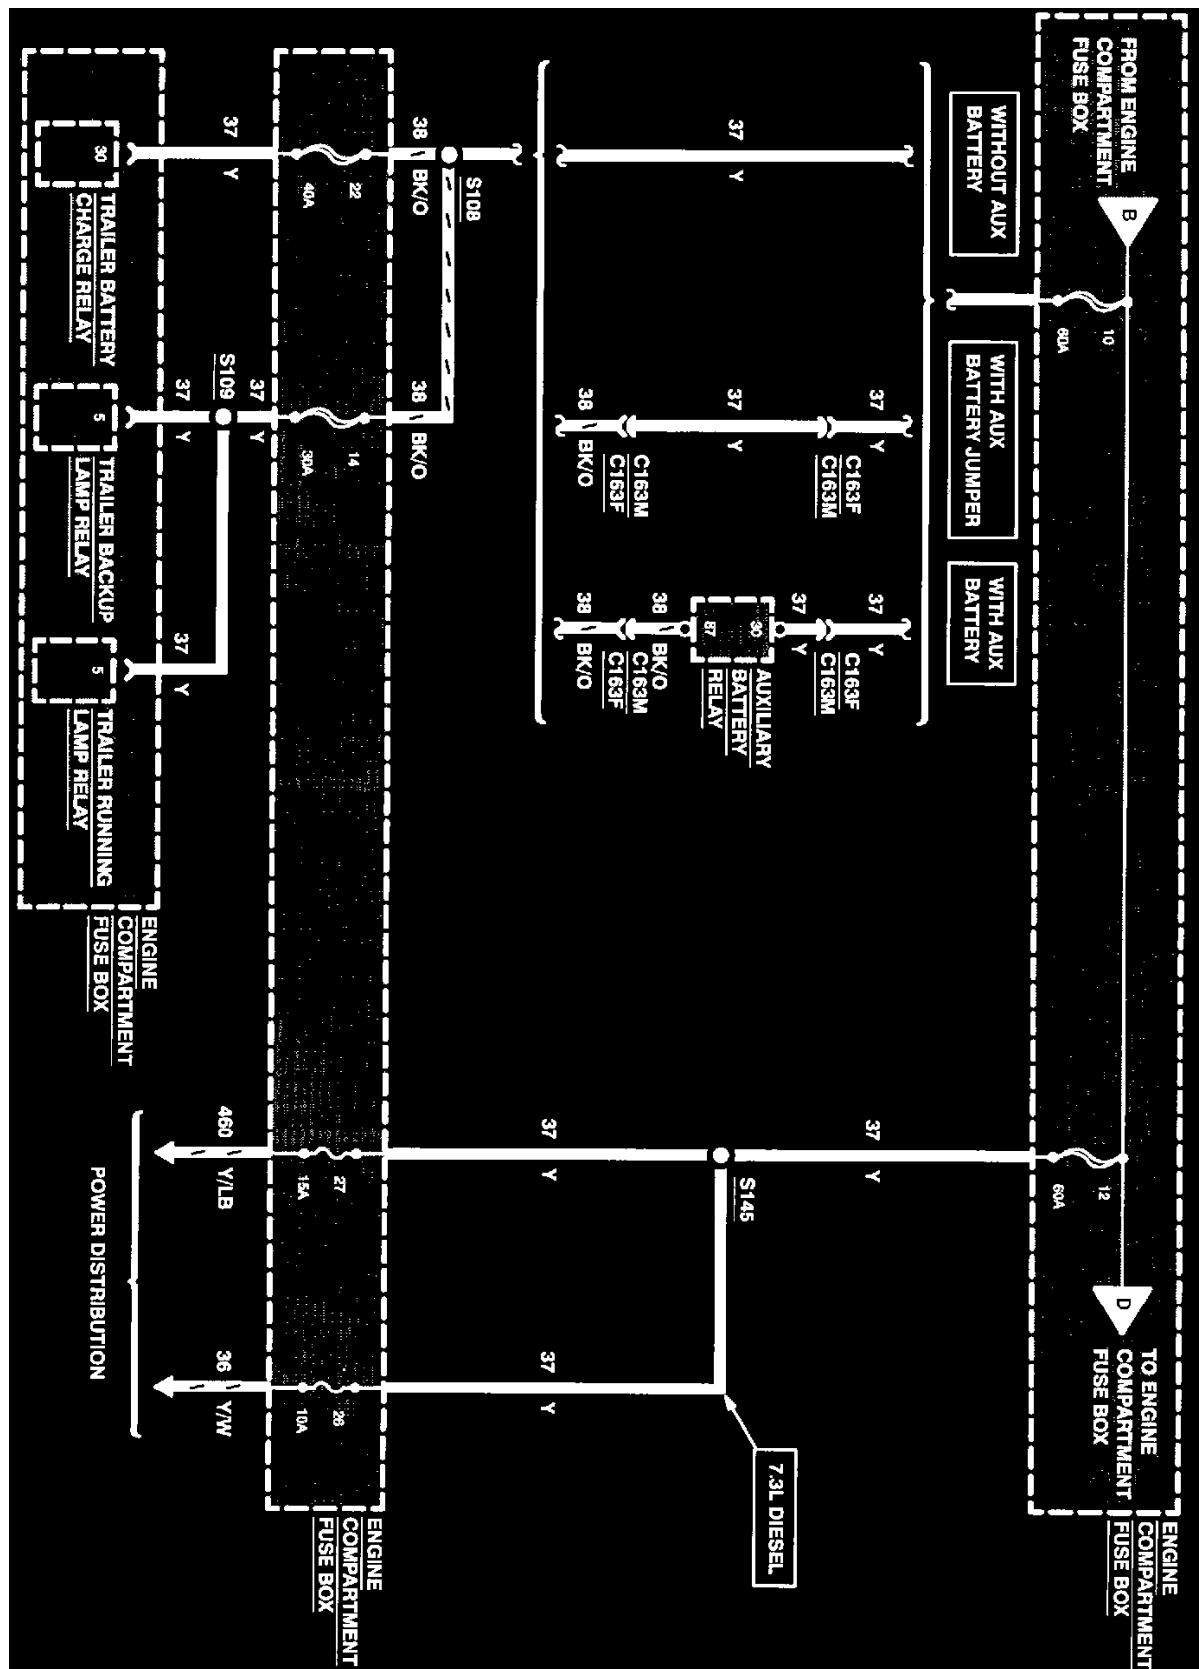


Power Distribution


Fuse 23

Fuse 23 - protects the following circuits:

- ^ Ignition Switch

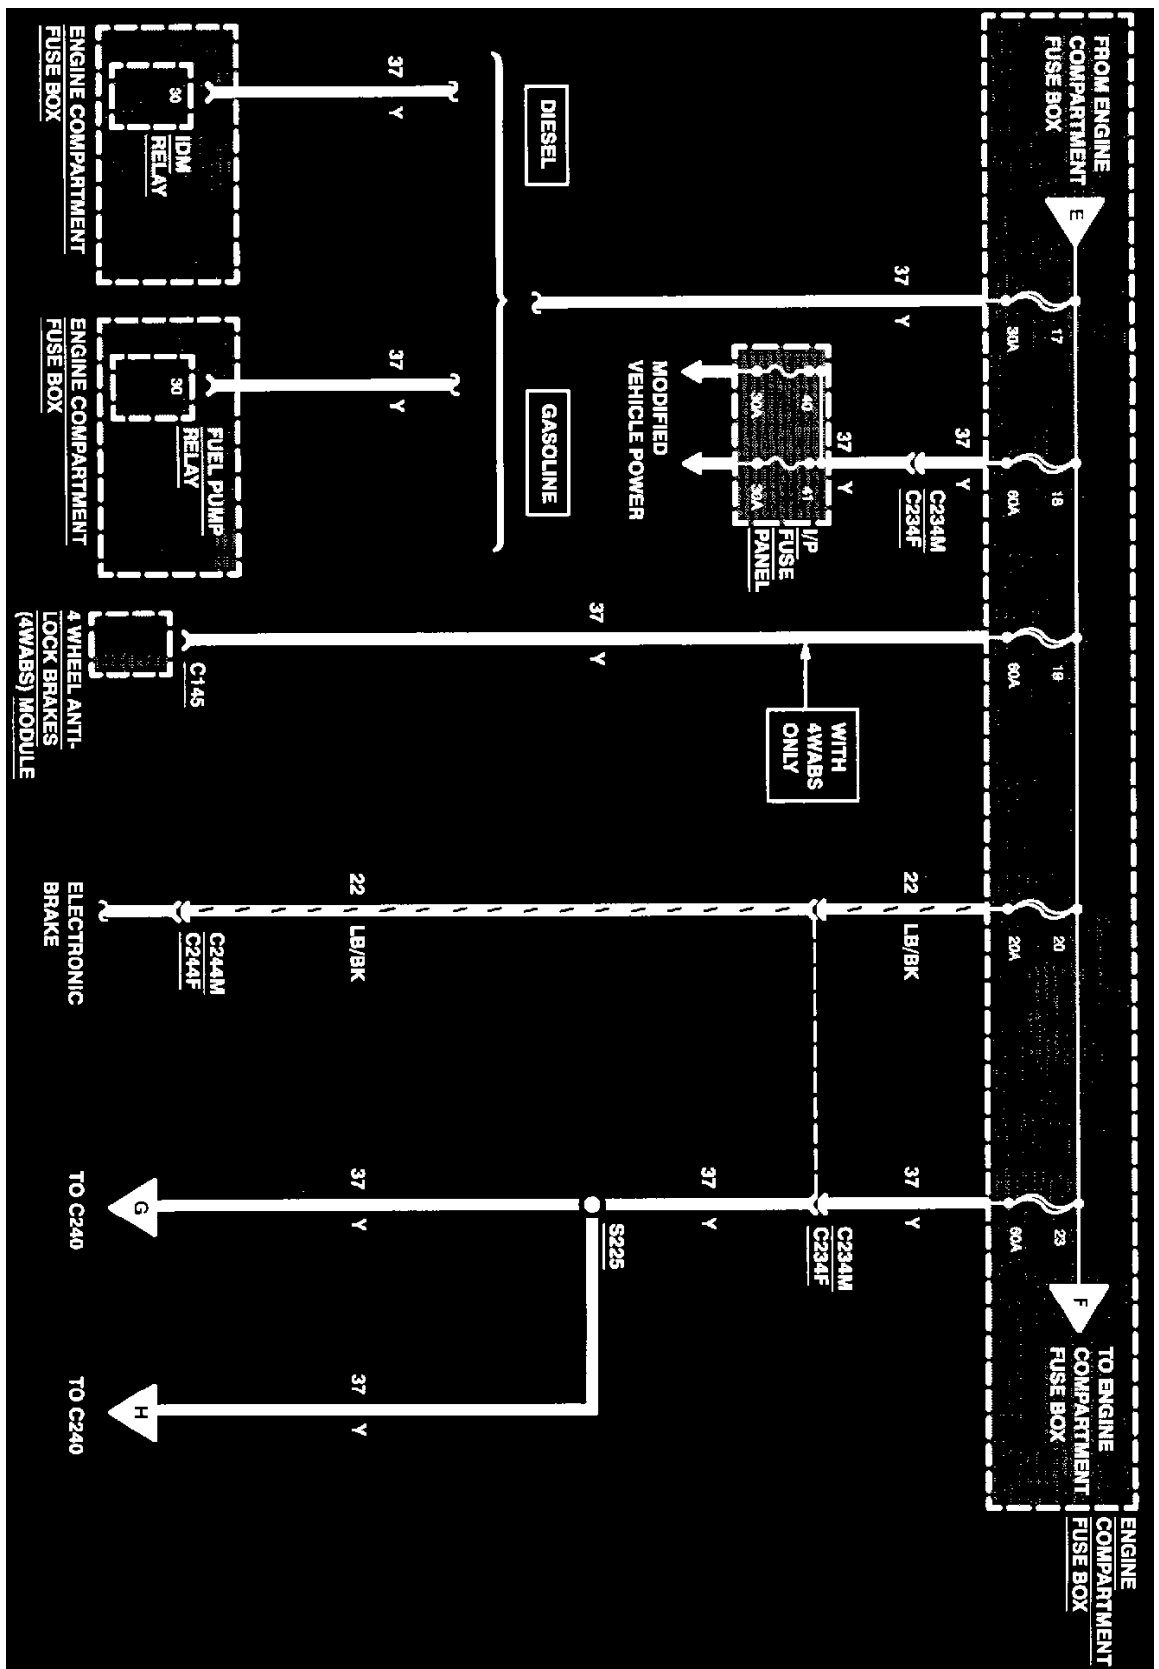

Power Distribution

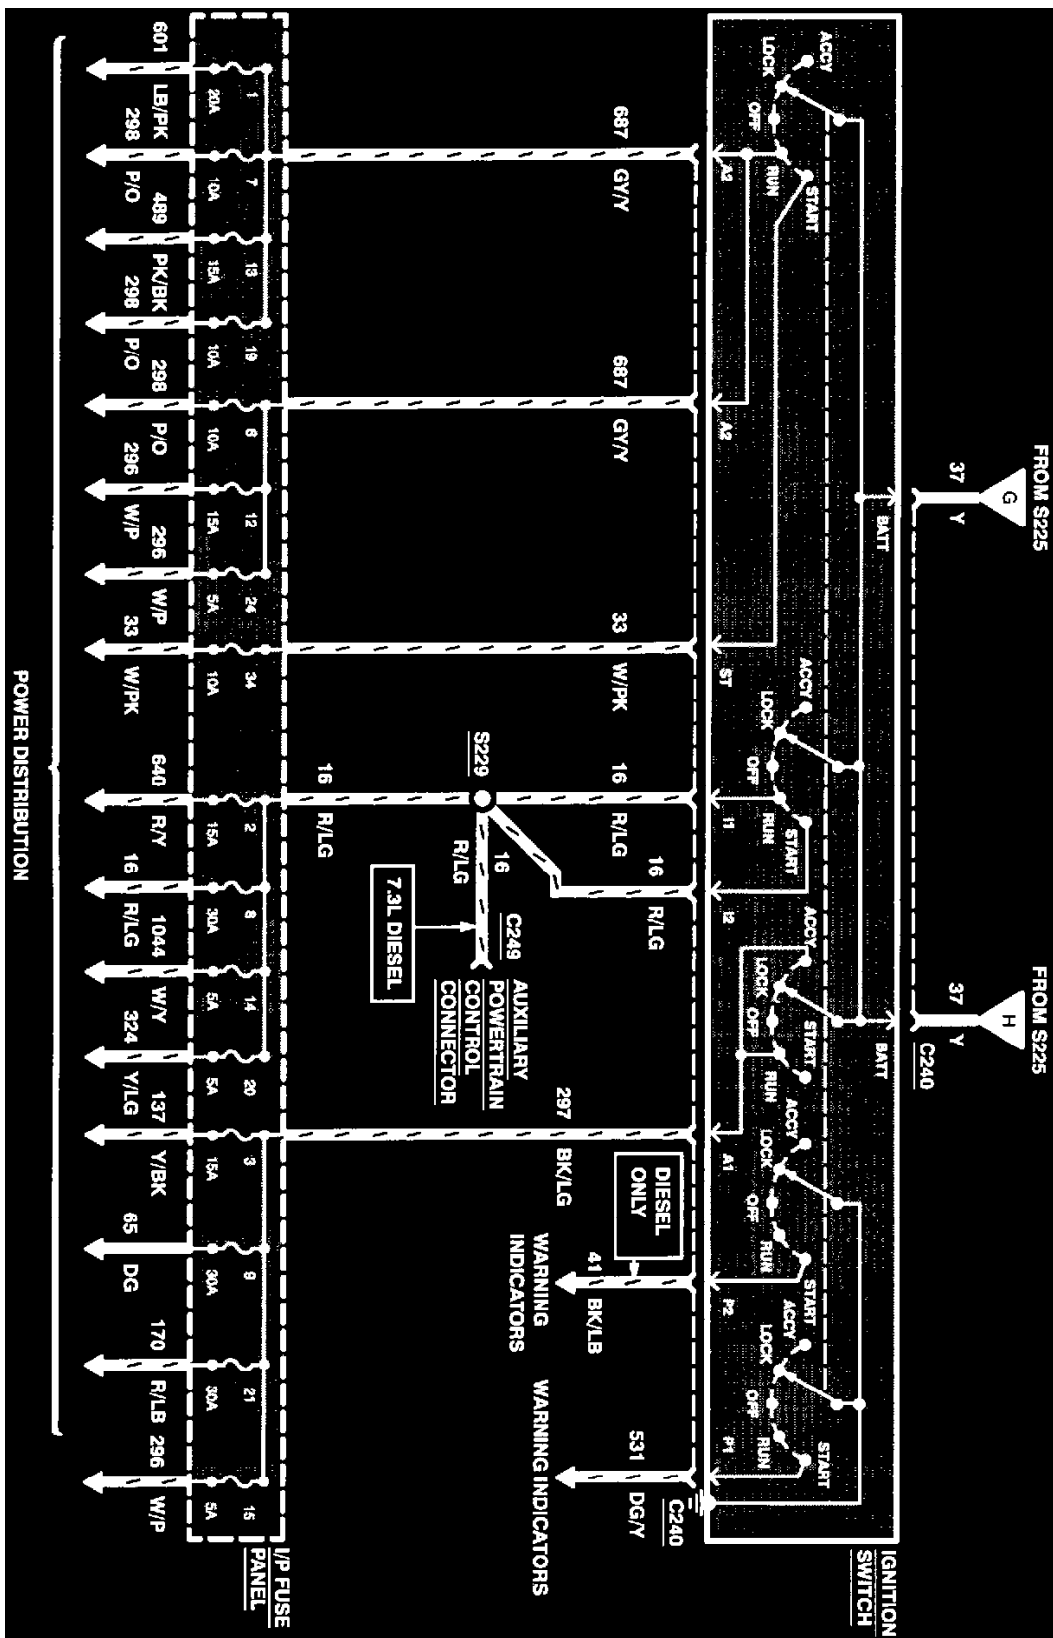


Power Distribution


Fuse 26

Fuse 26 - protects the following circuits:

- ^ Generator/Voltage Regulator

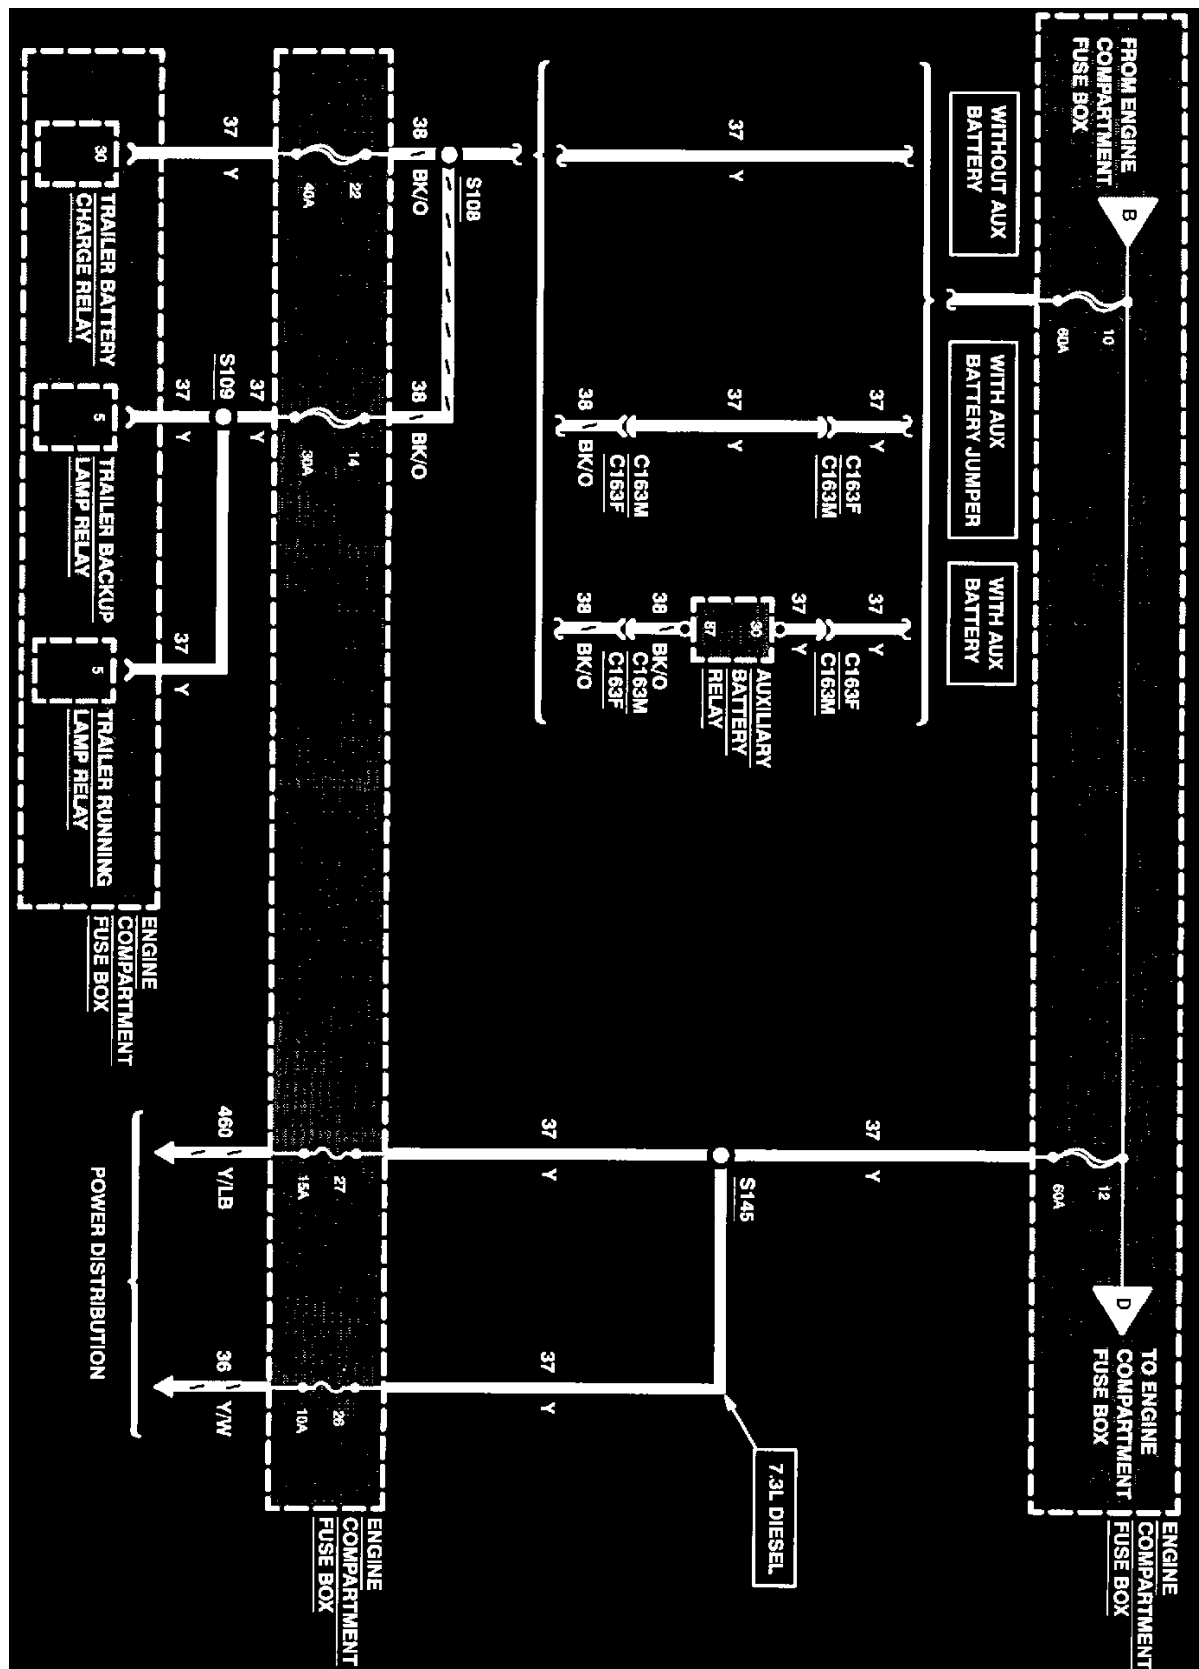

Power Distribution

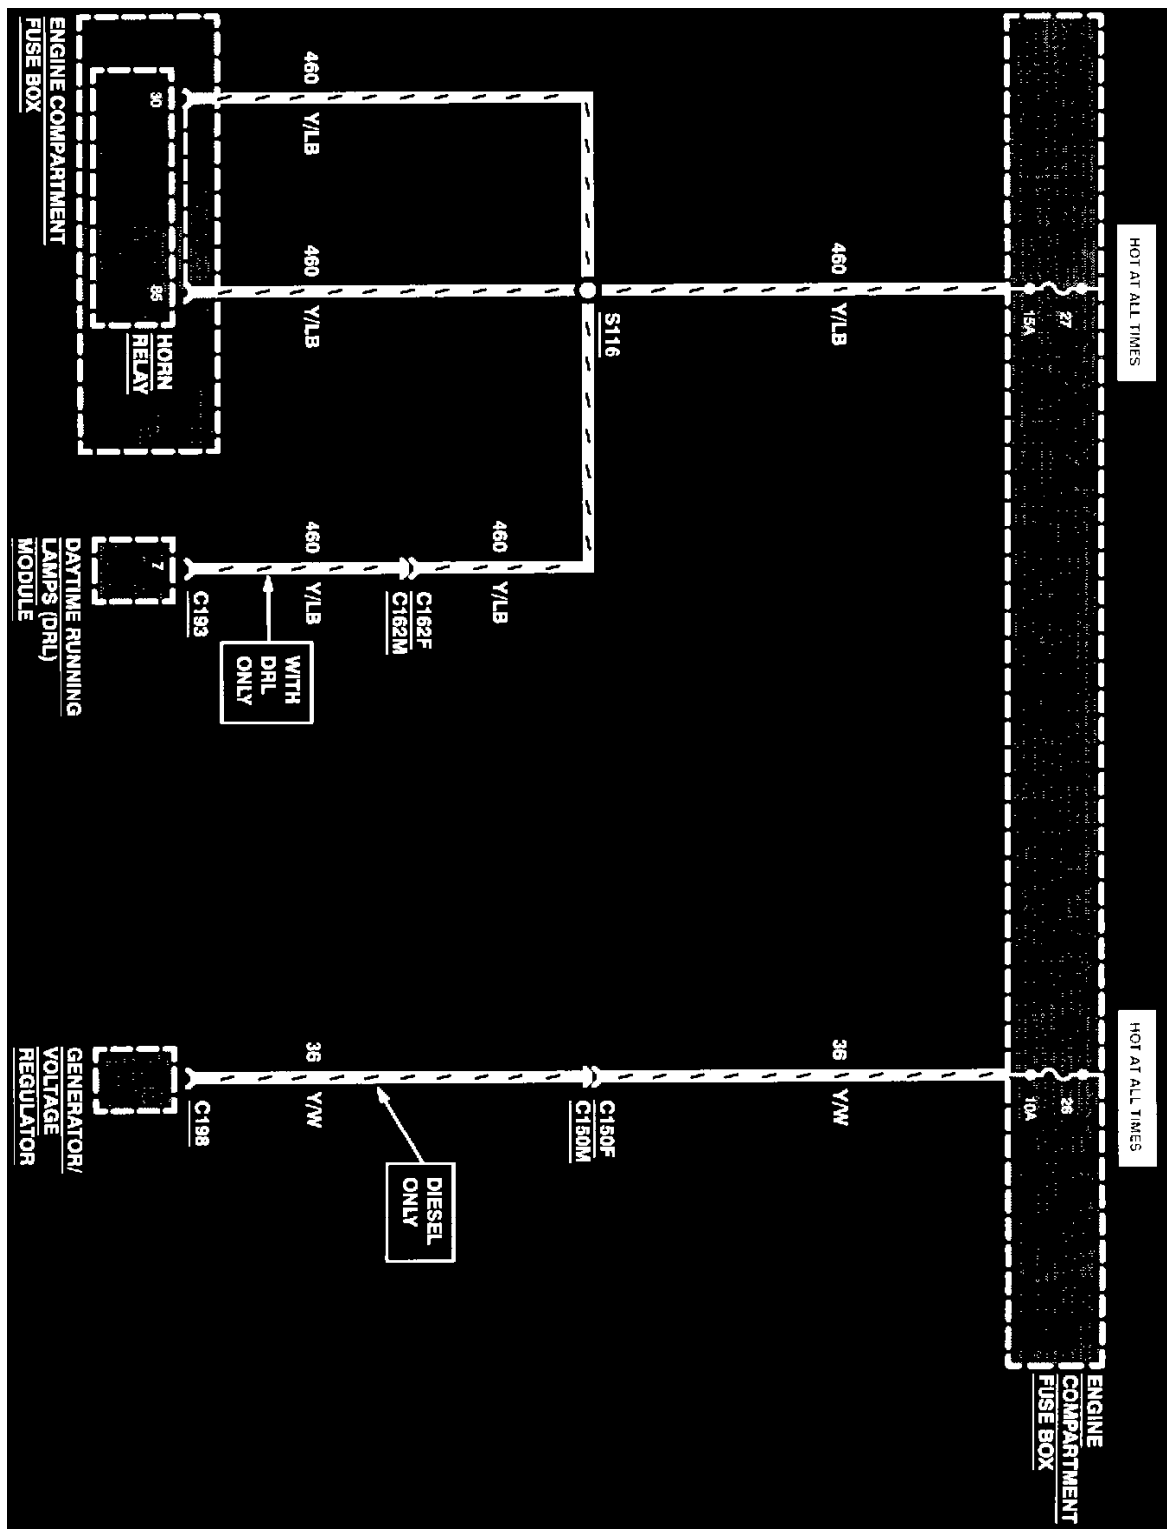


Power Distribution


Fuse 27

Fuse 27 - protects the following circuits:

- ^ Horn
- ^ Daytime Running Lamp Module

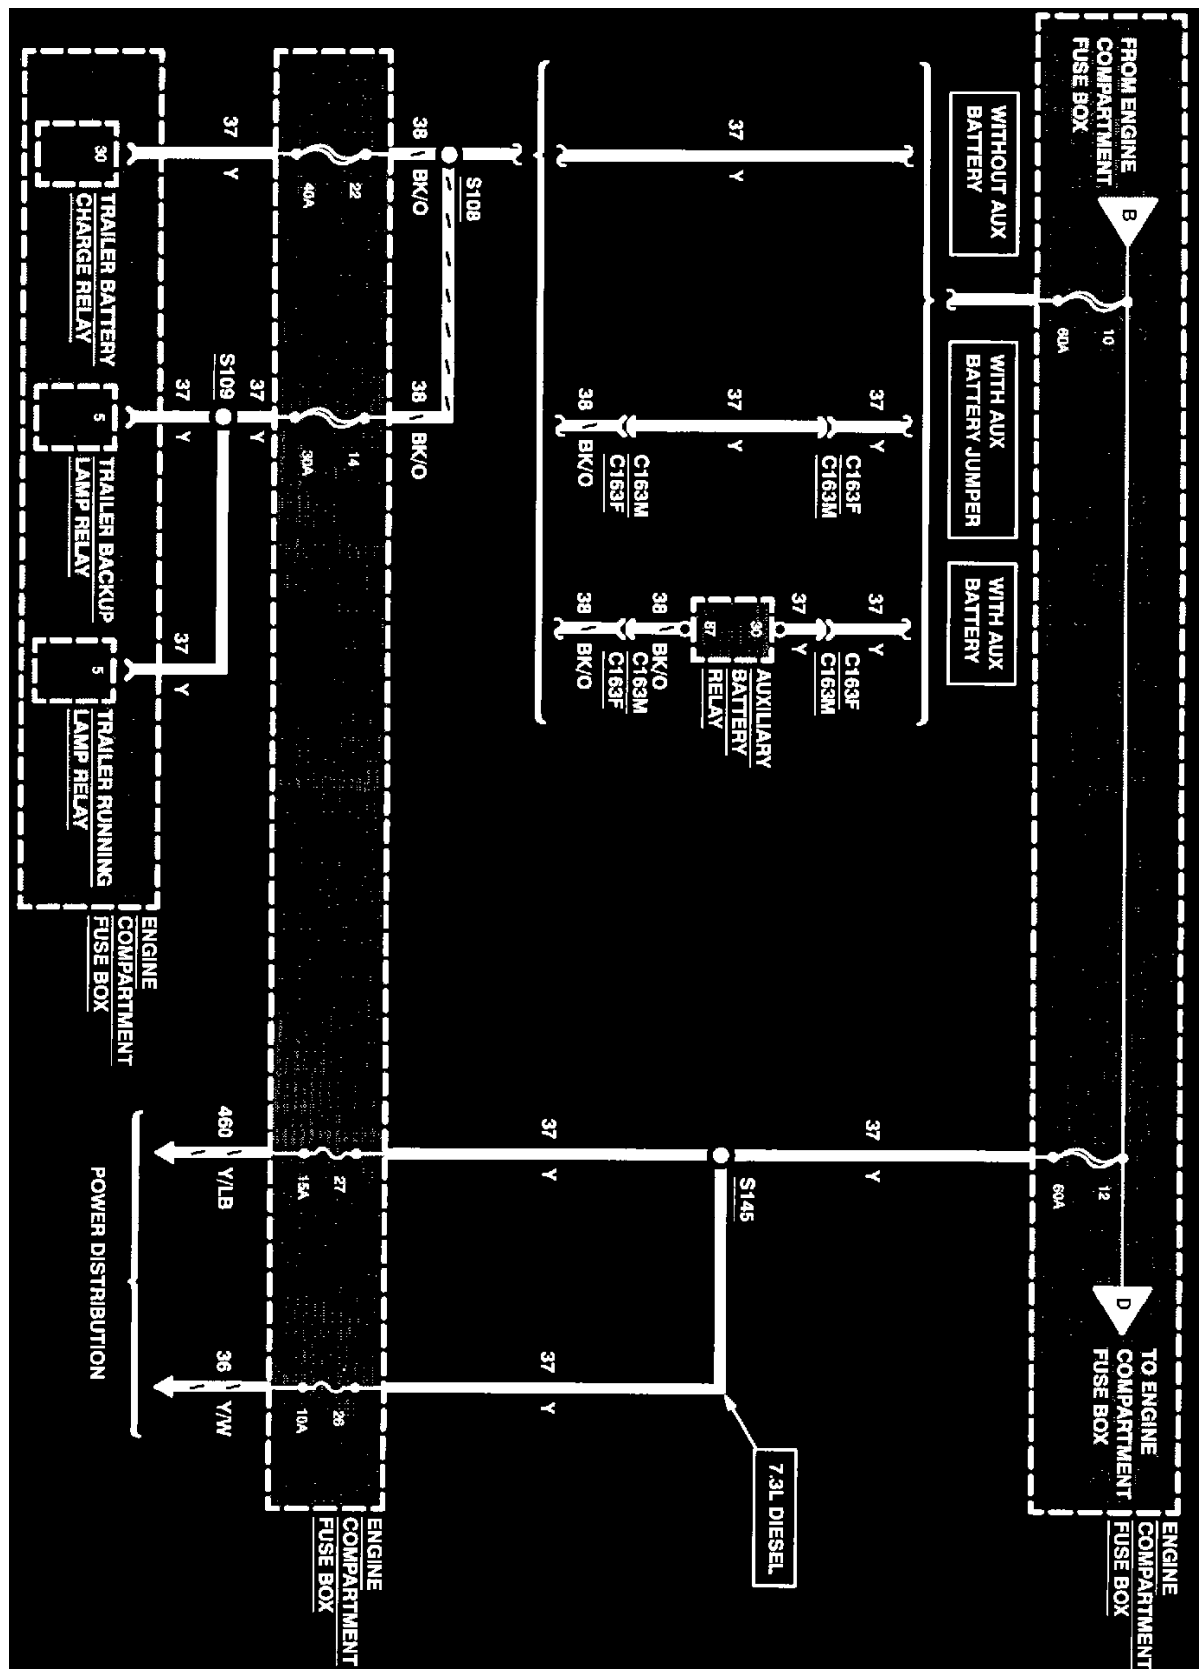

Power Distribution

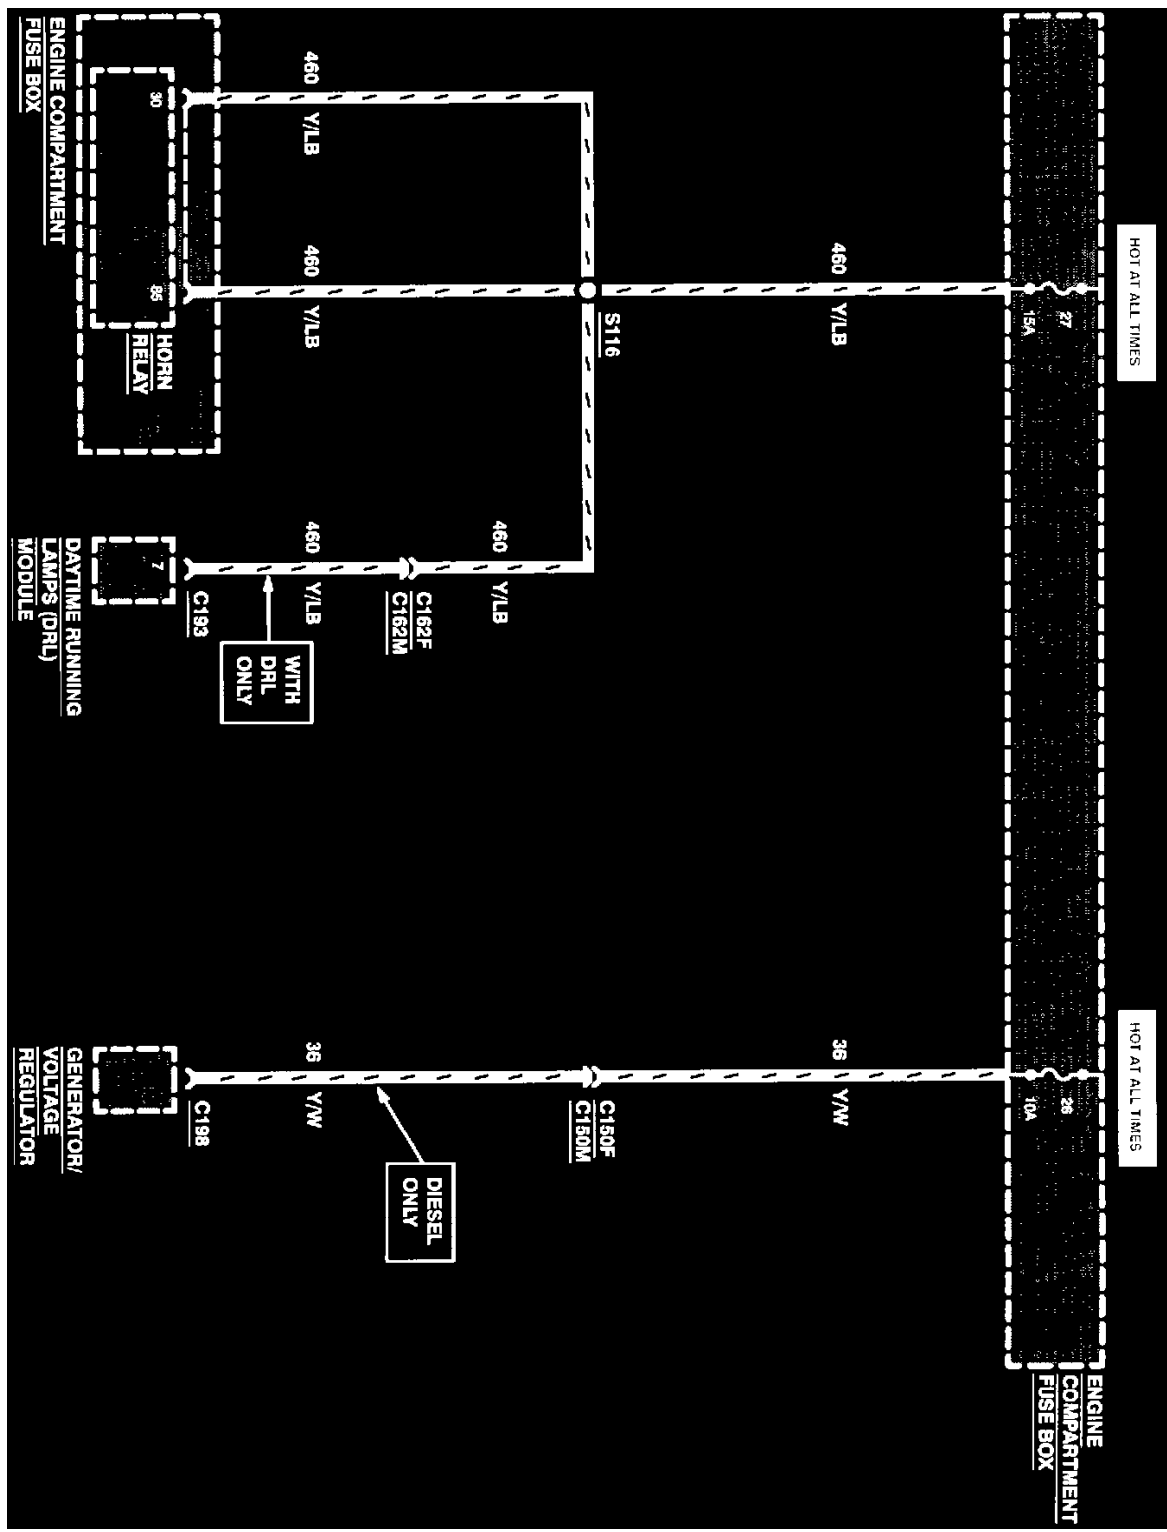

Power Distribution