

Fuse Block: Electrical Diagrams

Instrument Panel Fuse Panel

Circuit-to-Fuse Cross Reference


4 Wheel Anti-Lock Brake System Module	Fuse 1
A/C	Fuse 36
A/C Mode Switch	Fuse 13
Air Bag	Fuse 14
Air Bag Diagnostic Monitor	Fuse 19
Air Bag Monitor	Fuse 38
Alternator Lamps	Fuse 14
Anti-Lock Brakes System Relay	Fuse 2
Auxiliary Battery Relay	Fuse 12
Blend Door Actuator	Fuse 13
Brake Pressure Switch	Fuse 11
Brake Warning Diode/Resistor	Fuse 2
Cargo Lamp	Fuse 4
Cigar Lighter	Fuse 23
Cluster	Fuse 4 & 36
Courtesy Lamp Switches	Fuse 4
Daytime Running Lamps (DRL)	Fuse 30
DRL Module	Fuse 6 & 31
Data Link Connector	Fuse 23
Diagnostic	Fuse 11
Dome Lamp	Fuse 4
External lamps	Fuse 10
Headlamps (High Beam Indicator)	Fuse 30
Ignition Coil	Fuse 8
Illuminated Entry	Fuse 4
Illuminated Entry Module	Fuse 24
Illumination	Fuse 36
Instrument Cluster	Fuse 2 & 14
Instrument Panel Power Point	Fuse 28
Left Headlamp (Low Beam)	Fuse 25
Main Light Switch	Fuse 3, 4 & 10
Memory Lock	Fuse 5
Modified Vehicle	Fuse 4 & 40
Multi-Function Switch	Fuse 7
Multi-Function Switch (Flash-to-pass)	Fuse 10
Multi-Function Switch (Hazards)	Fuse 11
Overdrive Cancel Switch	Fuse 20
PCM Diode	Fuse 8
PCM Power Relay	Fuse 8
Power Lock Switches	Fuse 5
Power Locks (With Remote Keyless Entry (RKE))	Fuse 4
Power Mirrors	Fuse 4
Power Seats	Fuse 16
Power Windows	Fuse 21
RRKE Module	Fuse 5
Radio Capacitors	Fuse 8
Radio Sensor	Fuse 3
Radio	Fuse 4 & 36
Rear Anti-Lock Brakes System (RABS) Module	Fuse 1
RABS	Fuse 11
Rear Radio Control	Fuse 2
RKE.....	Fuse 3
Right Headlamp (Low Beam)	Fuse 31
Shift Interlock	Fuse 6
Speed Control	Fuse 6
Steering Column Assembly	Fuse 36
Stop Switch	Fuse 11
Trailer Battery Charge Relay	Fuse 15
Transmission Range Sensor	Fuse 12 & 34
Warning Chime	Fuse 2 & 4

Windshield Wiper Motor Fuse 9
Wiper Control Module Fuse 9


Fuse 1

Fuse 1 - protects the following circuits:

- ^ Rear Anti-Lock Brakes System
- ^ 4 Wheel Anti-Lock Brake System Module

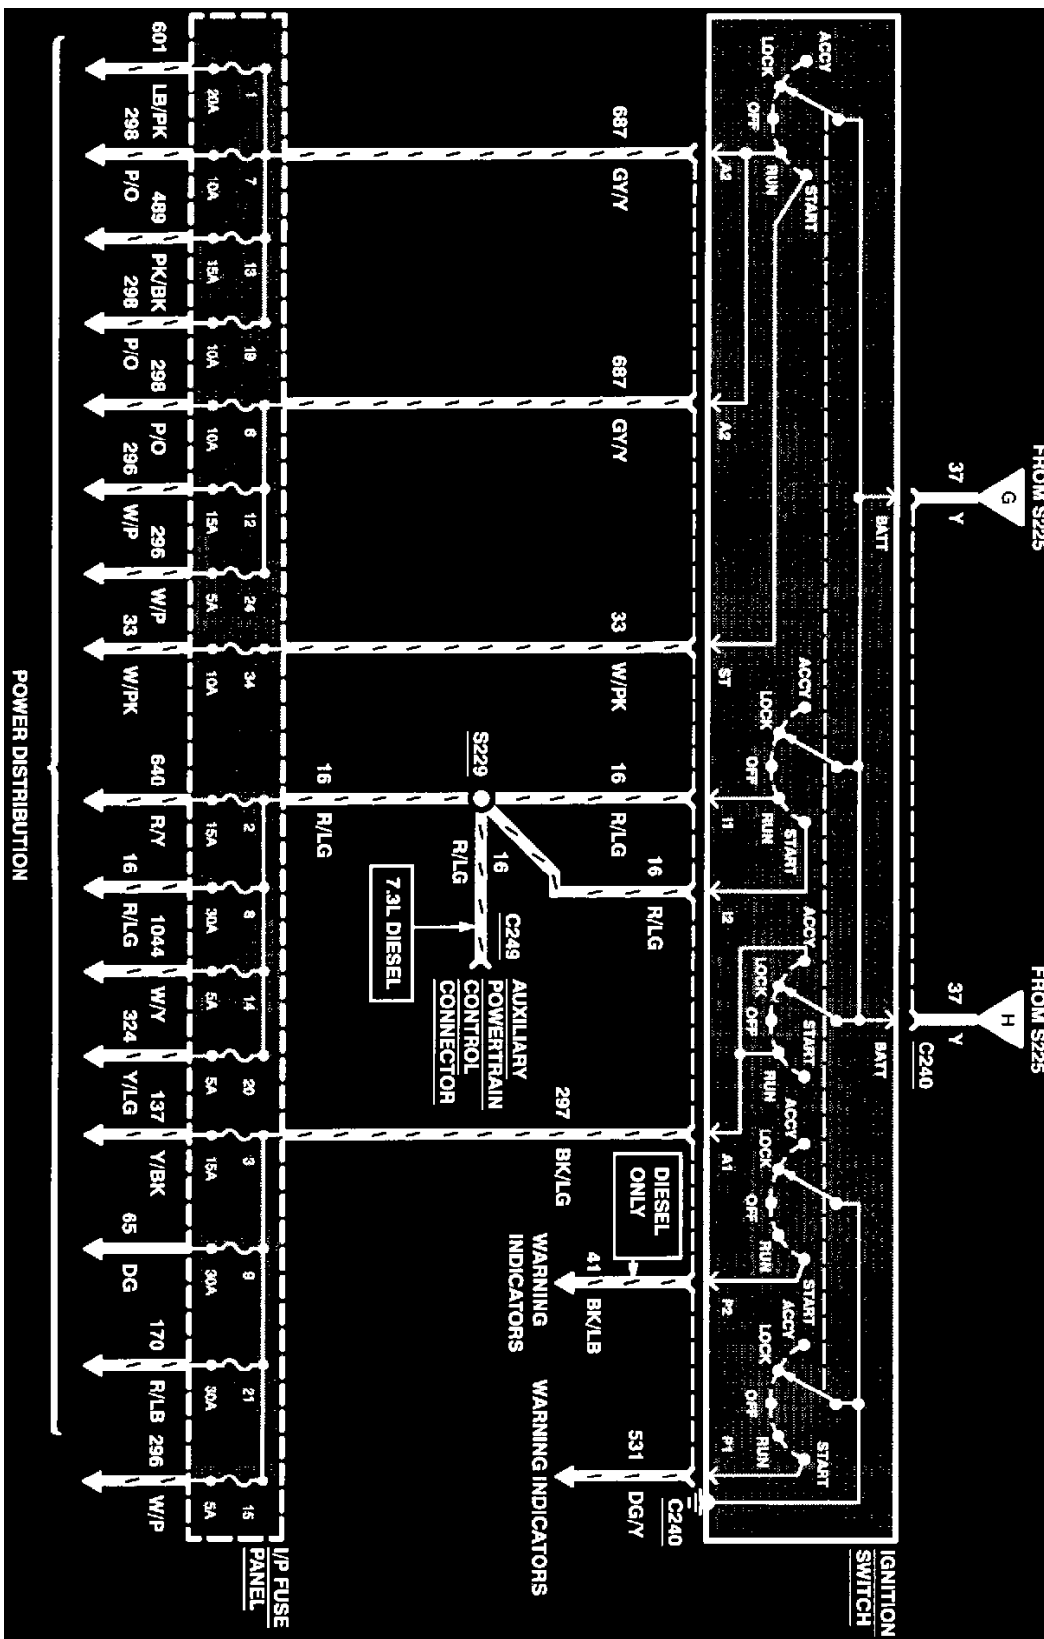

Power Distribution

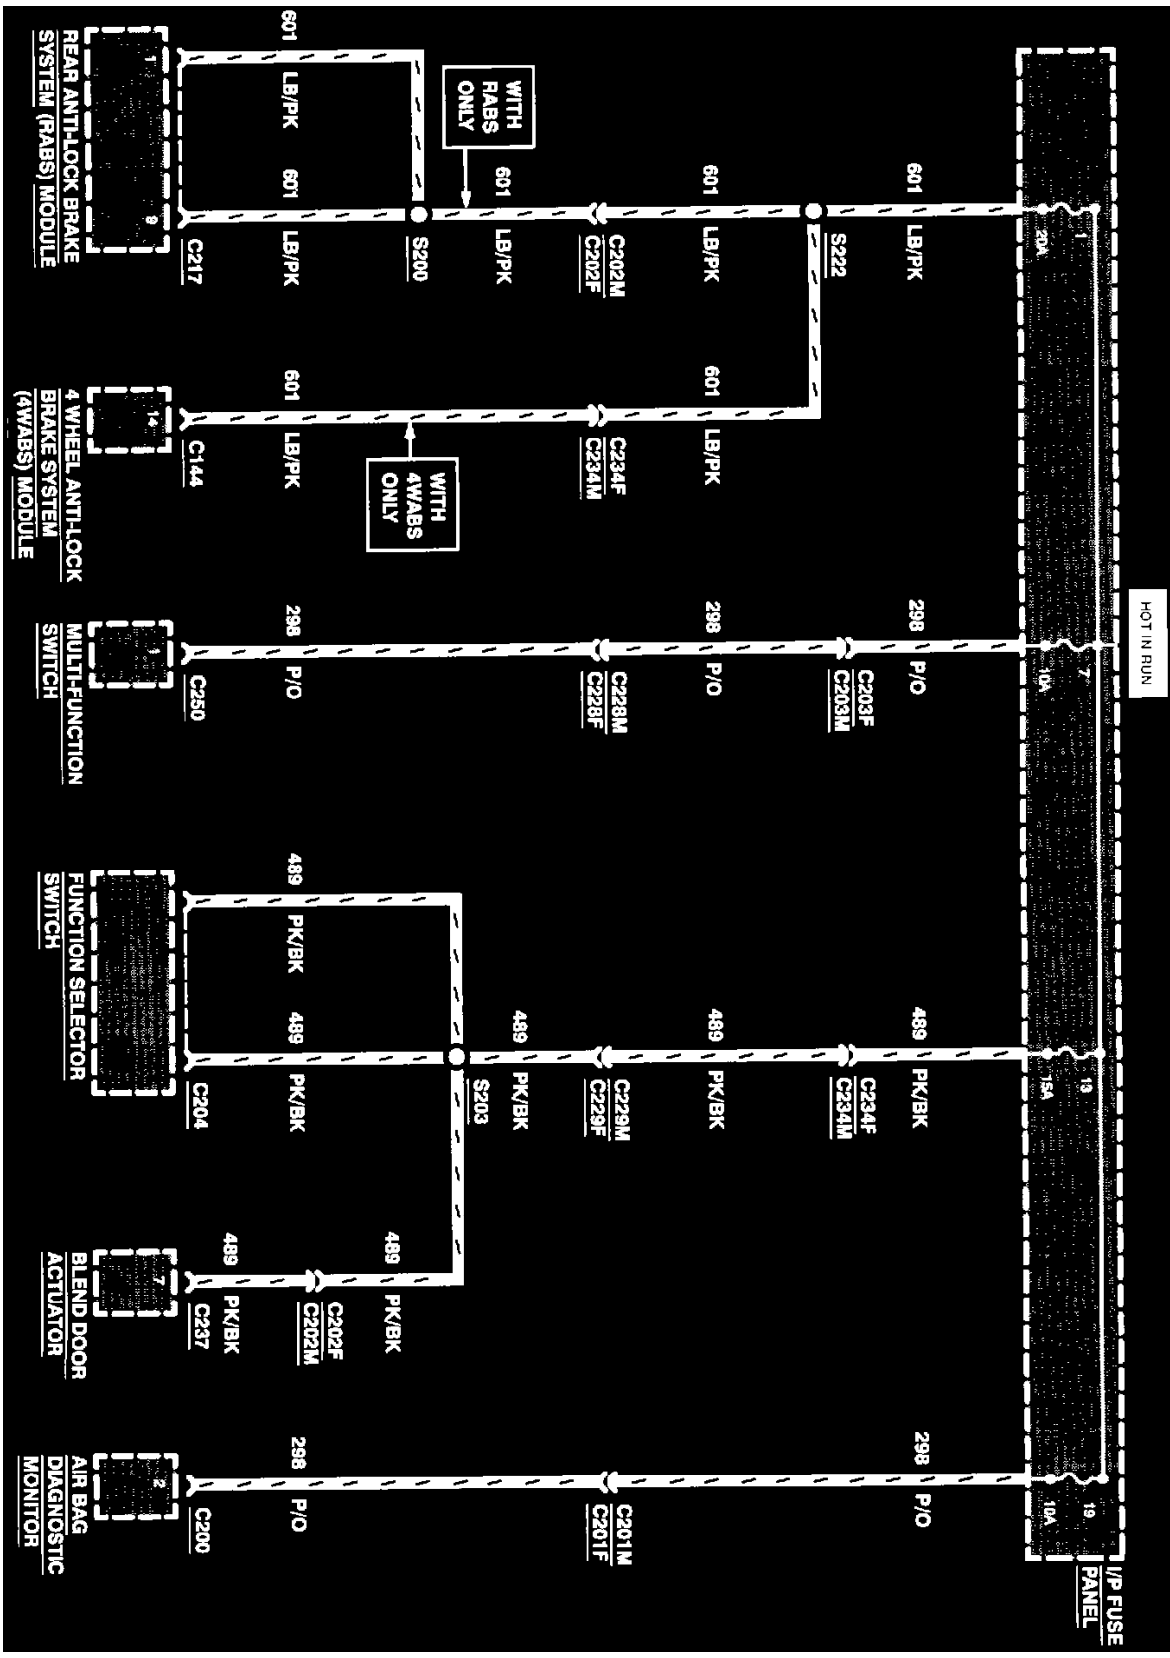


Power Distribution


Fuse 2

Fuse 2 - protects the following circuits:

- ^ Brake Warning Diode/Resistor
- ^ Instrument Cluster
- ^ Warning Chime
- ^ Anti-Lock Brakes System Relay

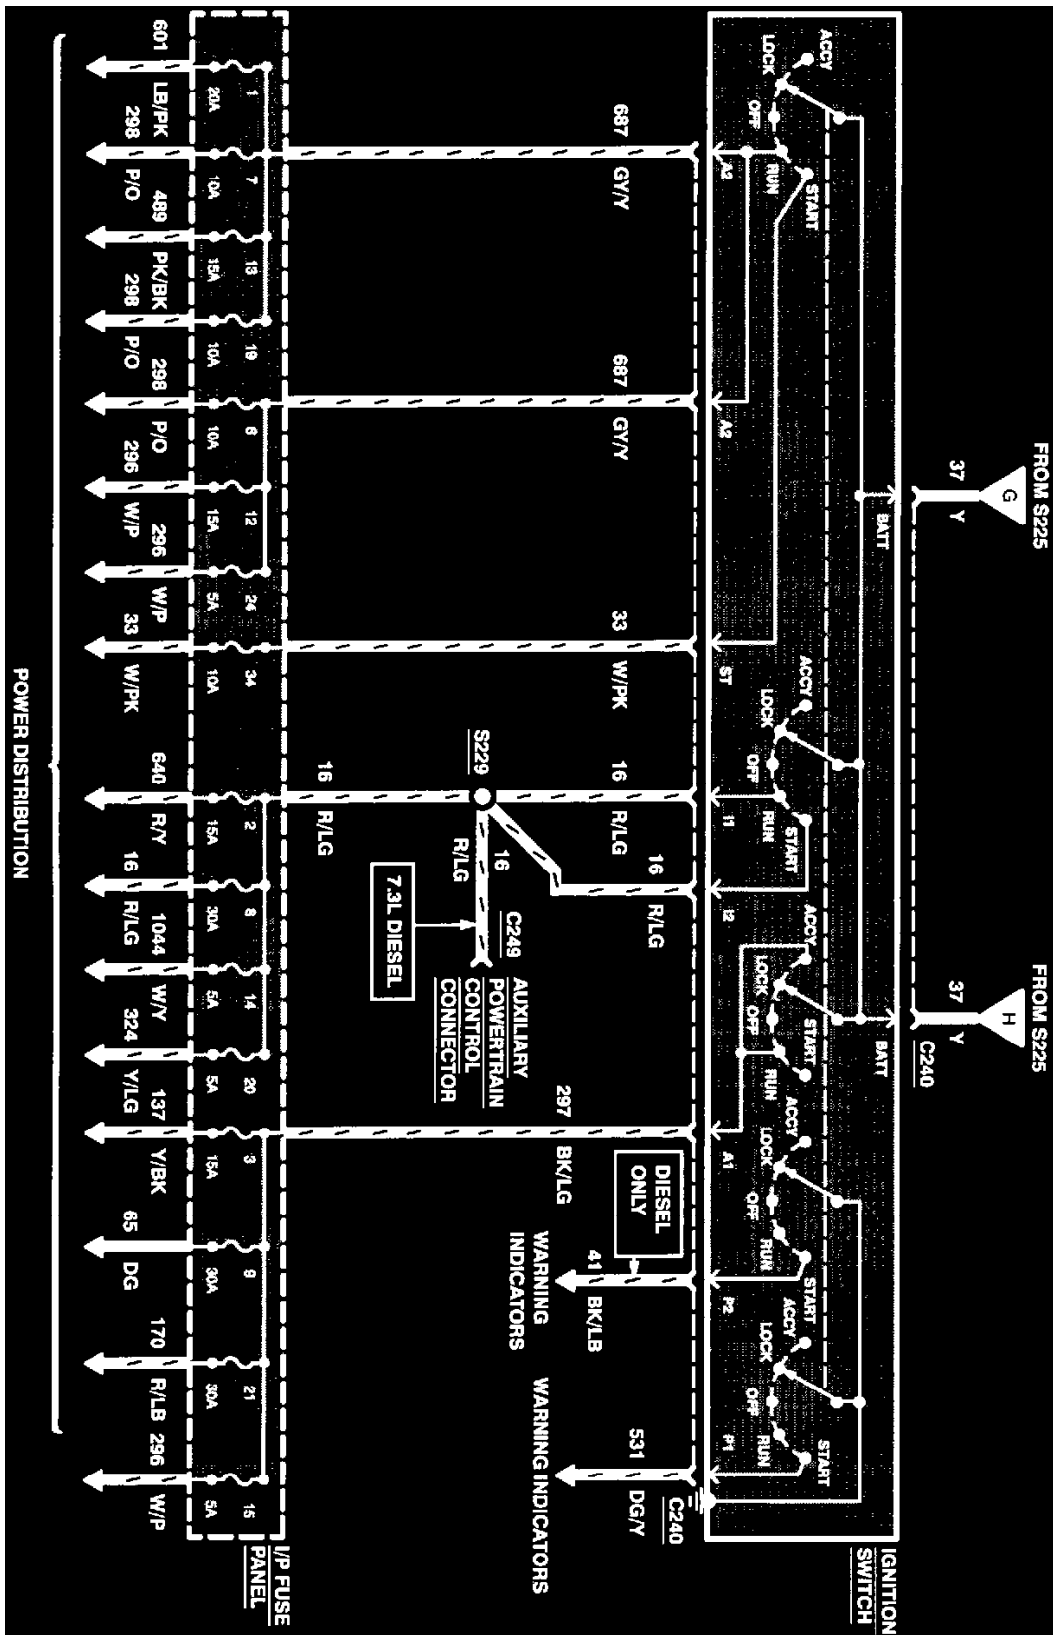

Power Distribution

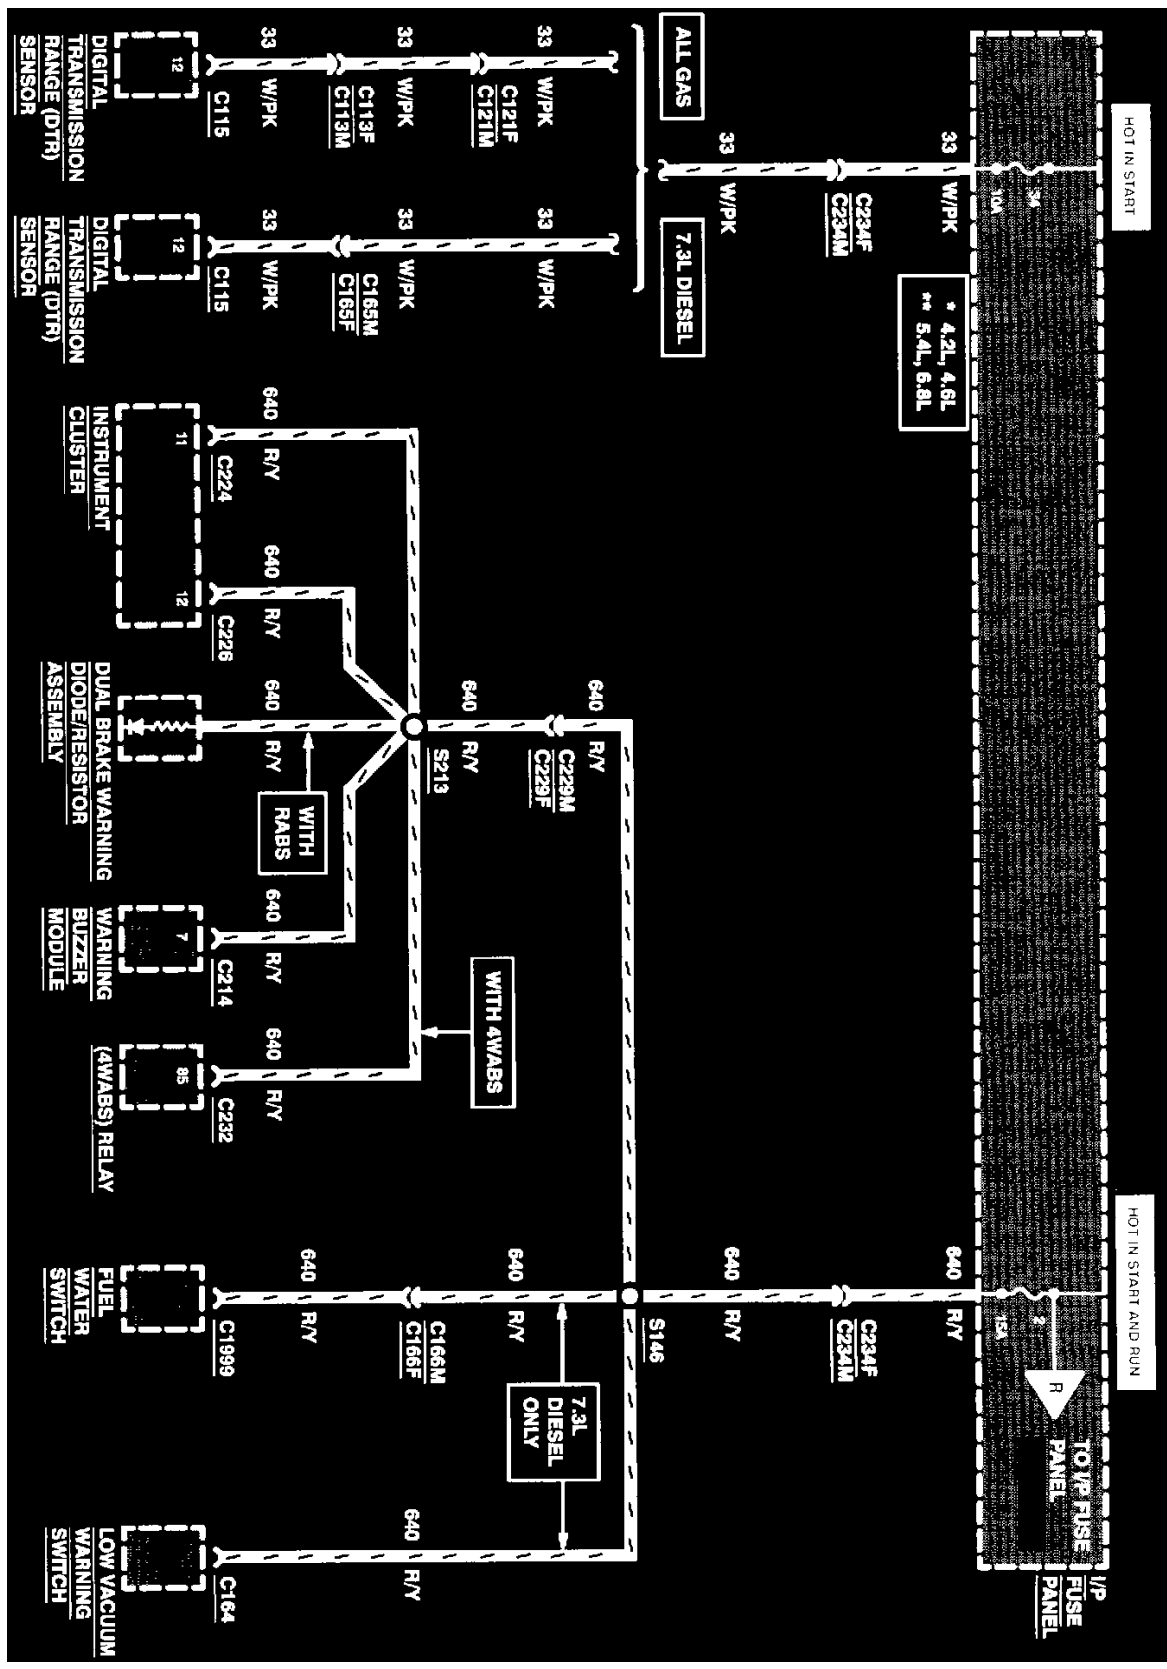


Power Distribution


Fuse 3

Fuse 3 - protects the following circuits:


- ^ Main Light Switch
- ^ Rear Radio Control
- ^ Remote Keyless Entry Module
- ^ Radio Sensor

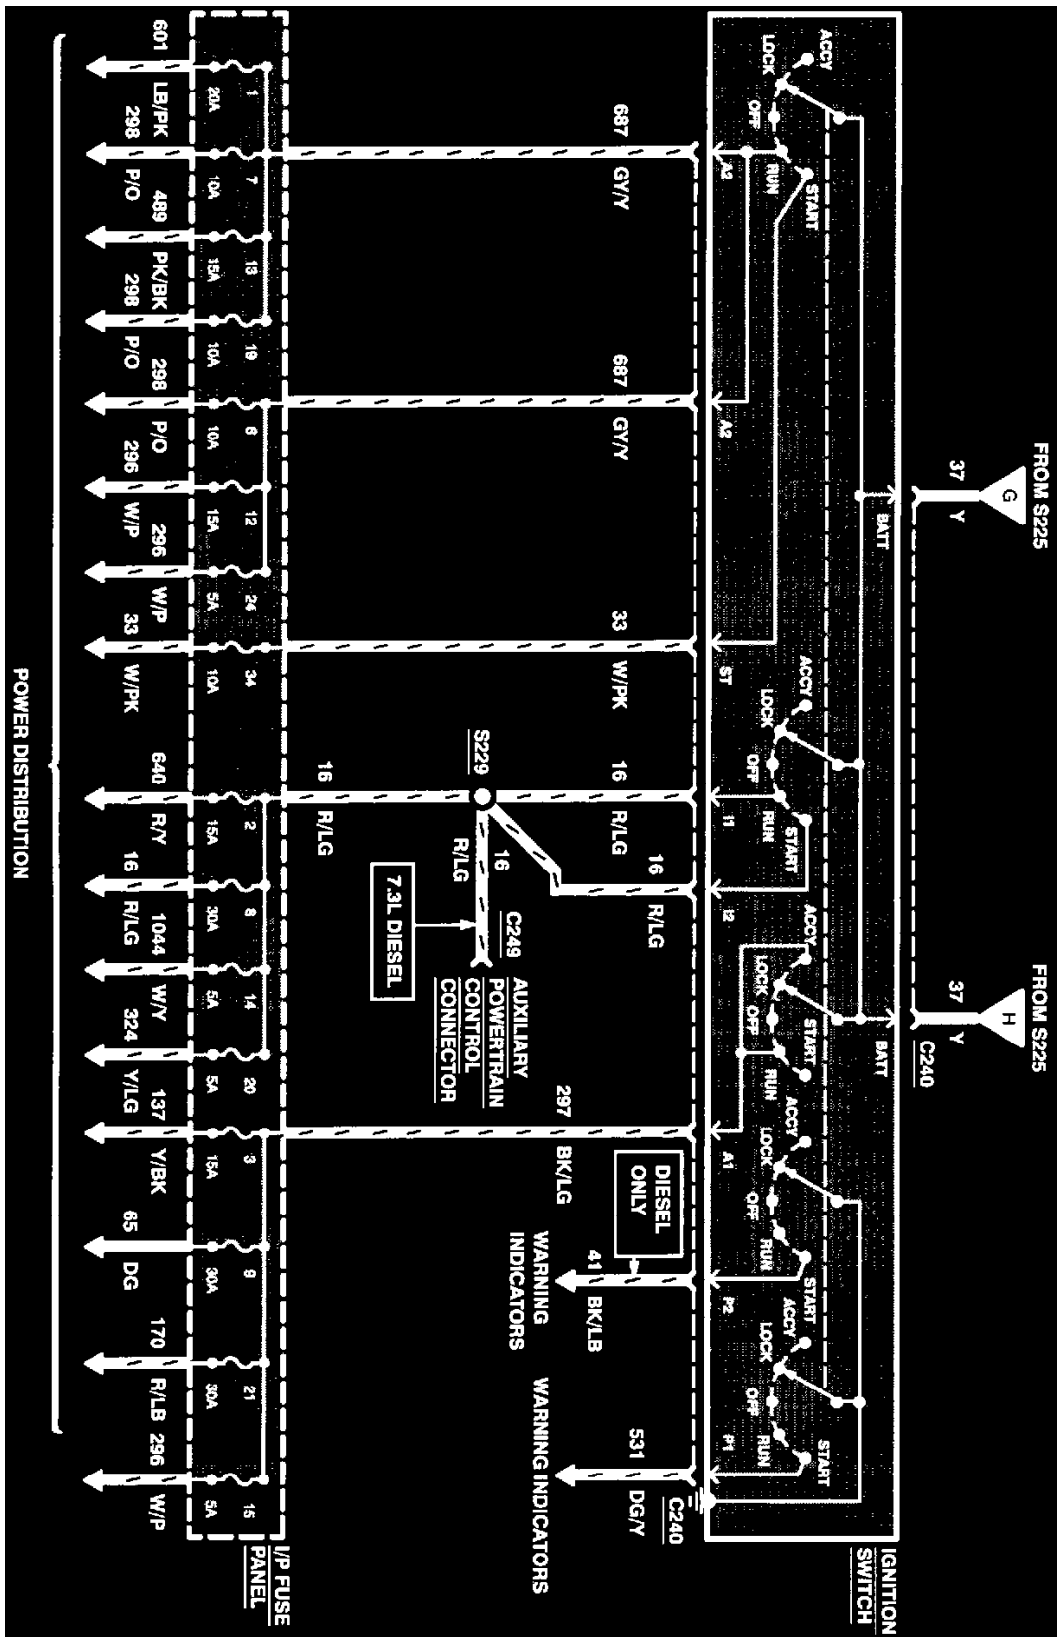

Power Distribution

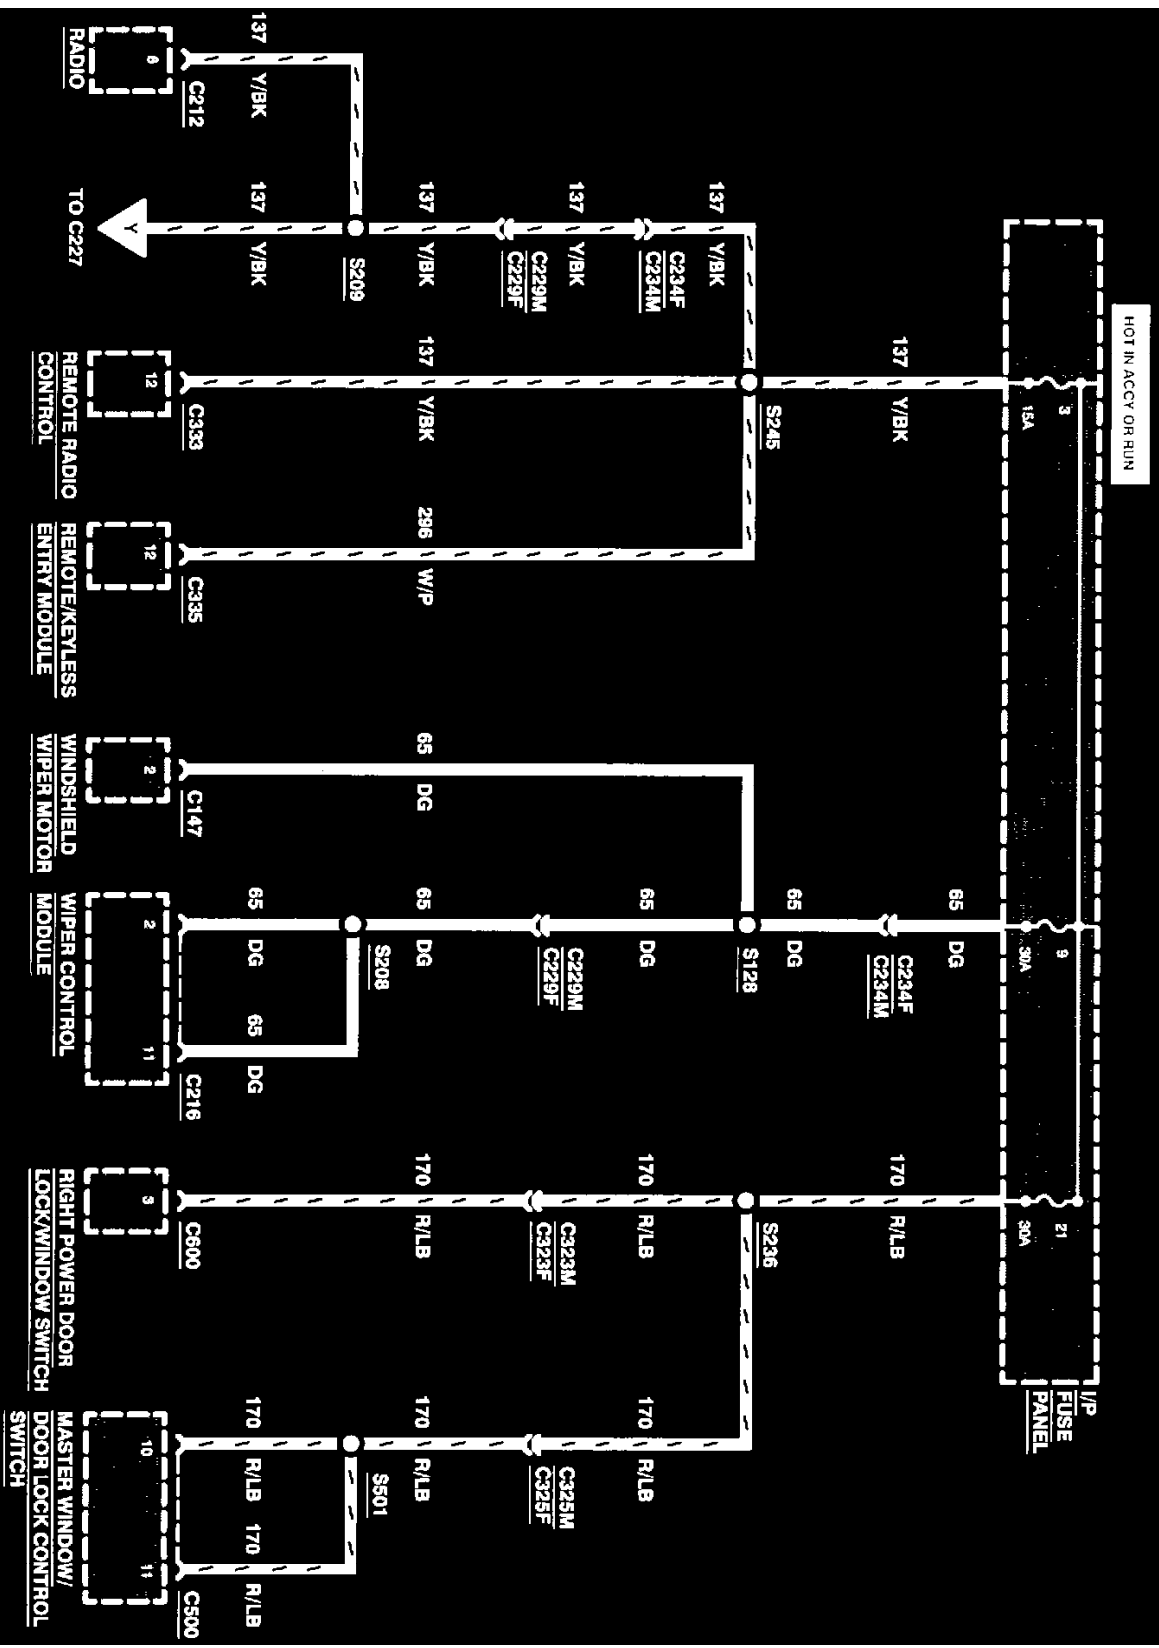

Power Distribution

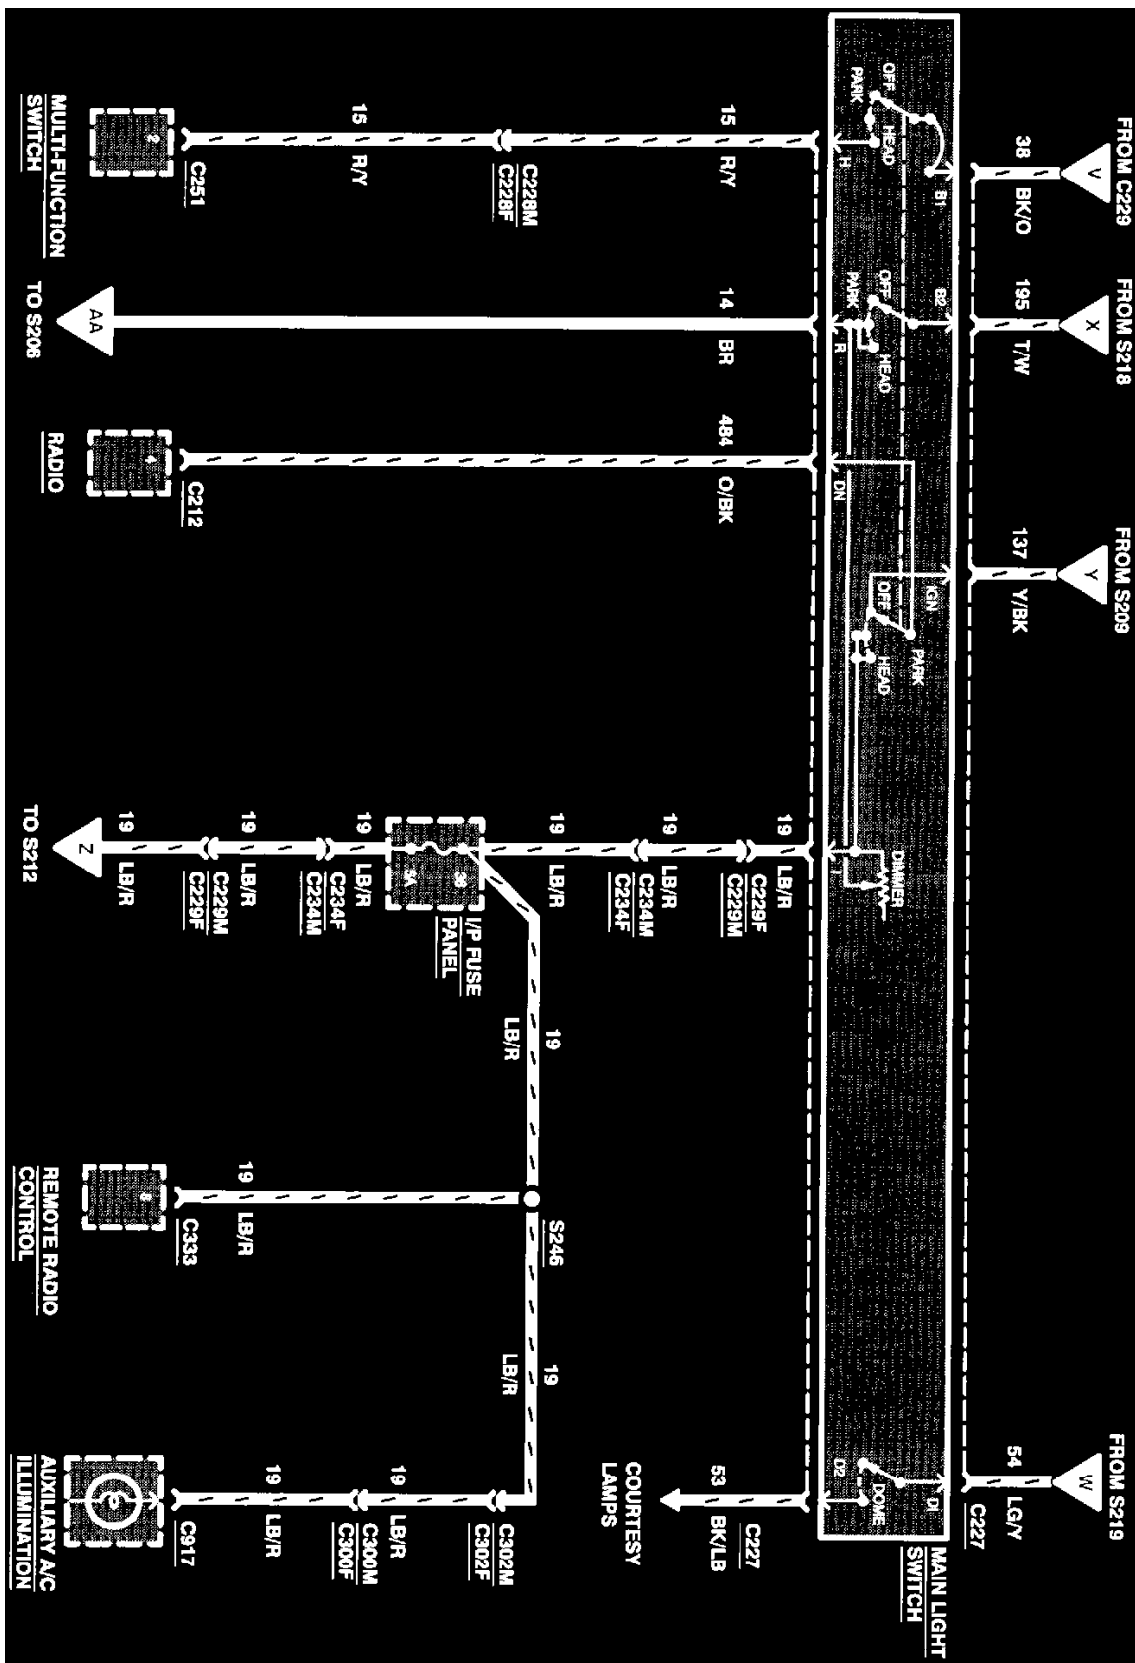


Power Distribution

Fuse 4


Fuse 4 - protects the following circuits:

- ^ Power Locks (With Remote Keyless Entry)
- ^ Illuminated Entry
- ^ Warning Chime
- ^ Modified Vehicle
- ^ Radio


- ^ Cluster
- ^ Power Mirrors
- ^ Main Light Switch
- ^ Courtesy Lamp Switches
- ^ Dome Lamp
- ^ Cargo Lamp

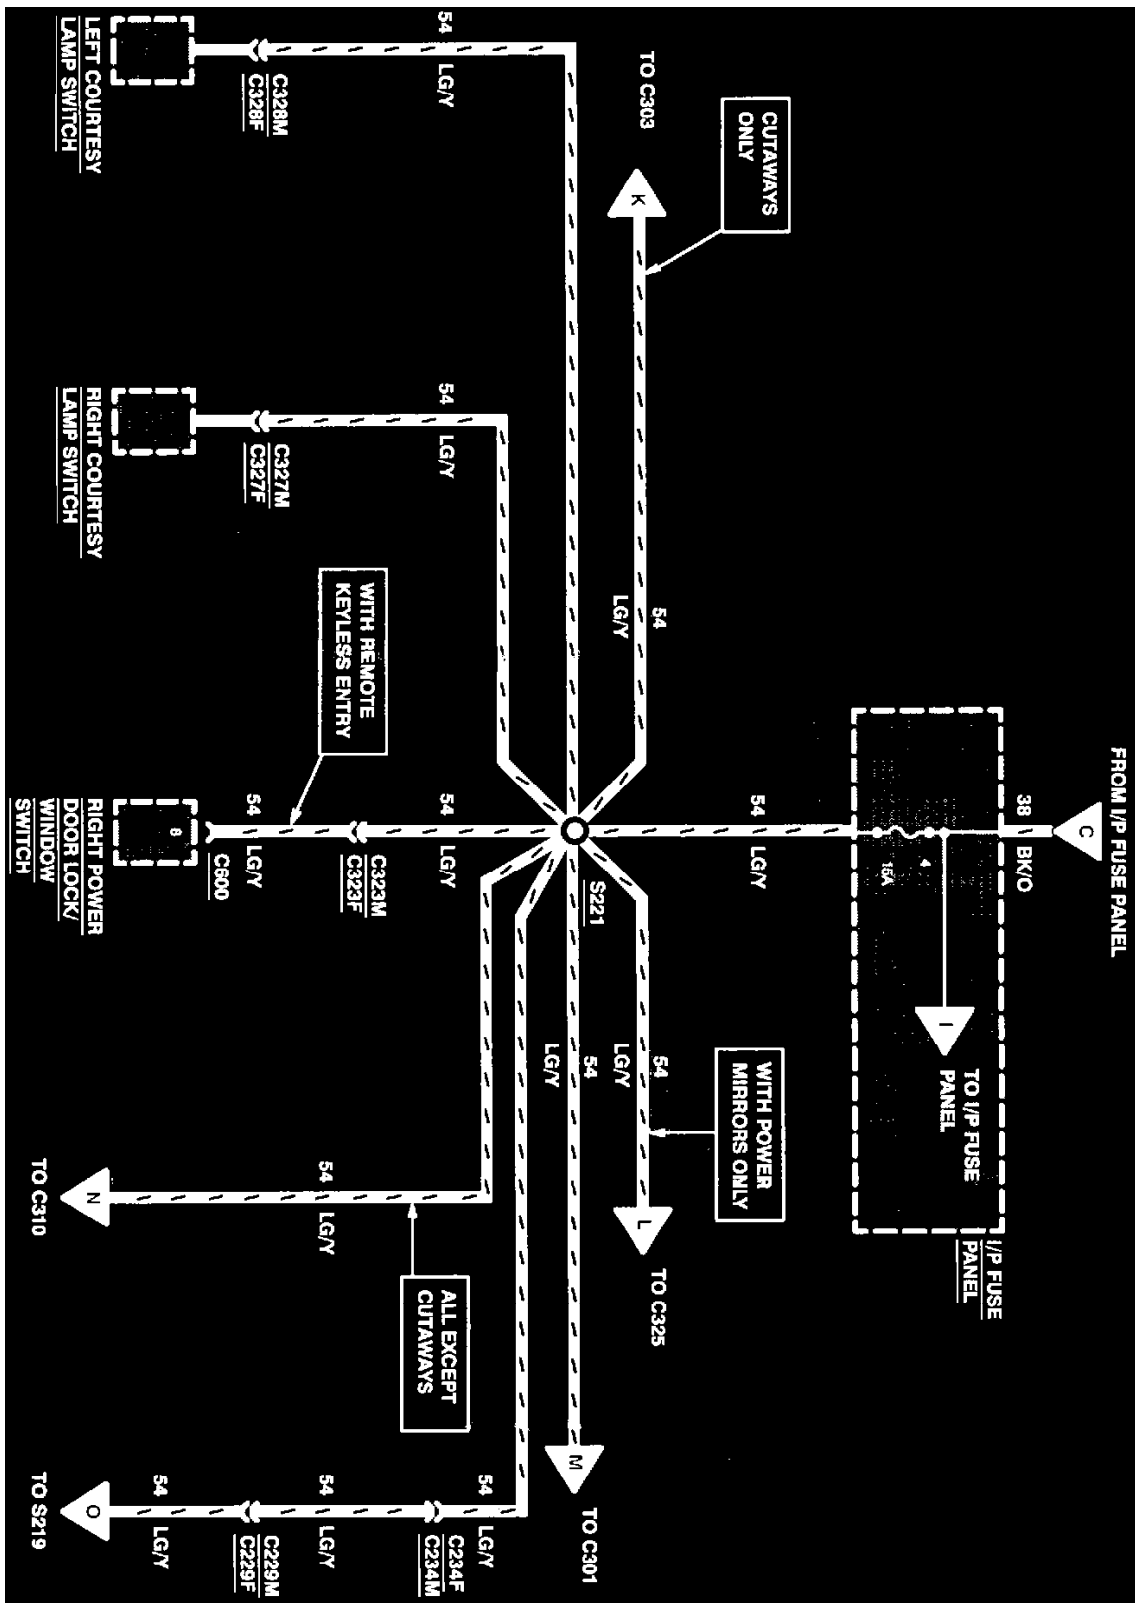


Power Distribution

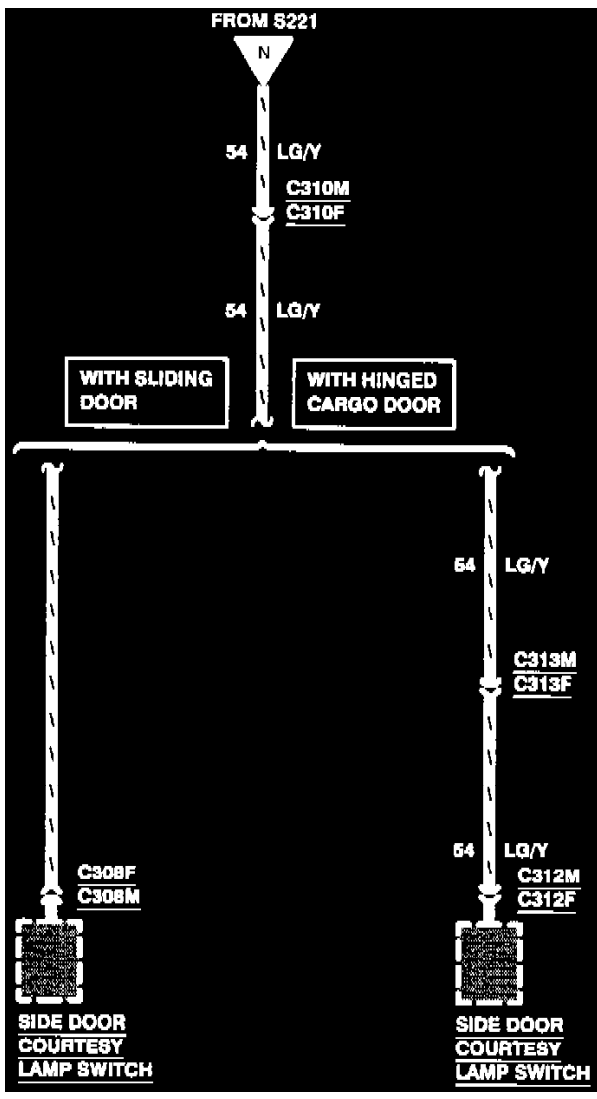


Power Distribution

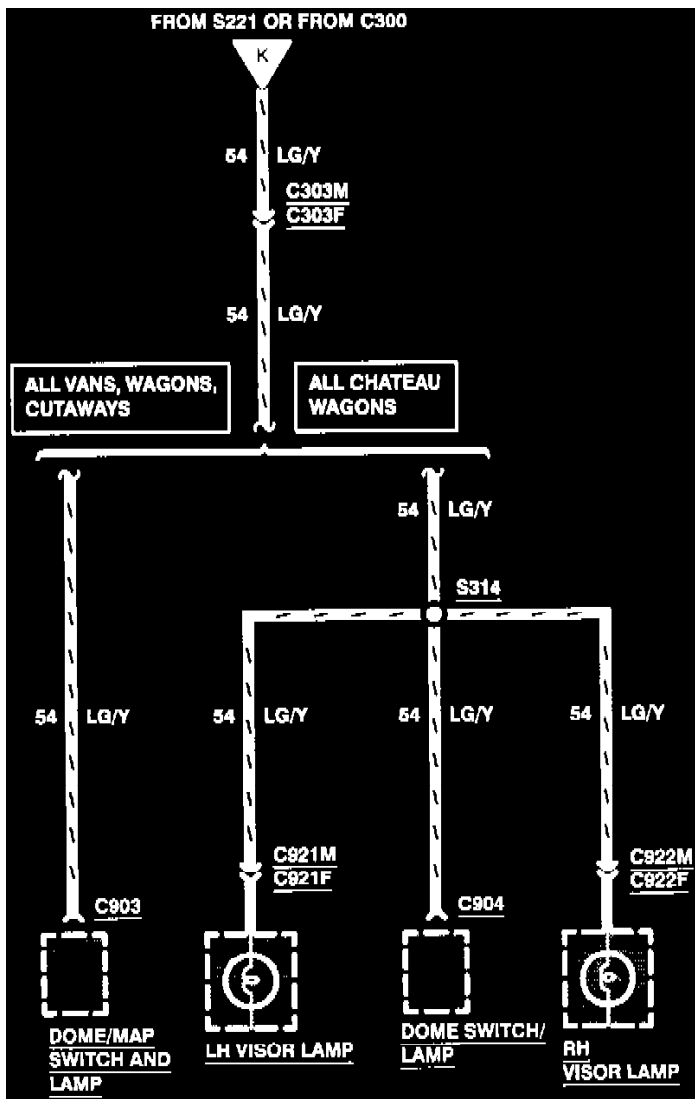


Power Distribution

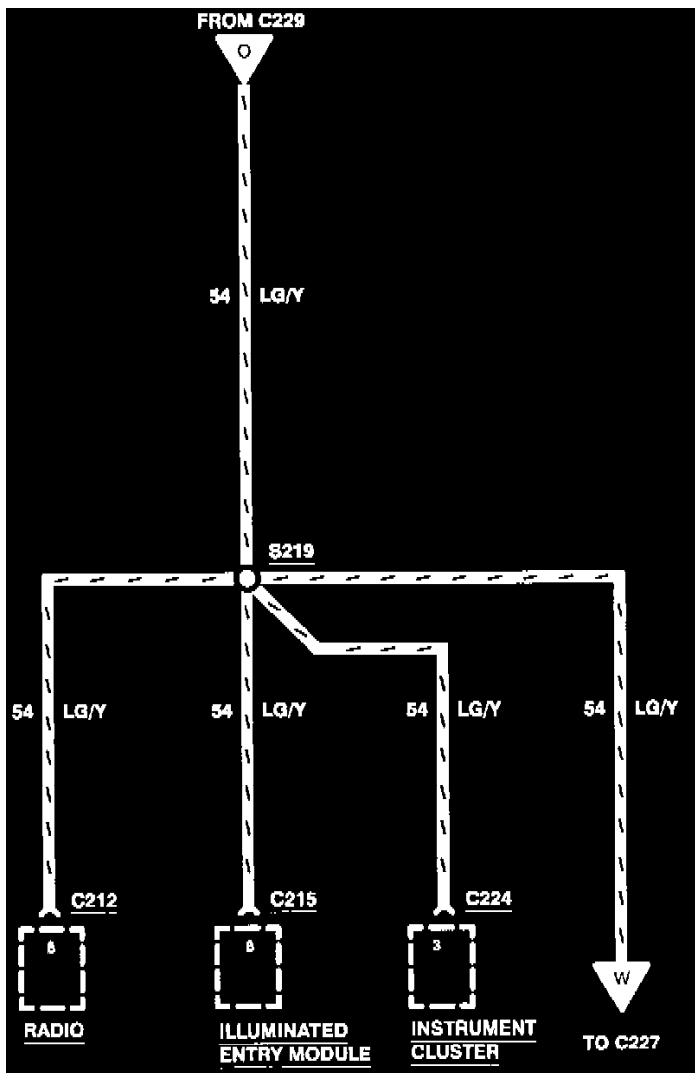


Power Distribution

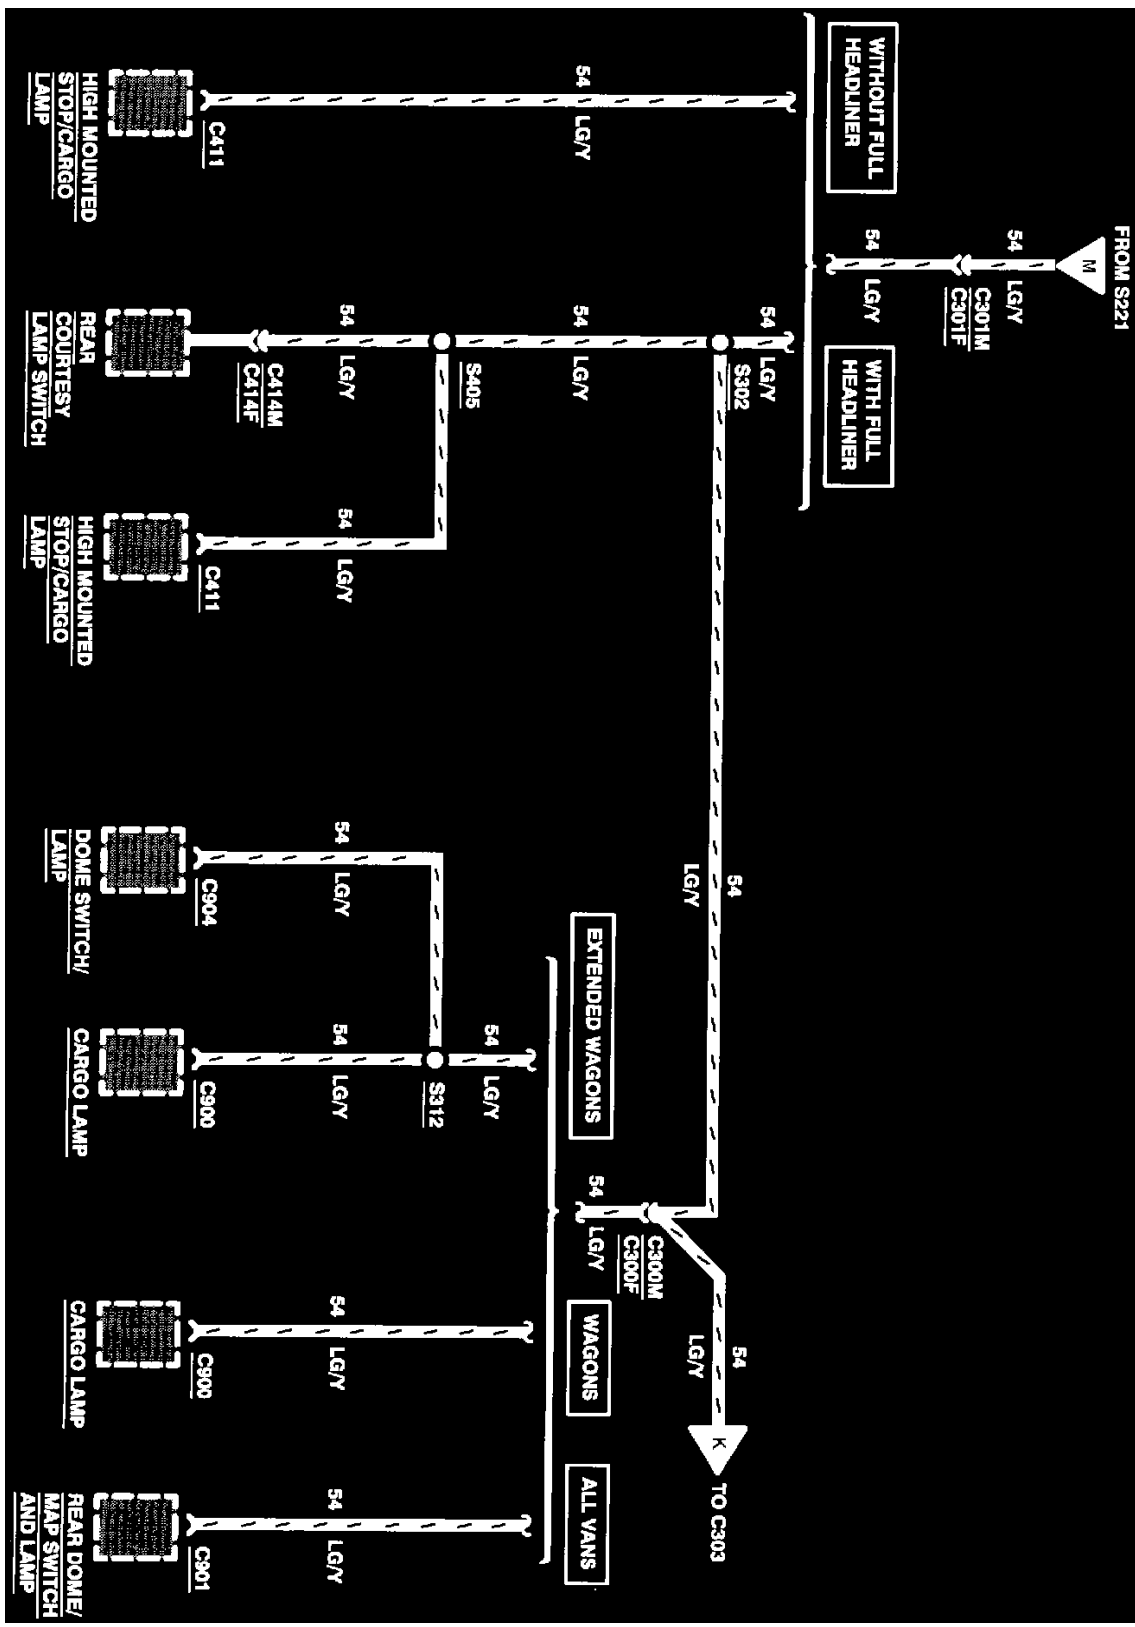

Power Distribution

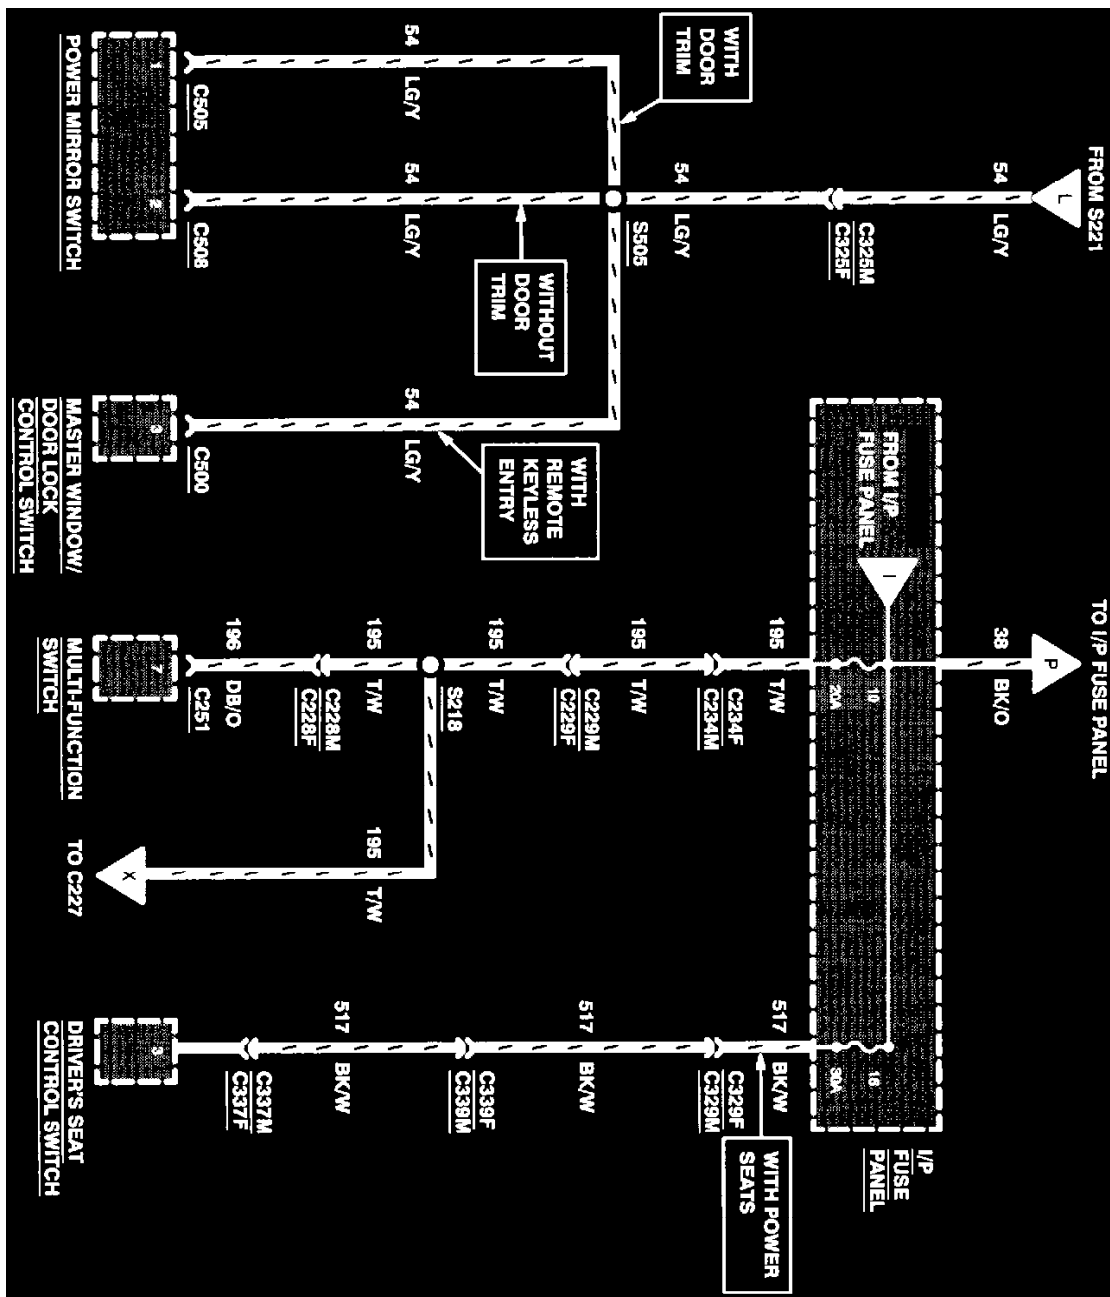

Power Distribution

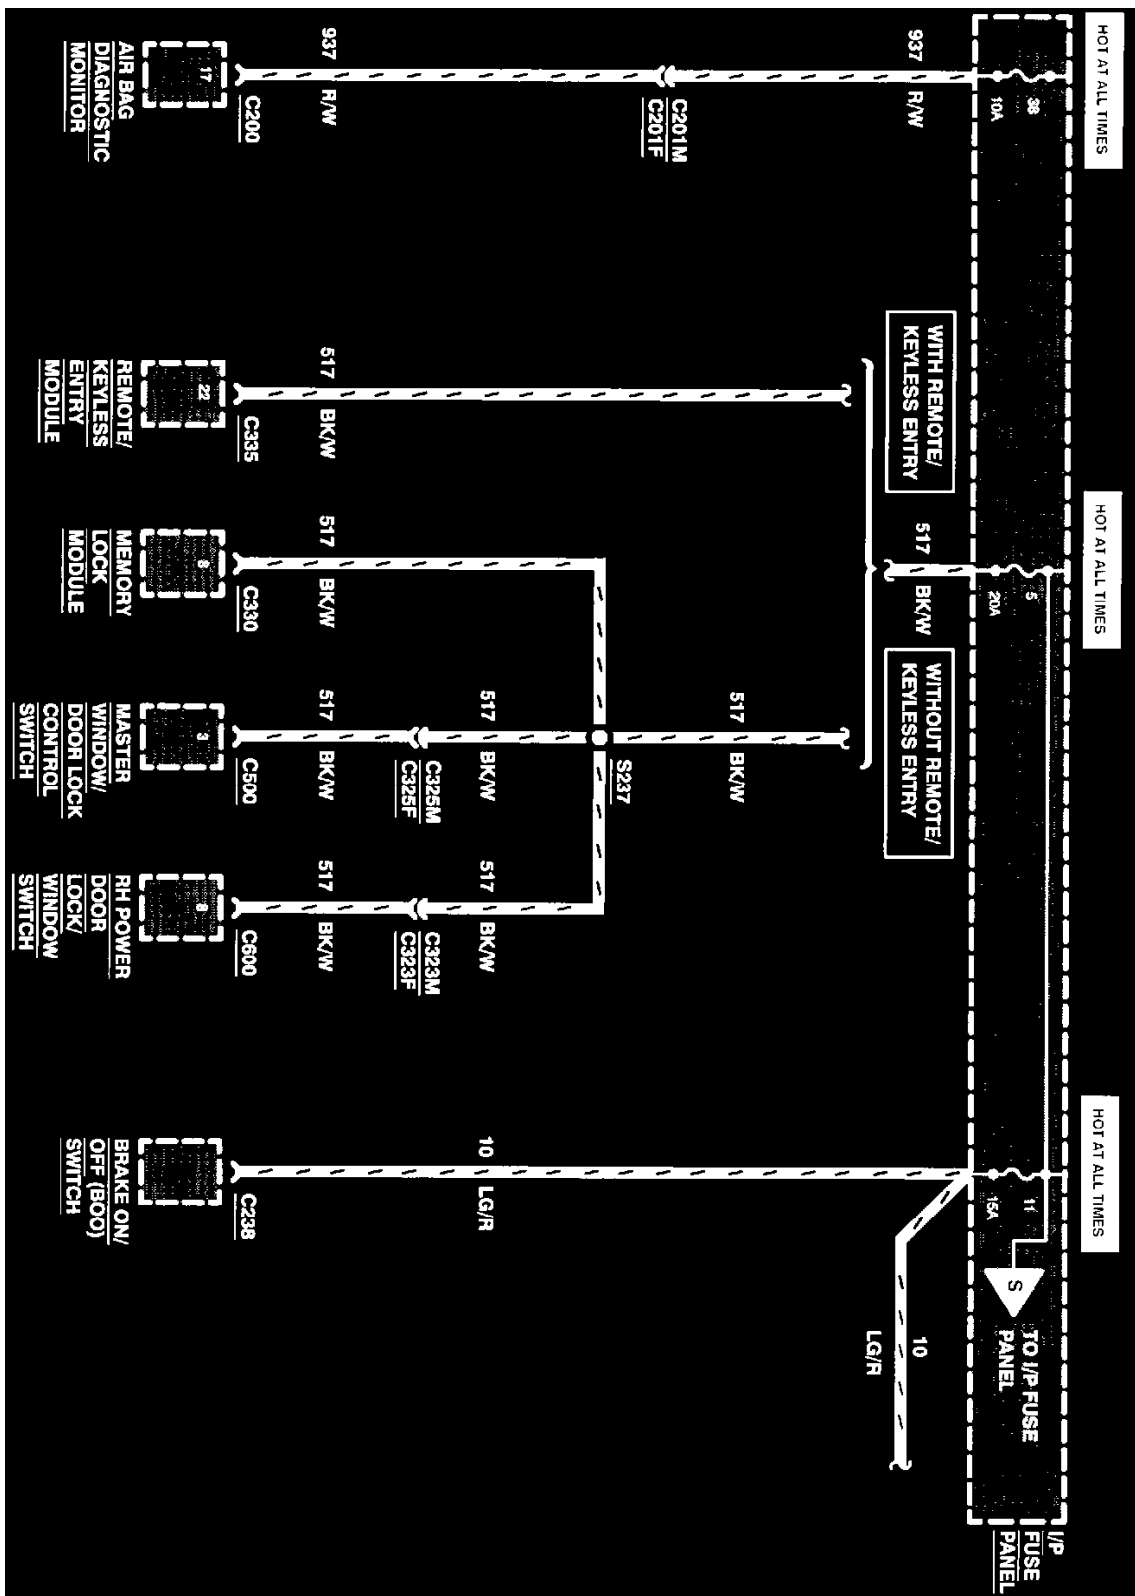


Power Distribution

Fuse 6

Fuse 6 - protects the following circuits:

- ^ Shift Interlock
- ^ Speed Control
- ^ Daytime Running Lamps Module

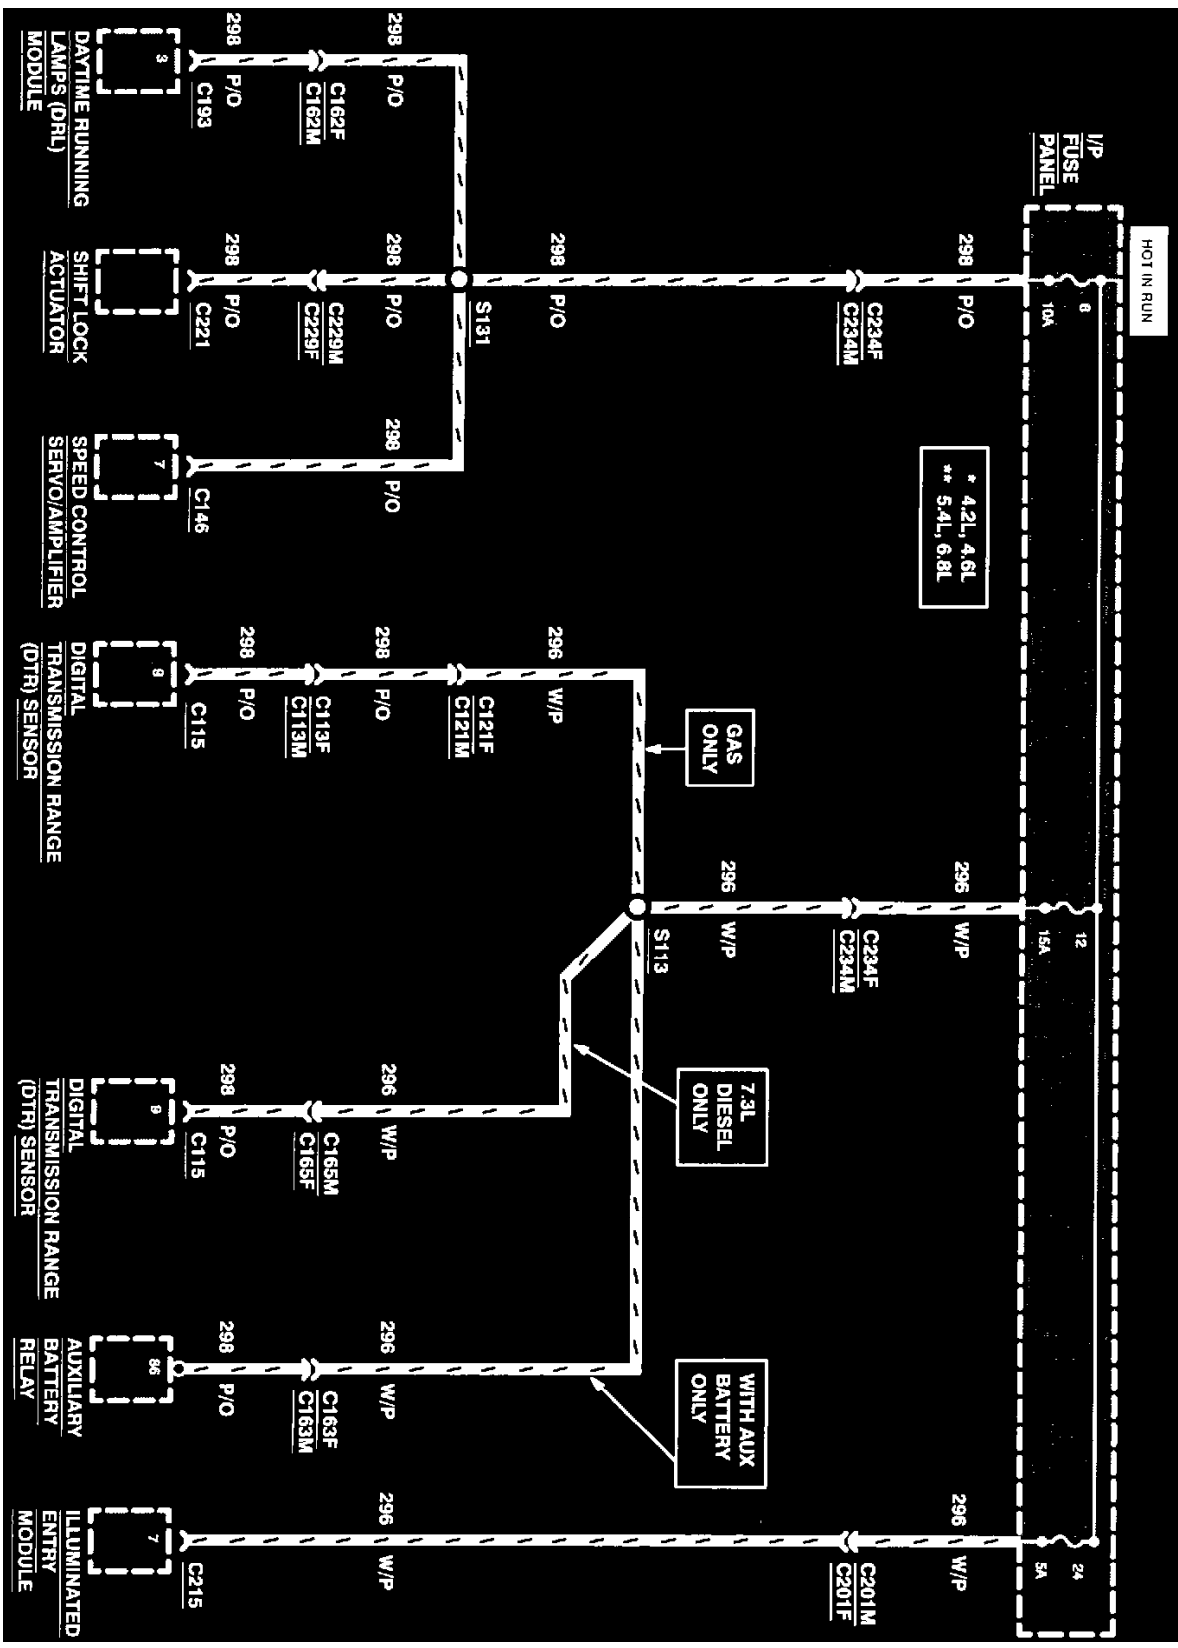


Power Distribution

Fuse 7

Fuse 7 - protects the following circuits:

- ^ Multi-Function Switch

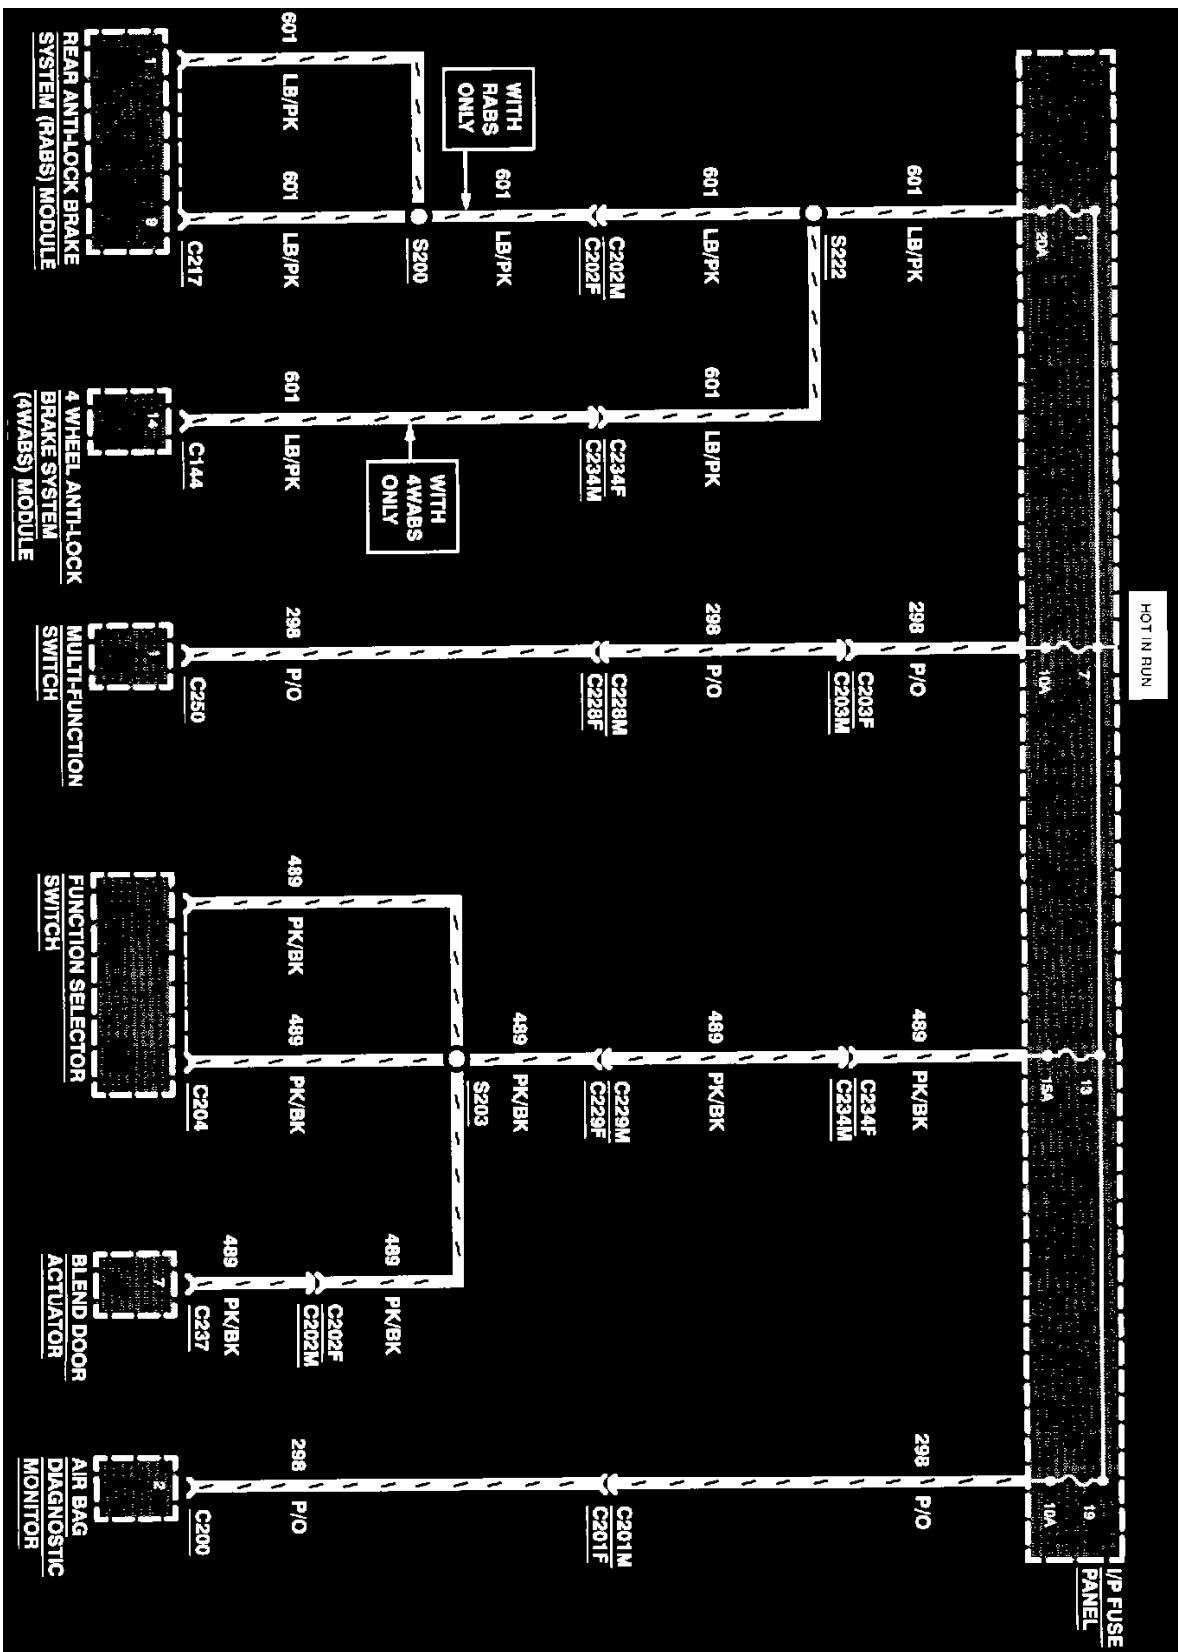


Power Distribution


Fuse 8

Fuse 8 - protects the following circuits:

- ^ Radio Capacitor
- ^ Ignition Coil
- ^ PCM Diode
- ^ PCM Power Relay

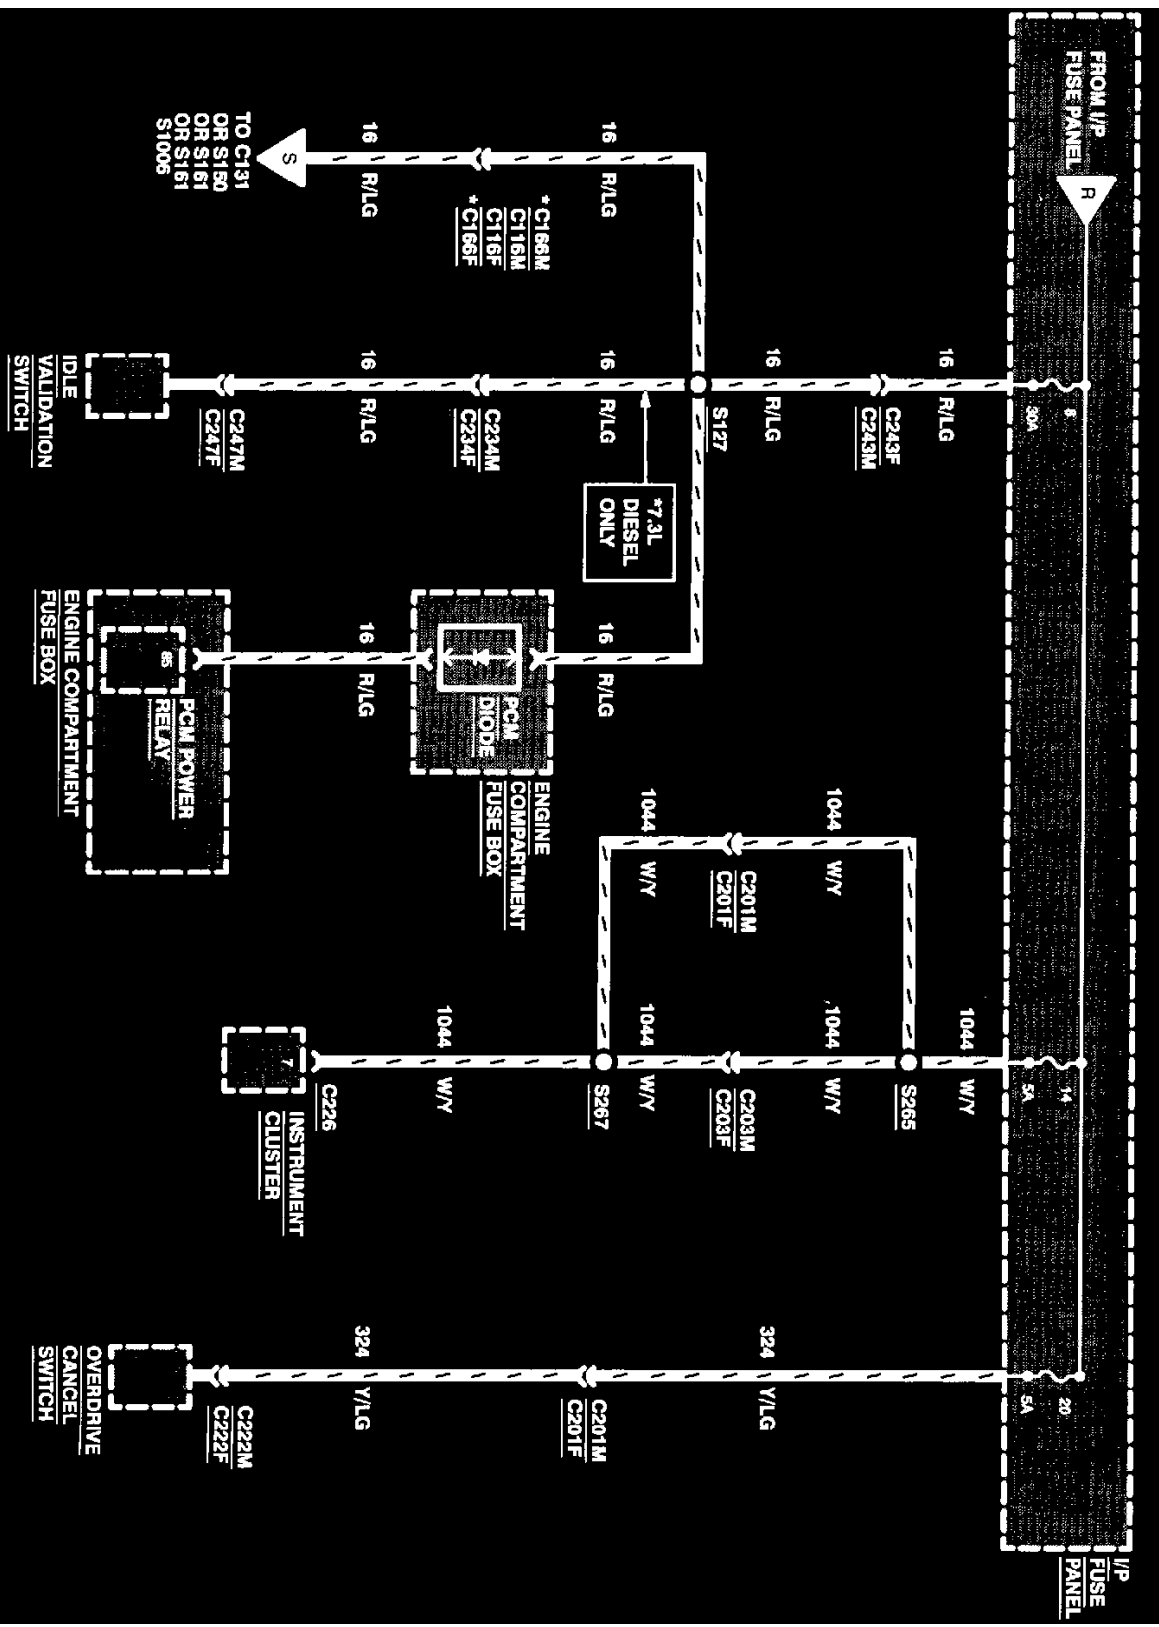

Power Distribution

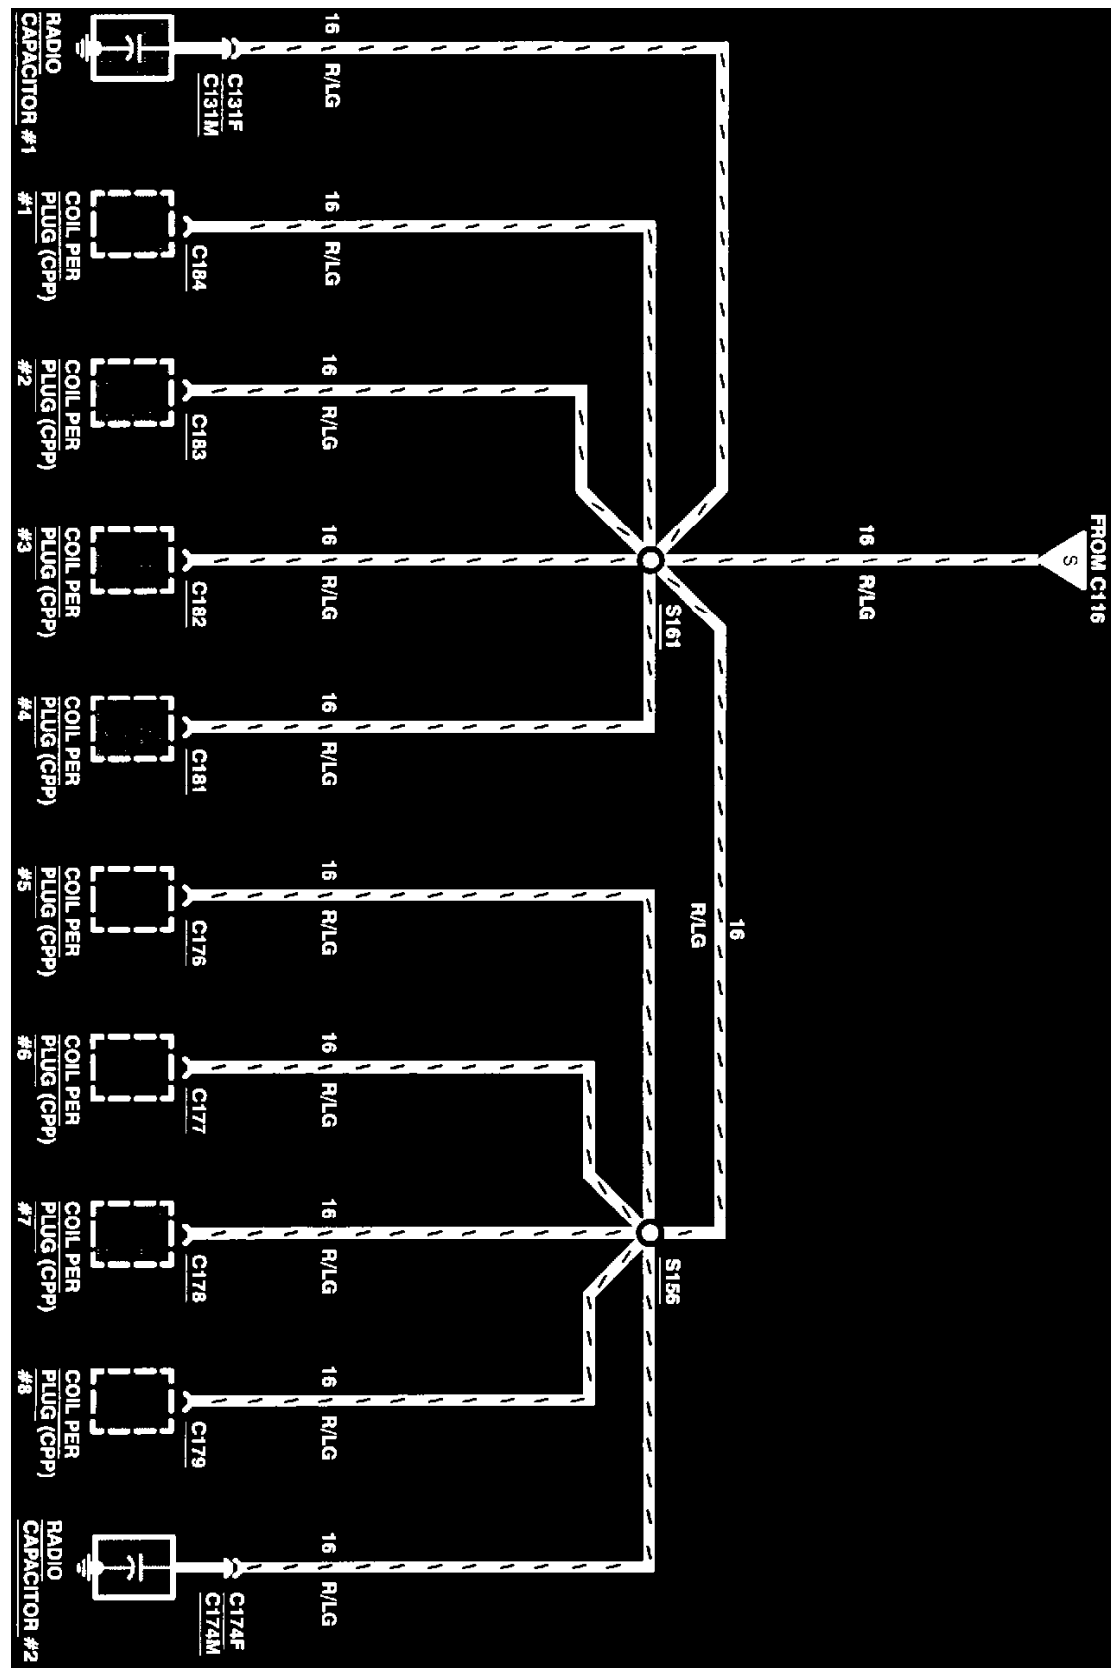


Power Distribution

Fuse 9

Fuse 9 - protects the following circuits:

- ^ Wiper Control Module
- ^ Windshield Wiper Motor

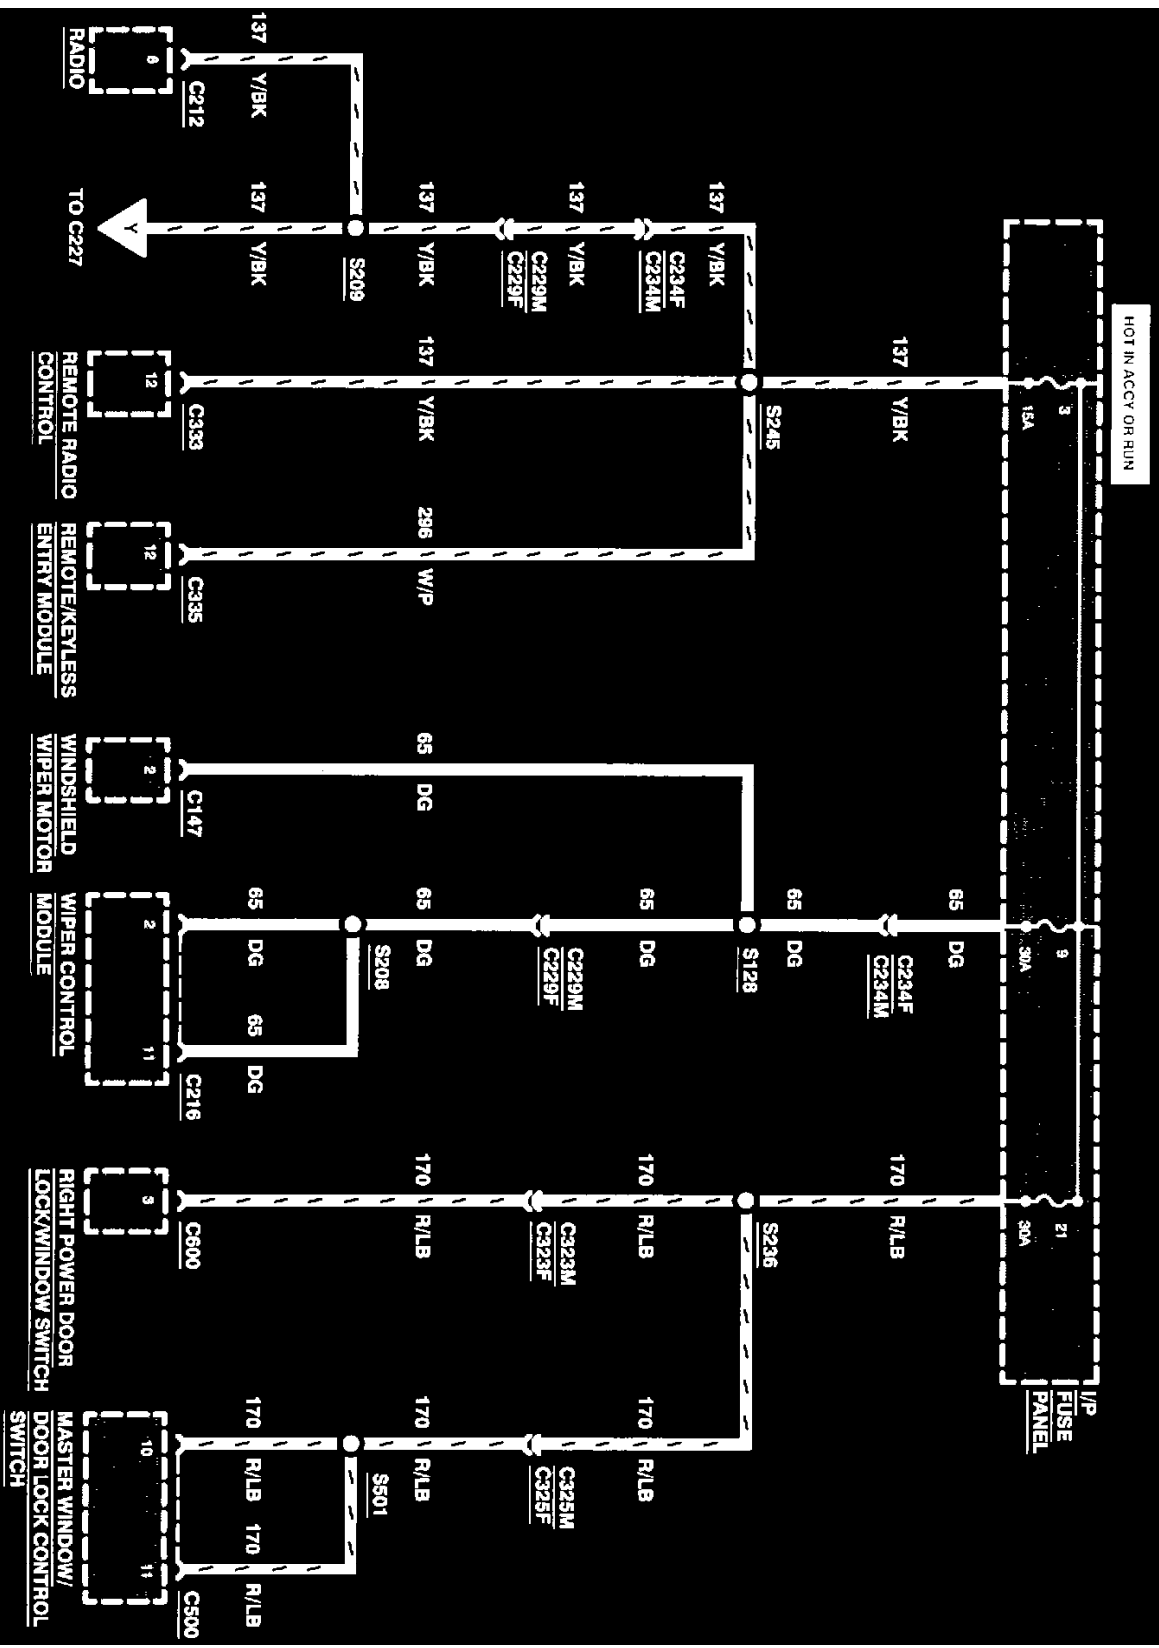


Power Distribution


Fuse 10

Fuse 10 - protects the following circuits:


- ^ Main Light Switch
- ^ External lamps
- ^ Multi-Function Switch (Flash-to-pass)

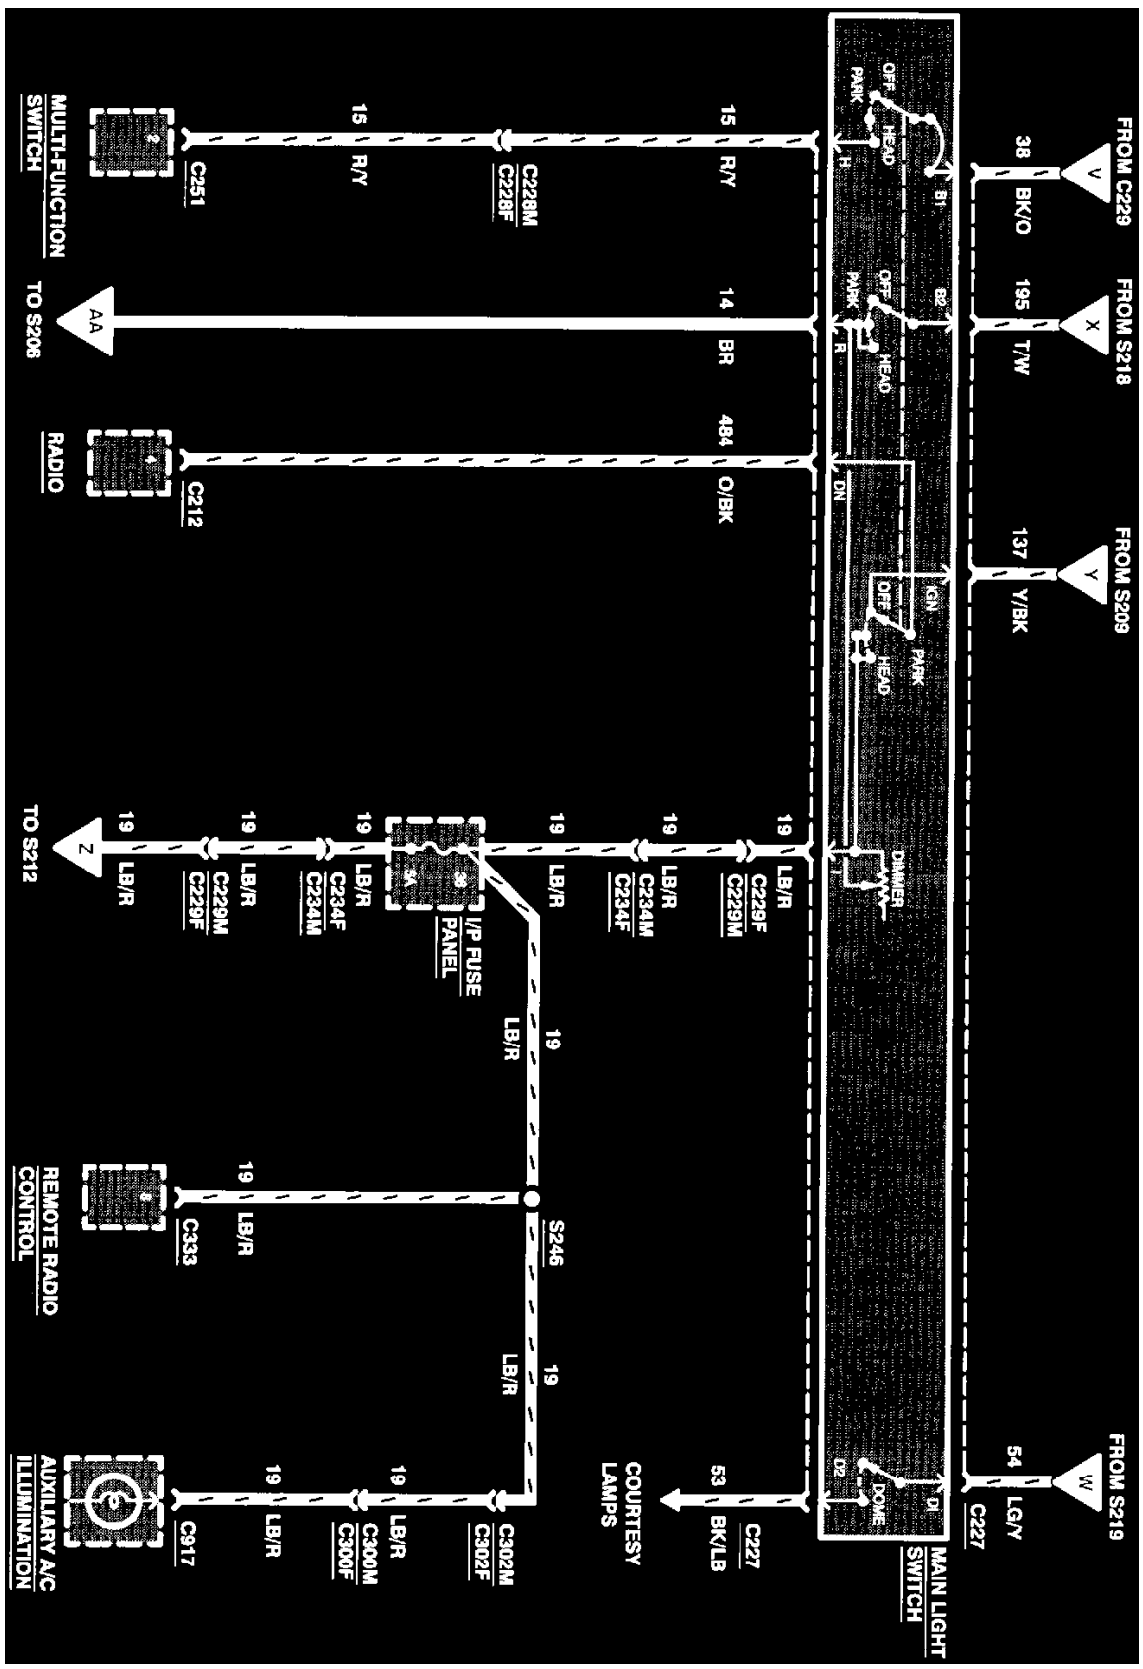

Power Distribution

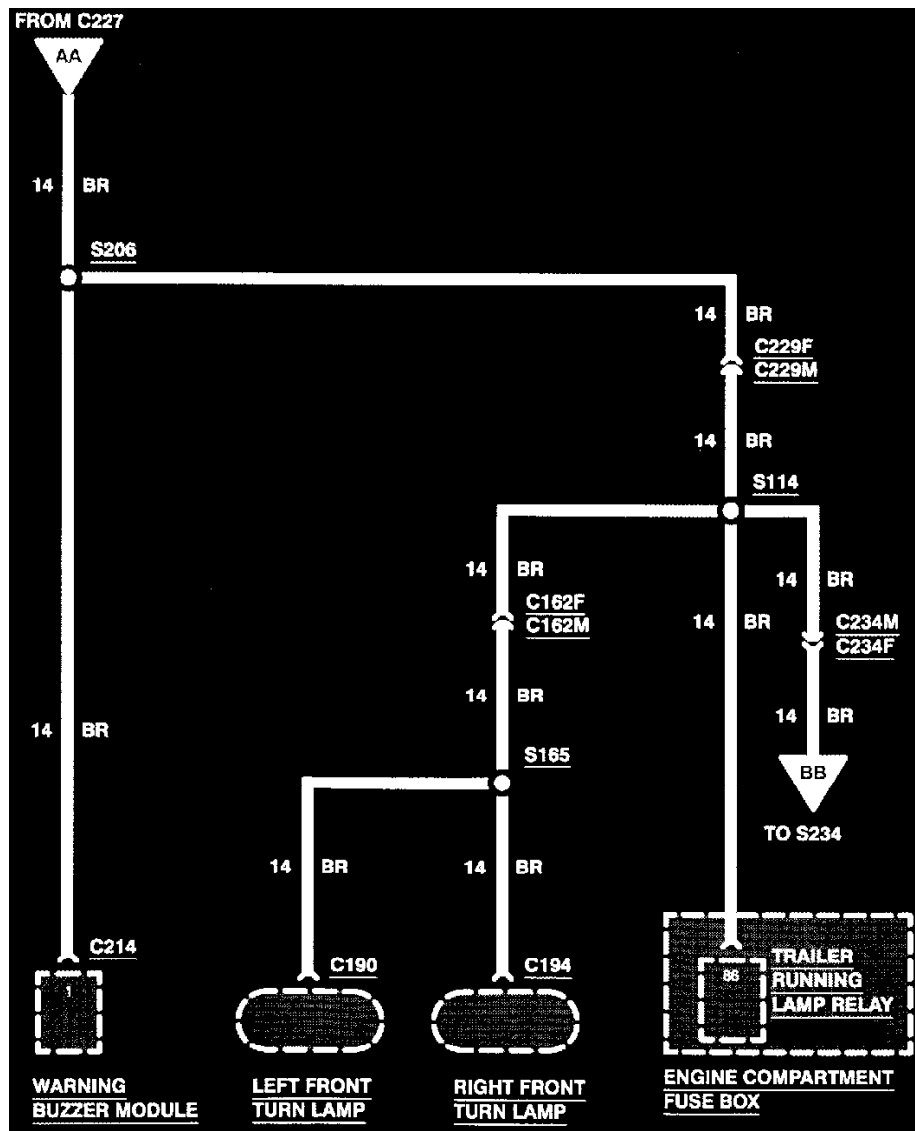

Power Distribution

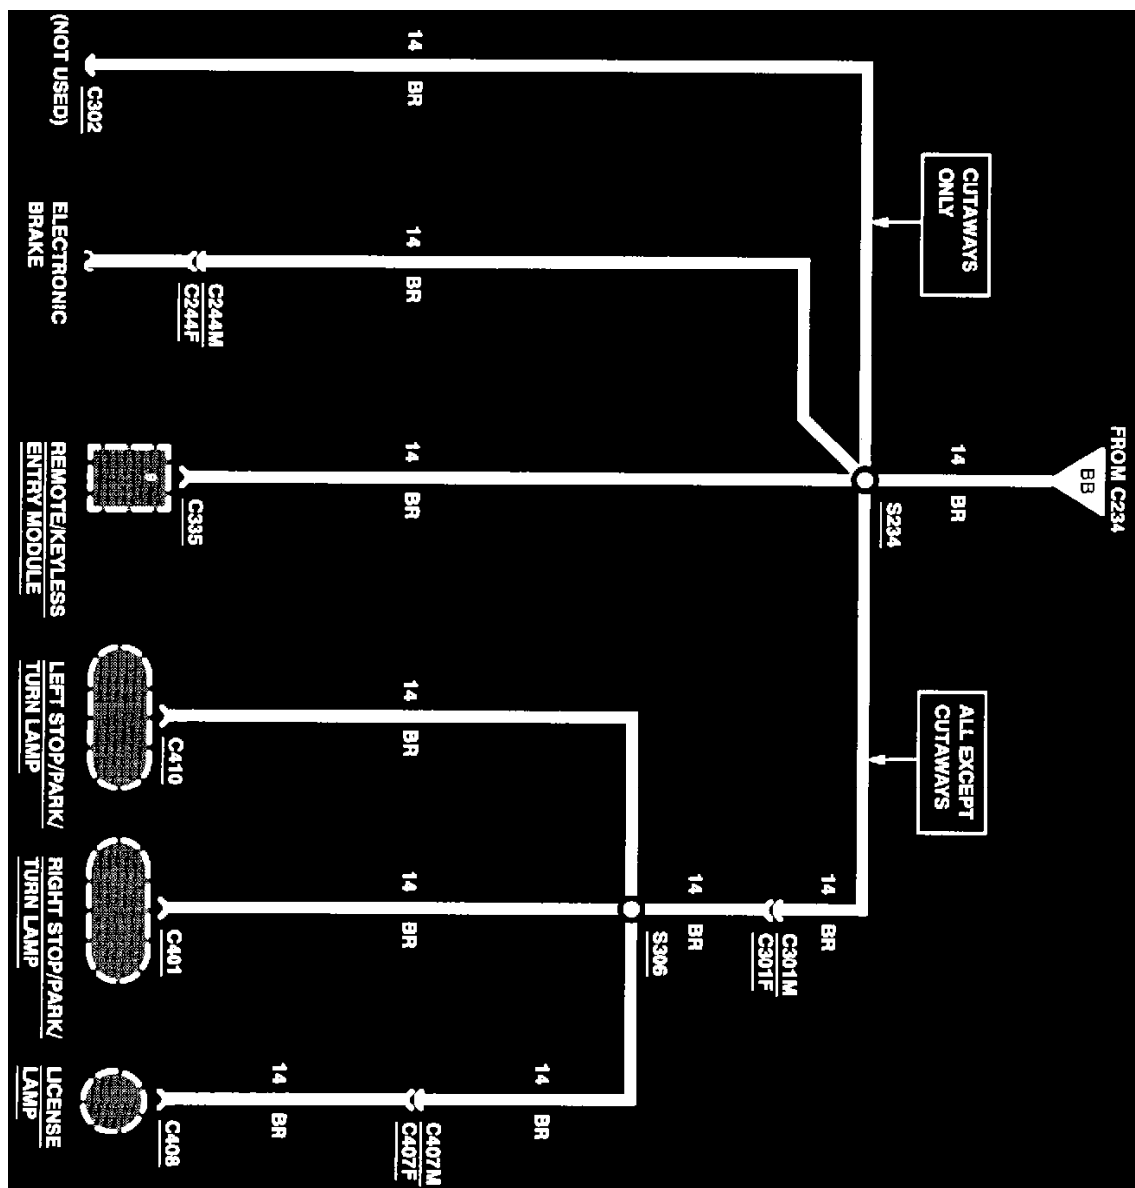


Power Distribution


Fuse 11

Fuse 11 - protects the following circuits:


- ^ Brake Pressure Switch
- ^ Multi-Function Switch (Hazards)
- ^ Stop Switch
- ^ Rear Anti-Lock Brakes System
- ^ Diagnostic

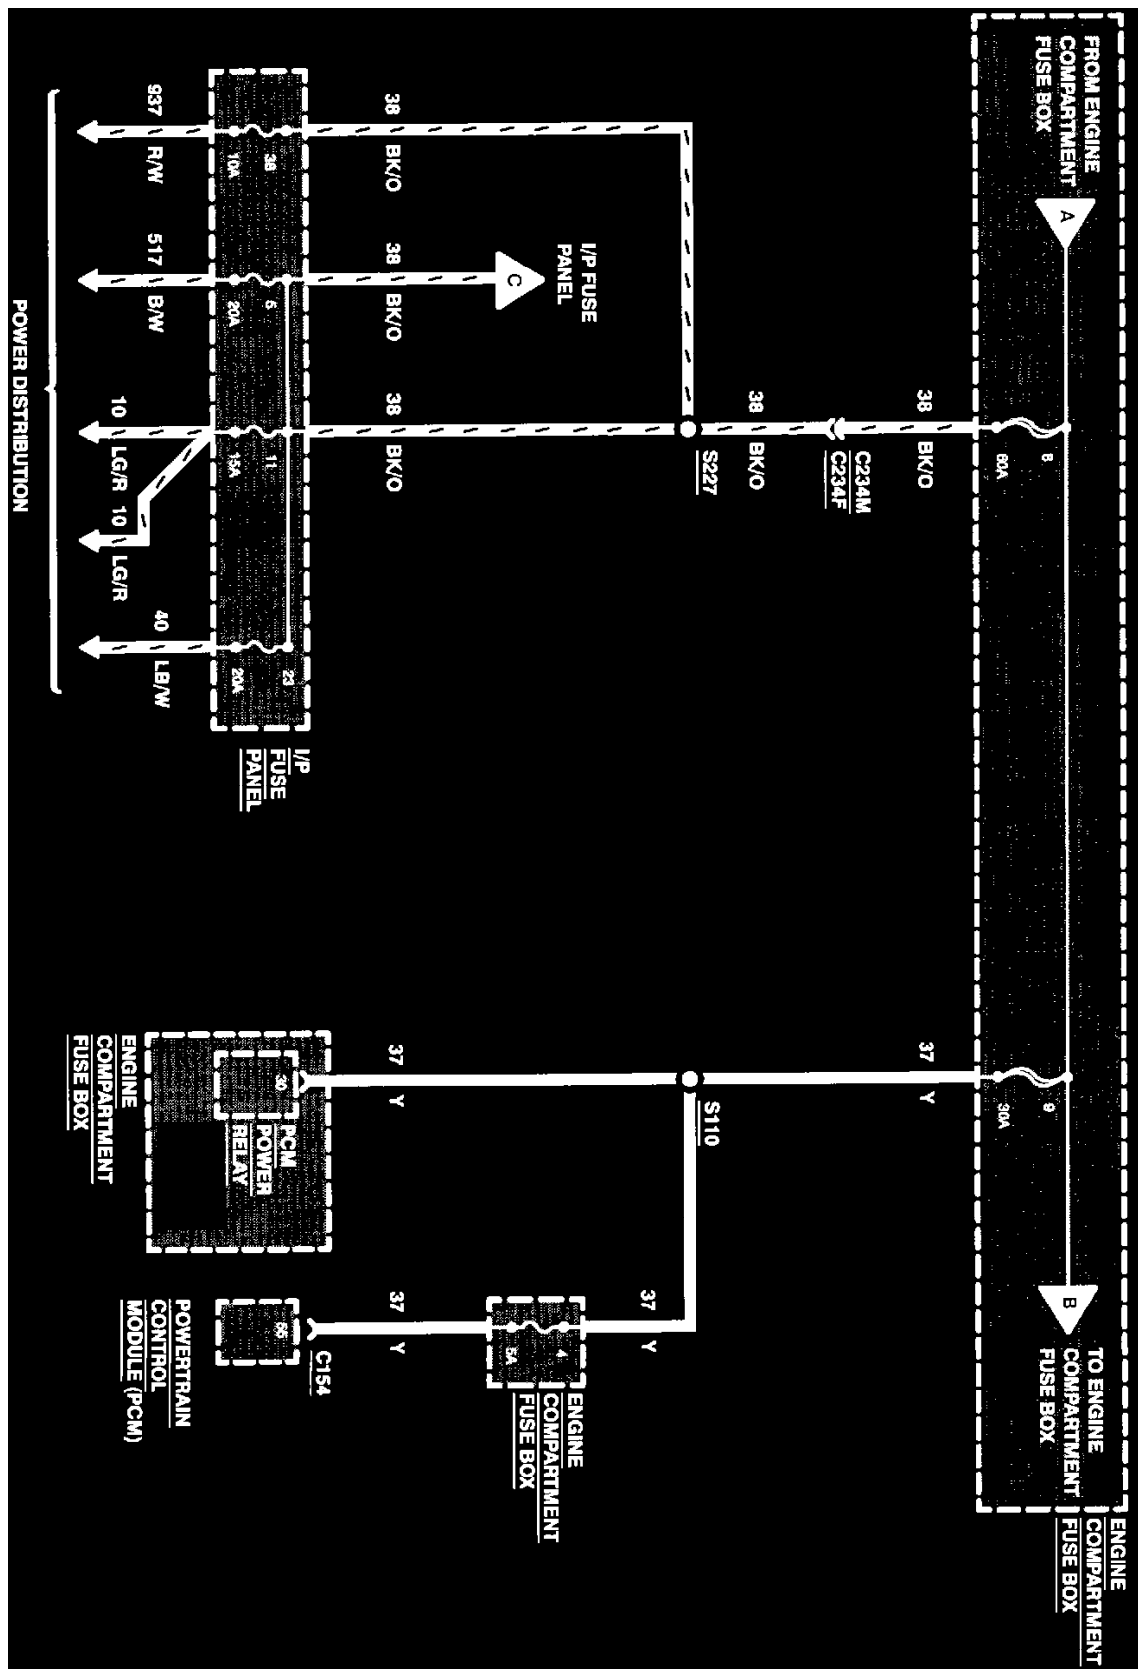

Power Distribution

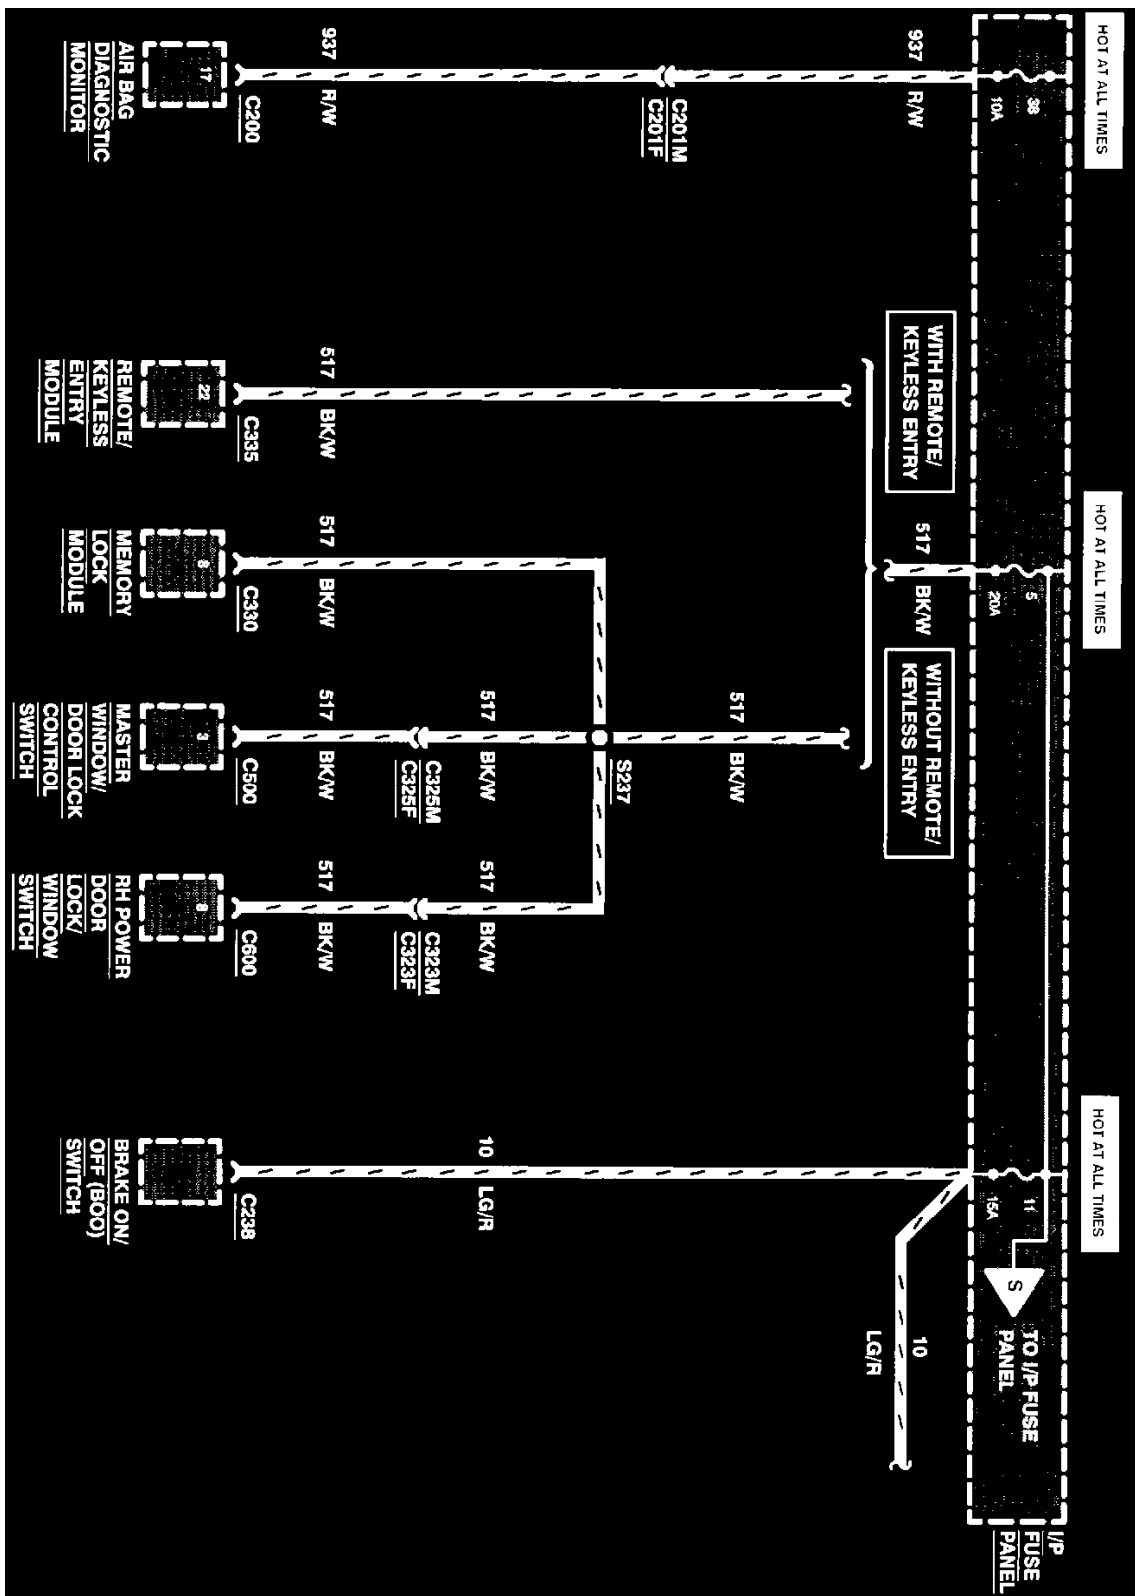

Power Distribution

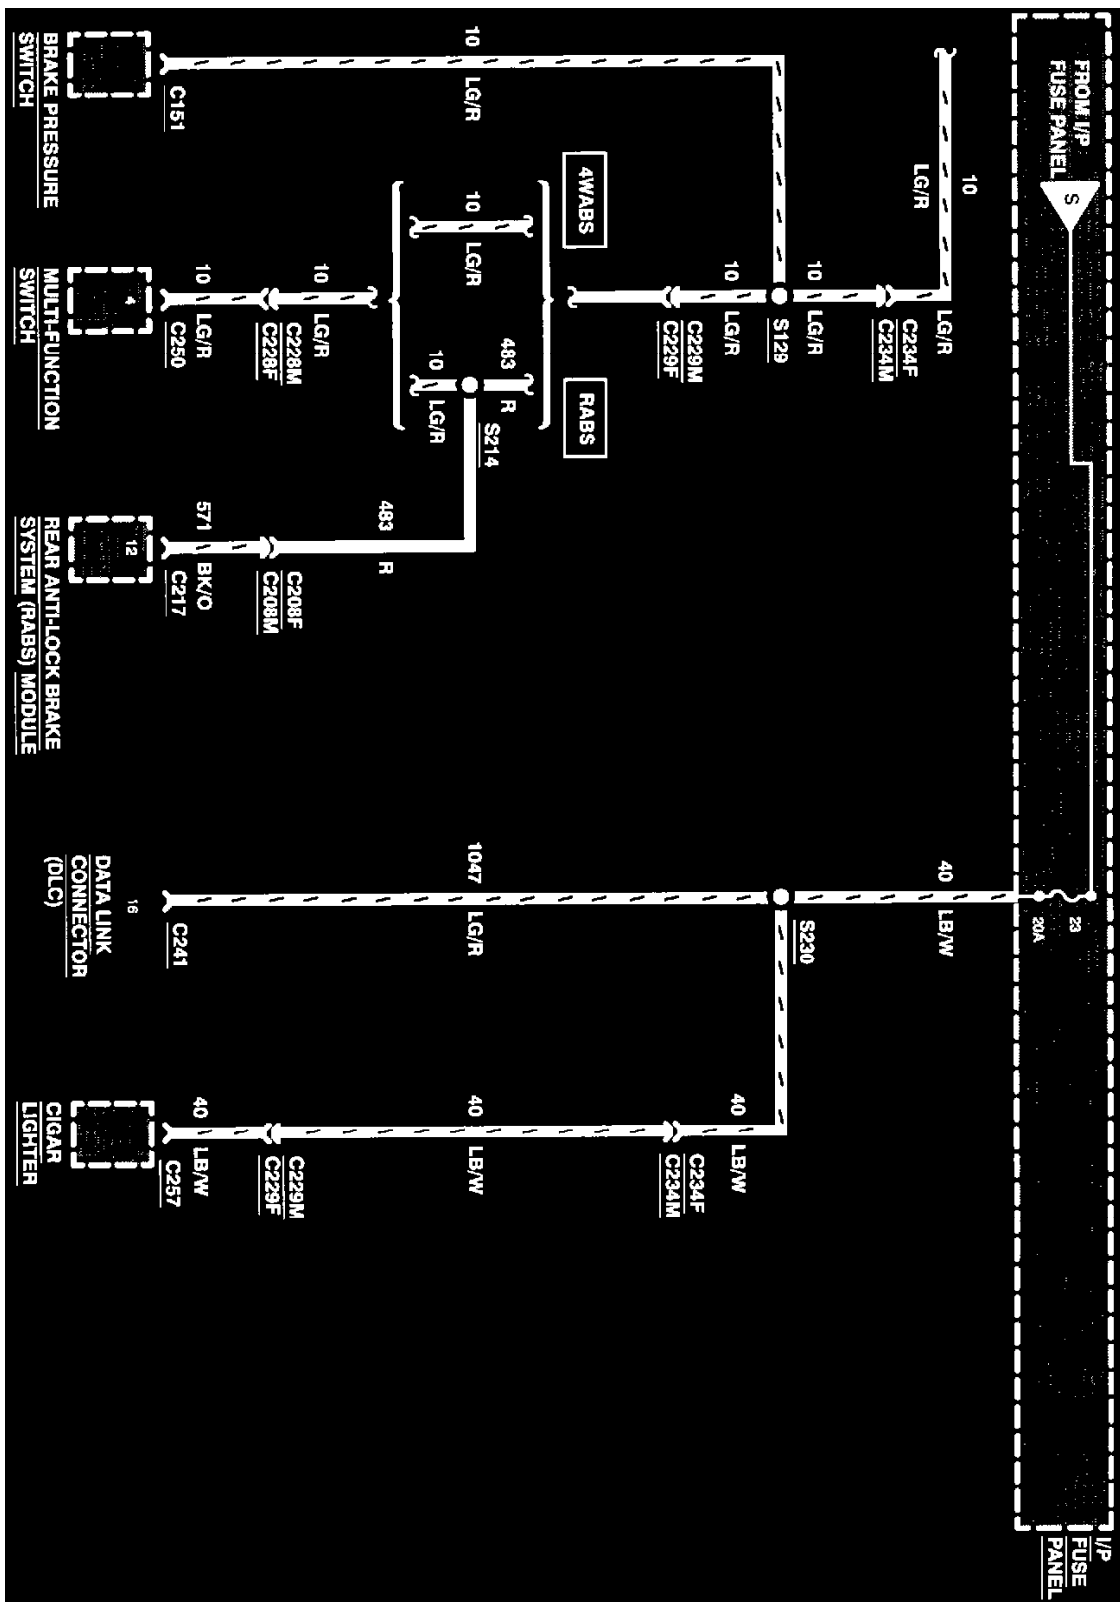


Power Distribution

Fuse 12

Fuse 12 - protects the following circuits:

- ^ Transmission Range Sensor
- ^ Auxiliary Battery Relay

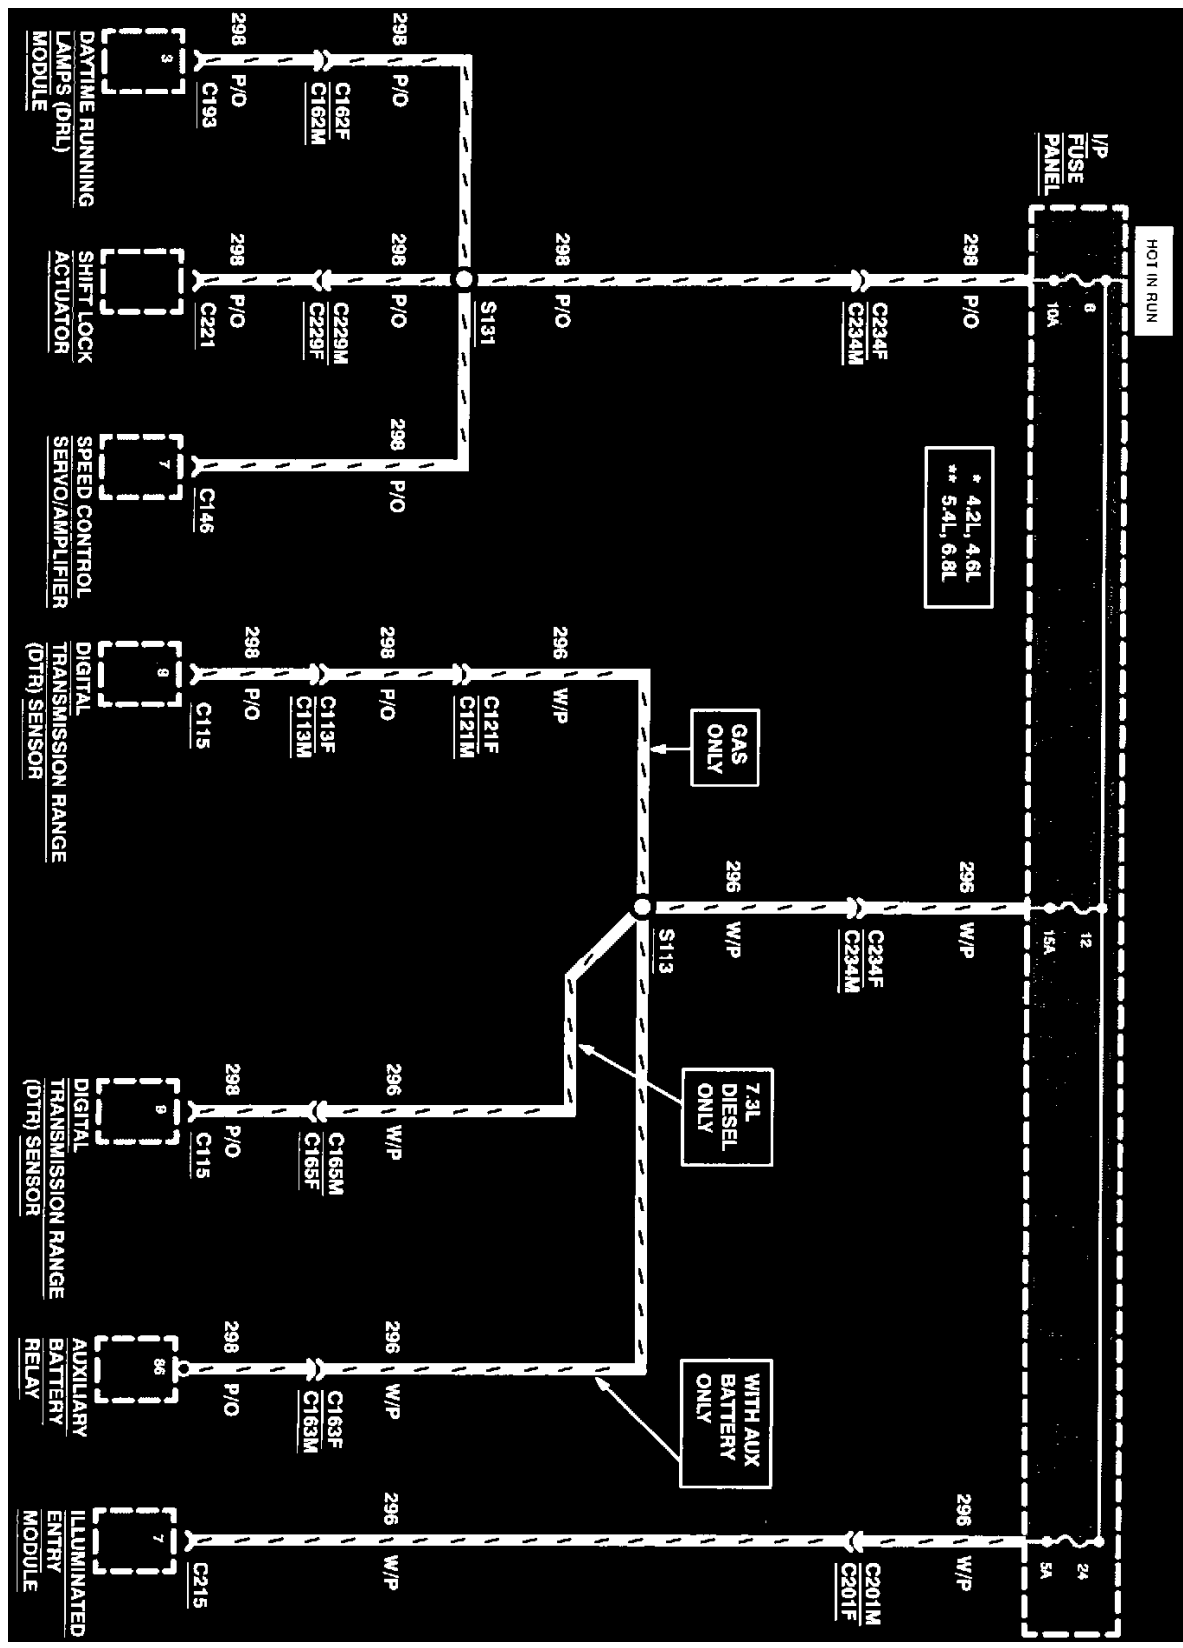


Power Distribution

Fuse 13

Fuse 13 - protects the following circuits:

- ^ A/C Mode Switch
- ^ Blend Door Actuator

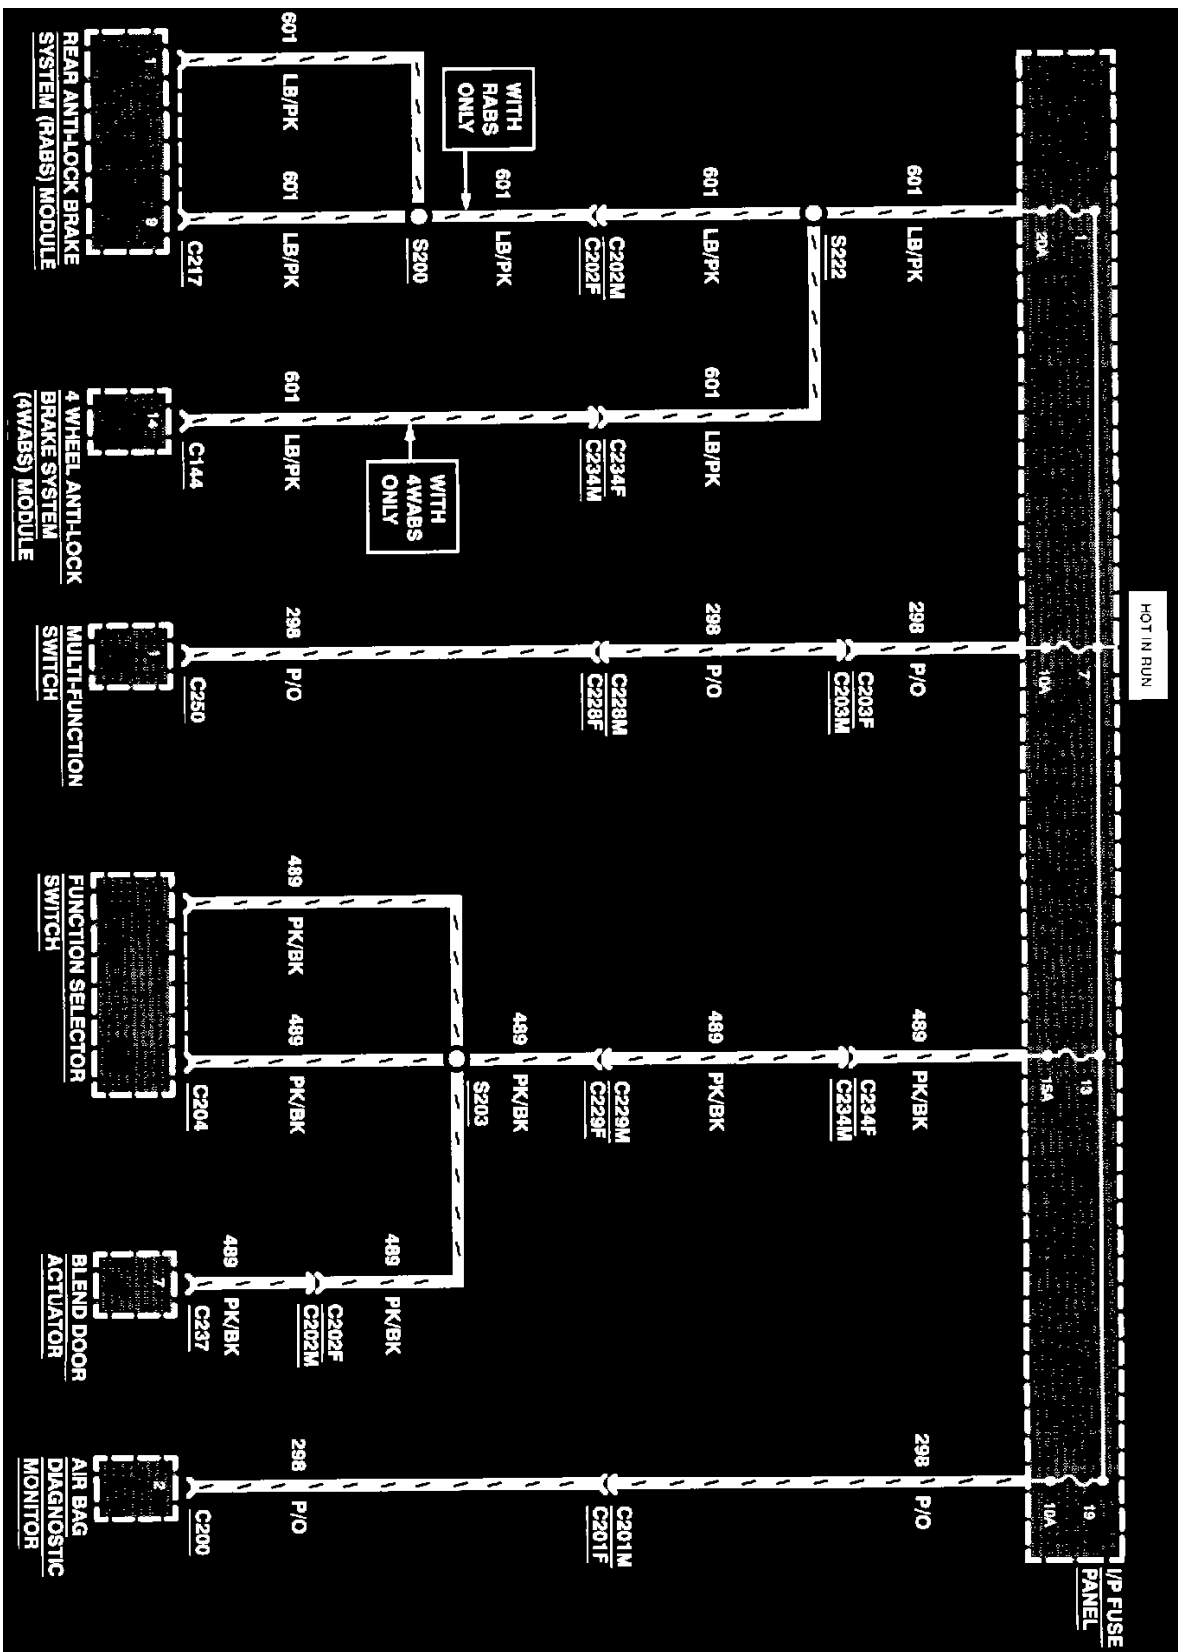


Power Distribution


Fuse 14

Fuse 14 - protects the following circuits:

- ^ Instrument Cluster
- ^ Air Bag
- ^ Alternator Lamps

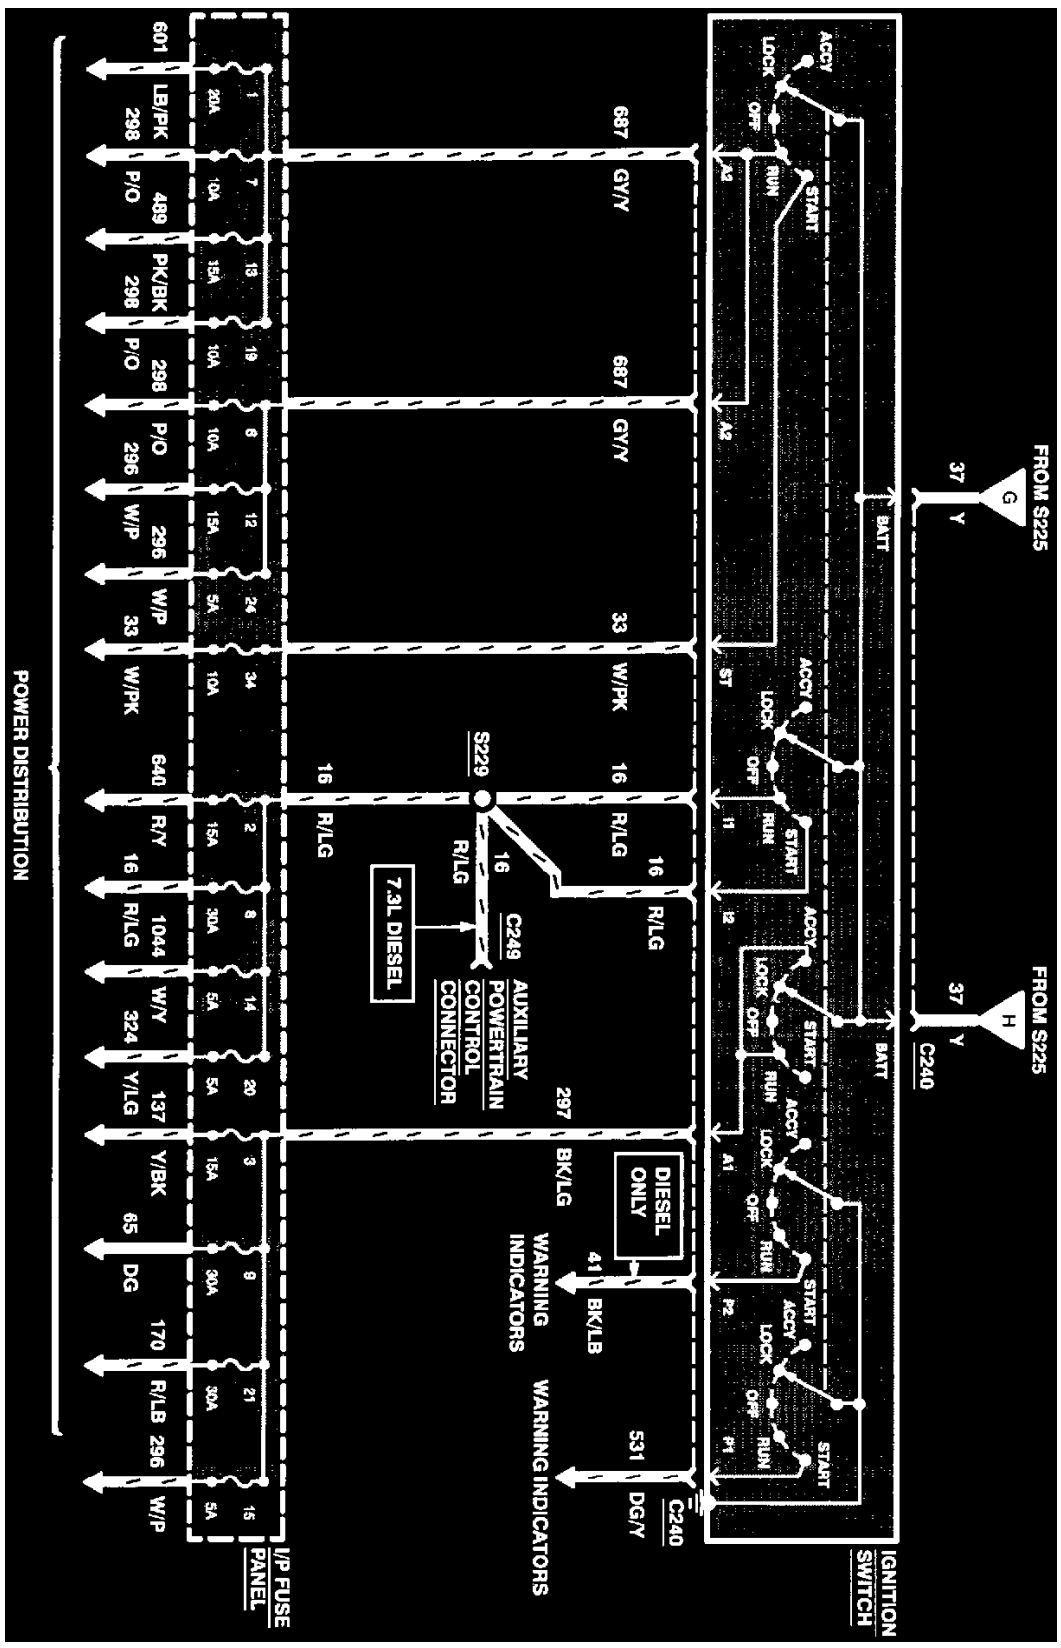

Power Distribution

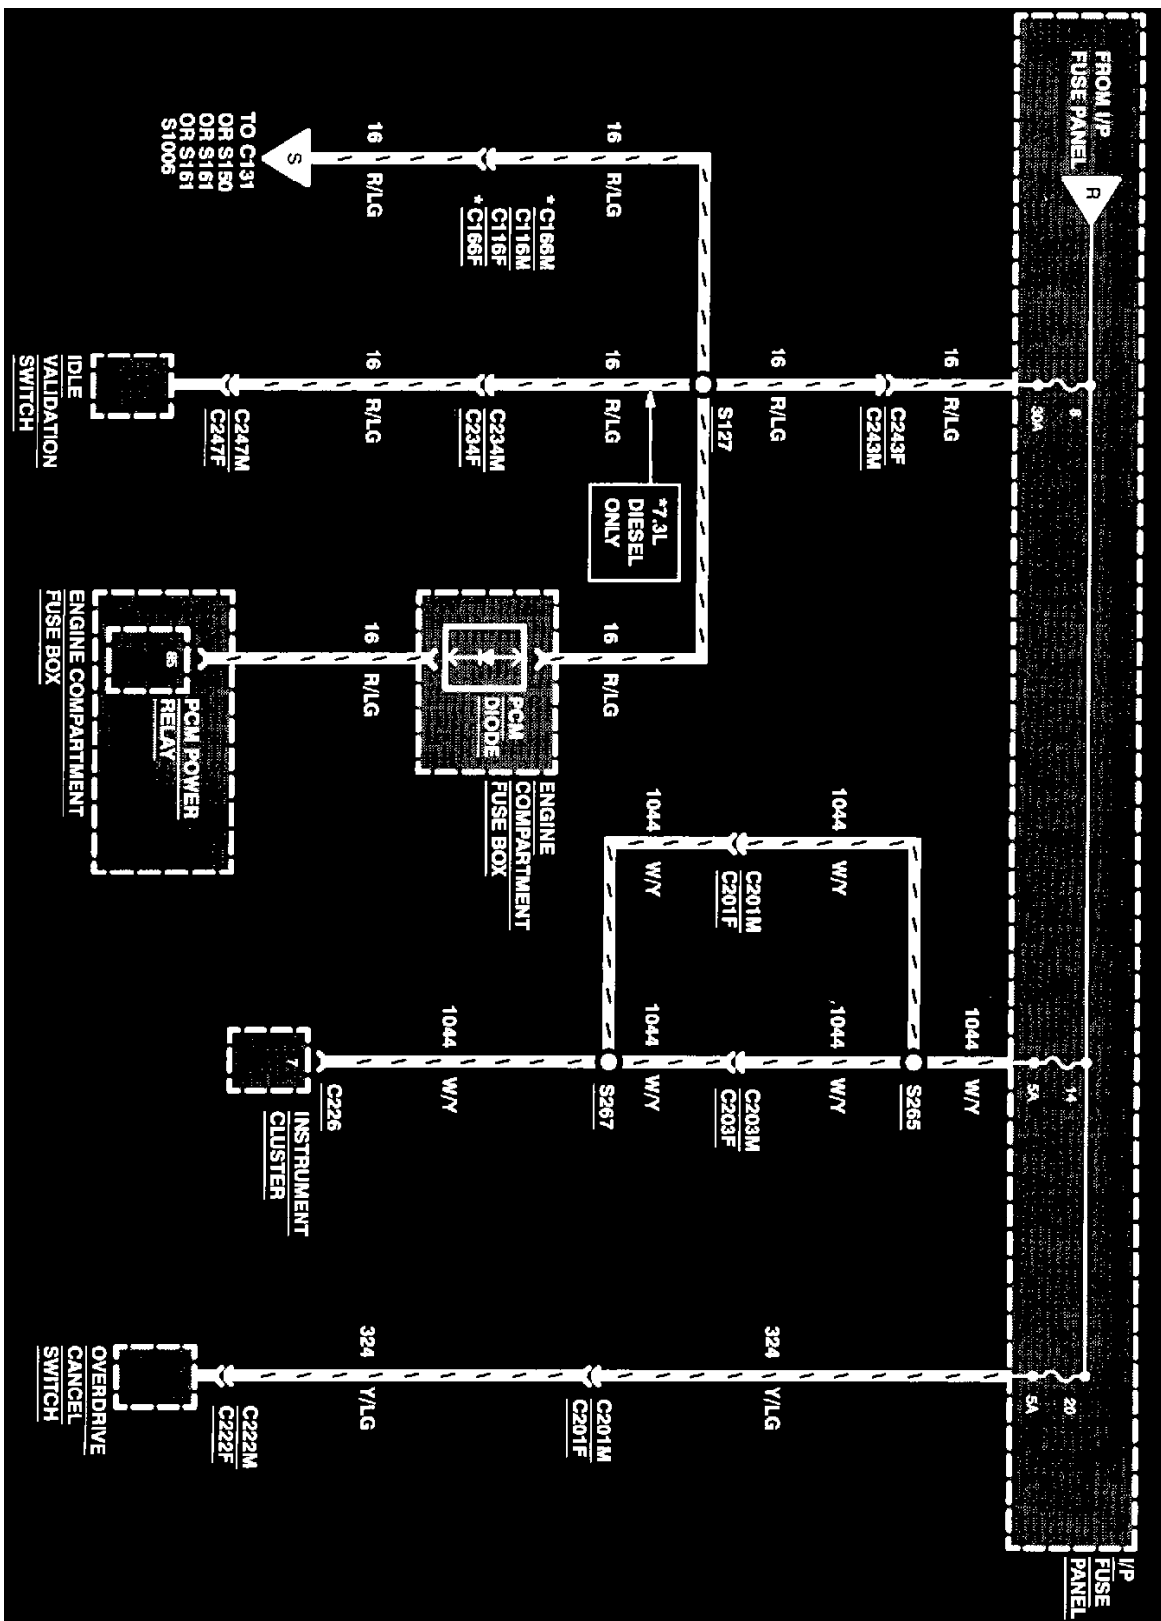


Power Distribution

Fuse 15

Fuse 15 - protects the following circuits:

- ^ Trailer Battery Charge Relay

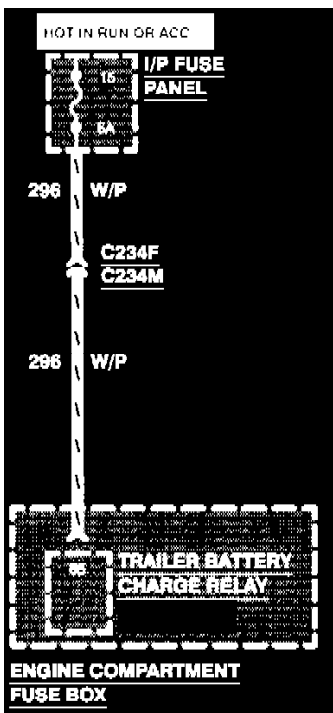


Power Distribution

Fuse 16

Fuse 16 - protects the following circuits:

- ^ Power Seats

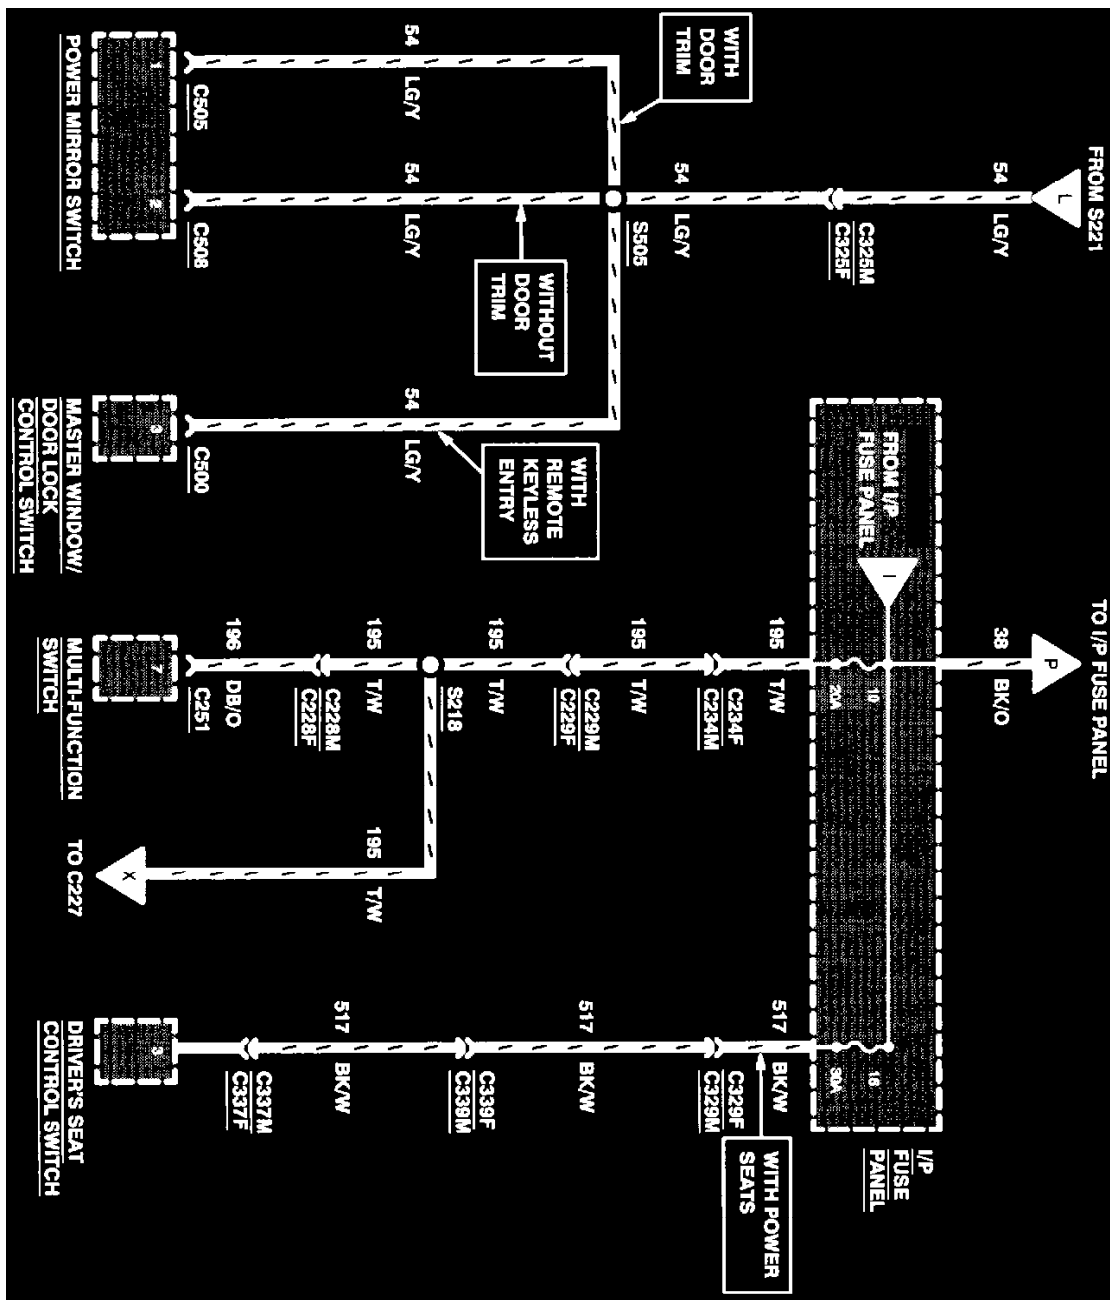


Power Distribution

Fuse 19

Fuse 19 - protects the following circuits:

- ^ Air Bag Diagnostic Monitor

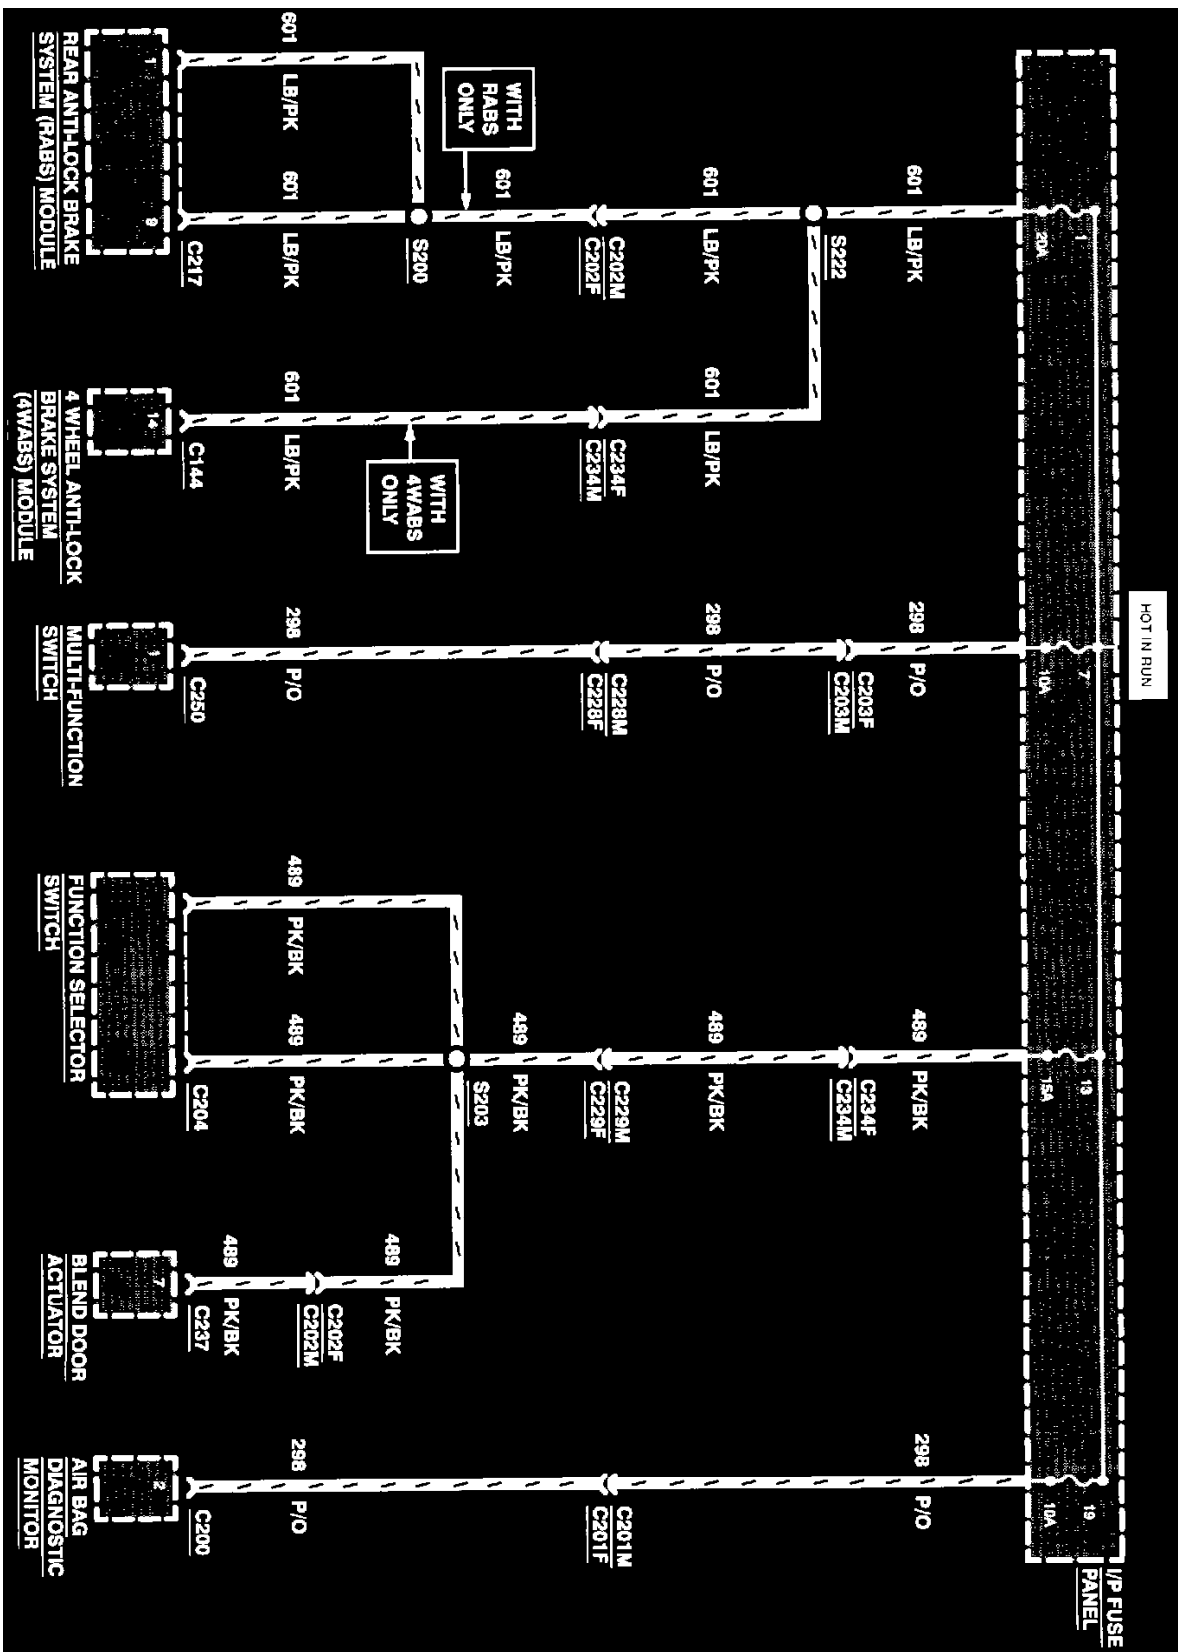


Power Distribution

Fuse 20

Fuse 20 - protects the following circuits:

- ^ Overdrive Cancel Switch

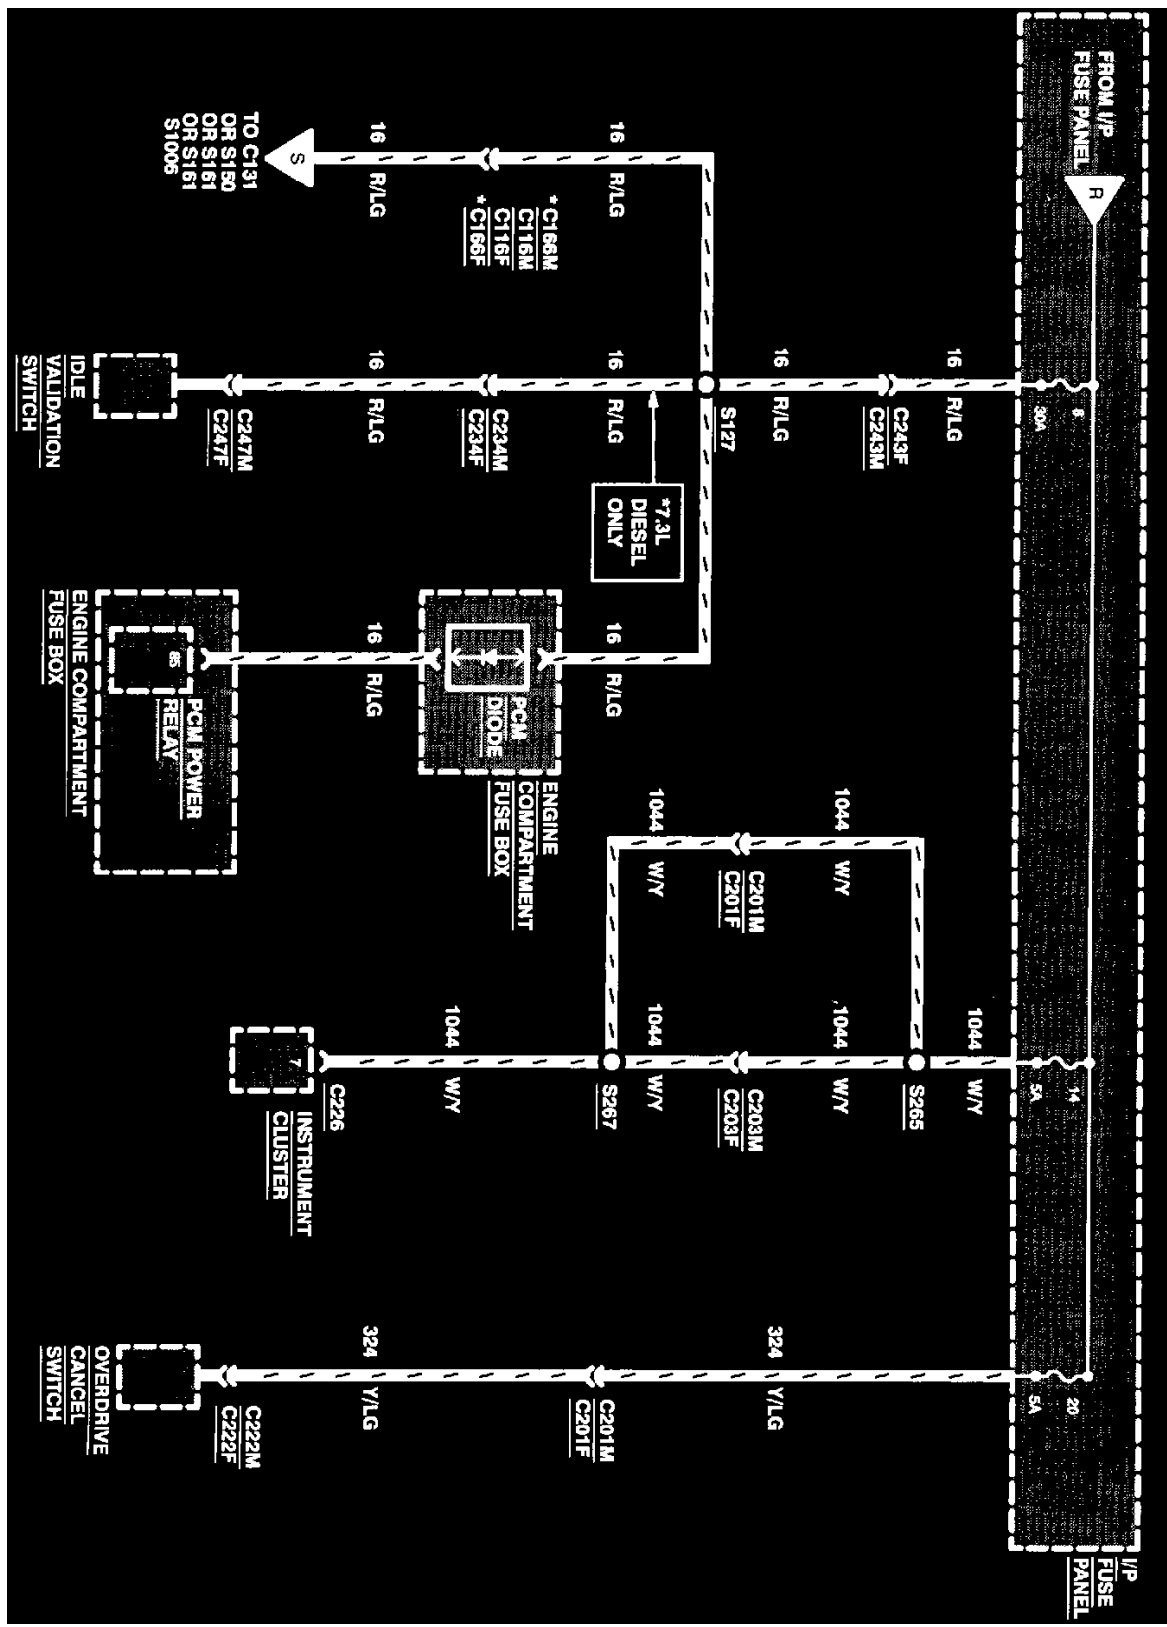


Power Distribution


Fuse 21

Fuse 21 - protects the following circuits:

- ^ Power Windows

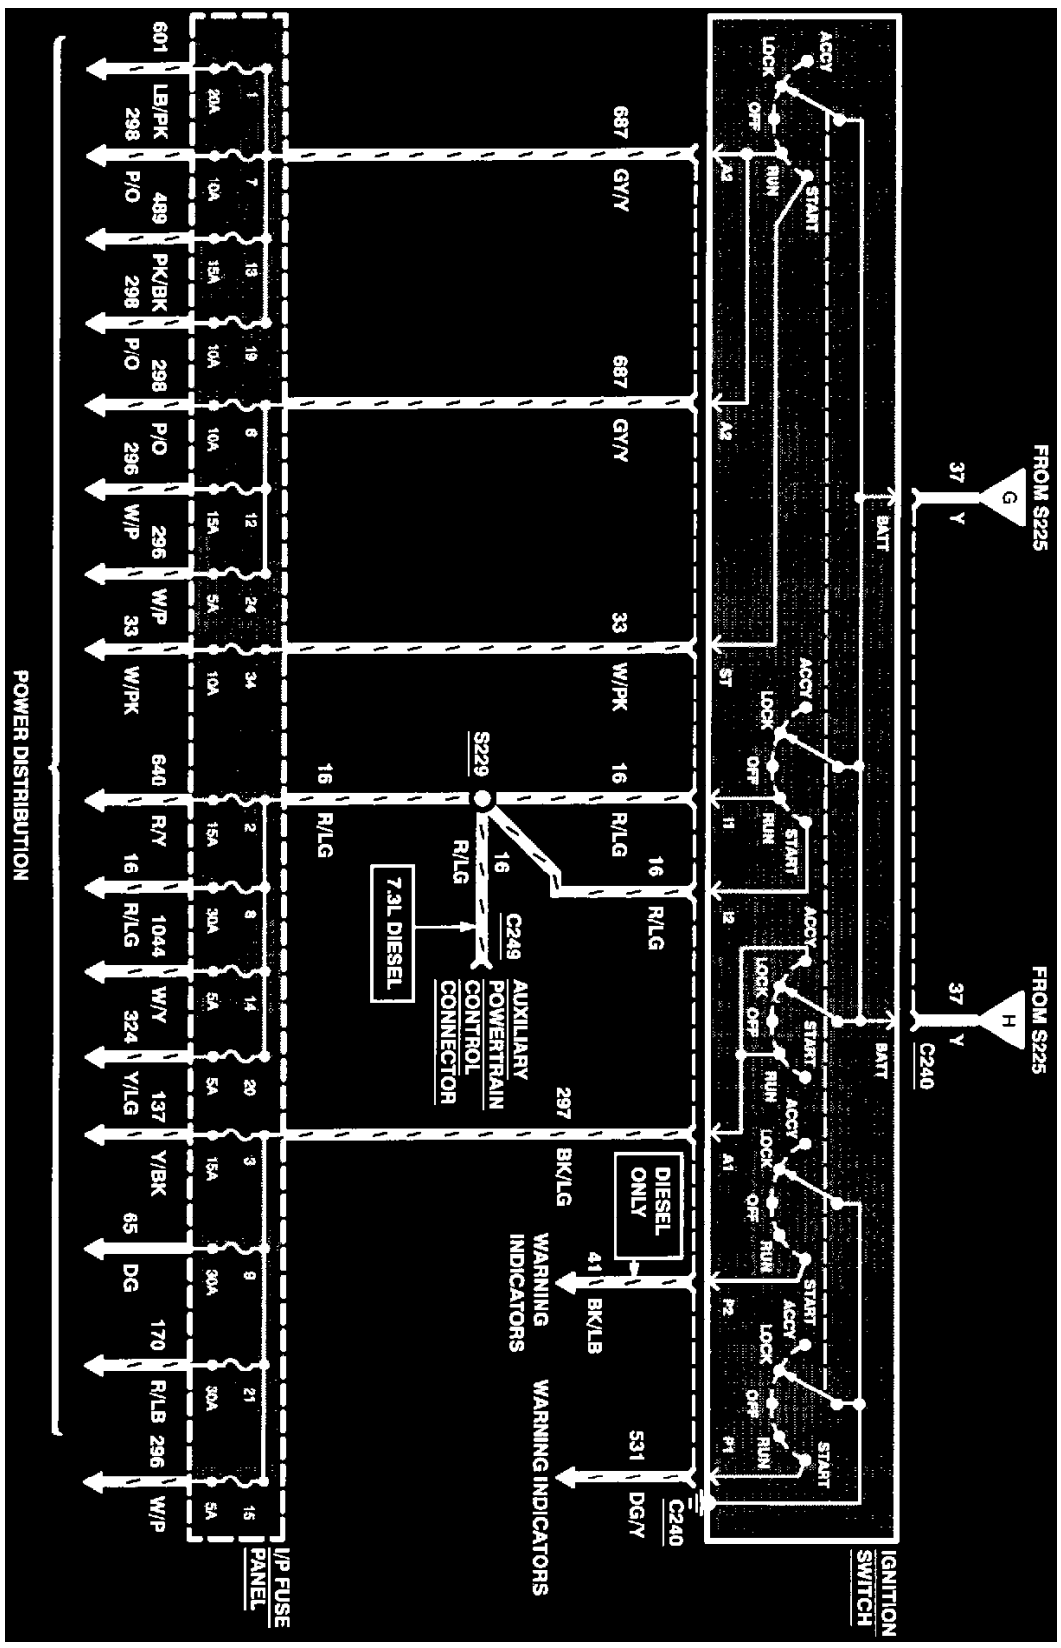

Power Distribution

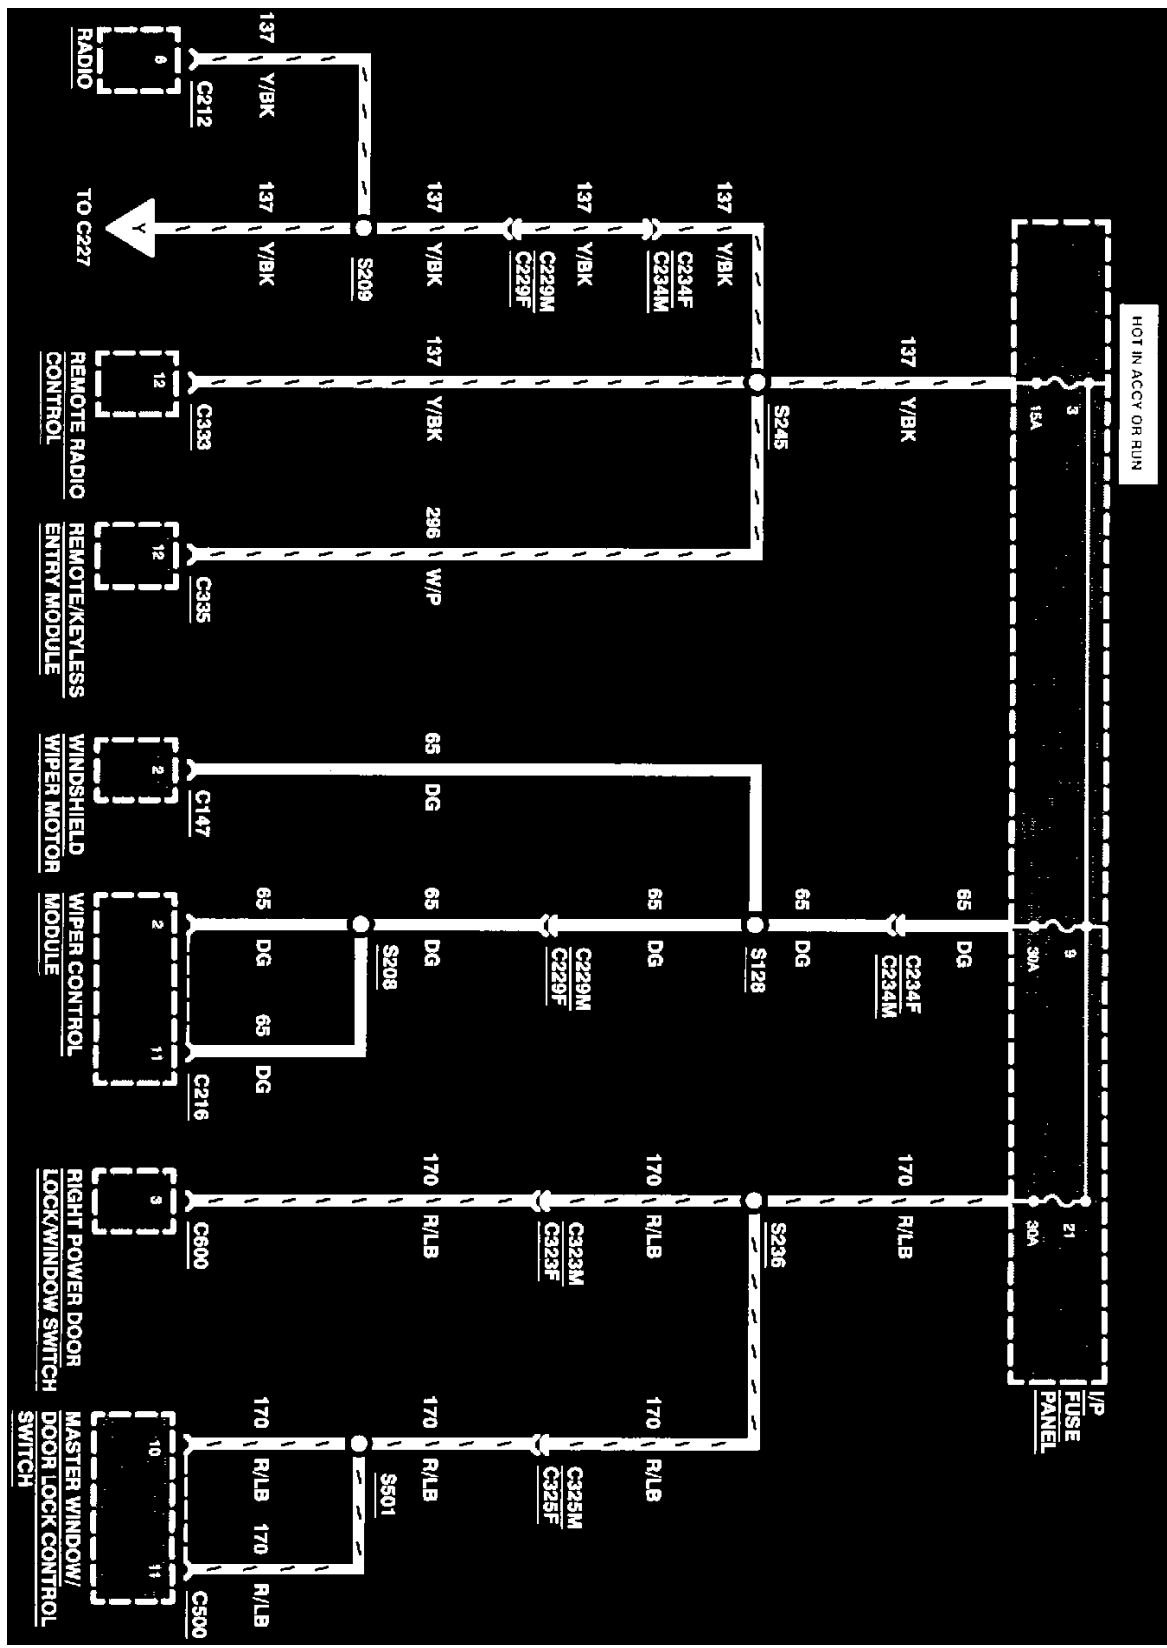


Power Distribution

Fuse 23

Fuse 23 - protects the following circuits:

- ^ Cigar Lighter
- ^ Data Link Connector

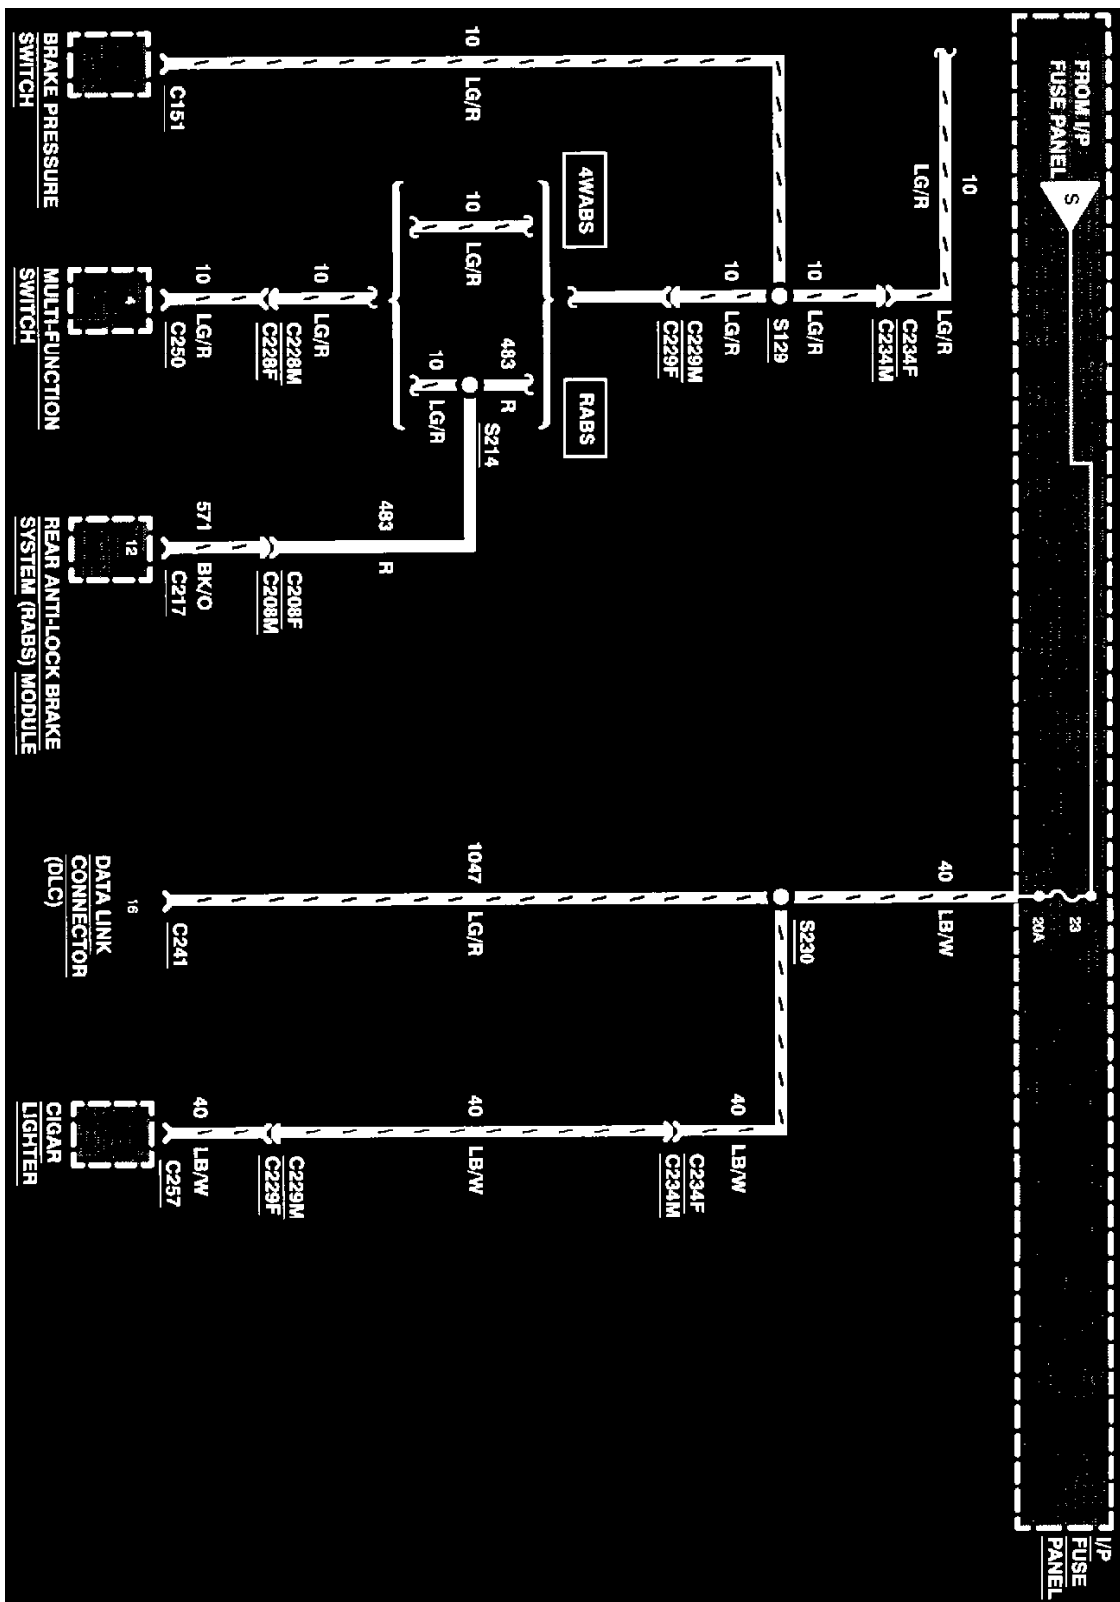


Power Distribution


Fuse 24

Fuse 24 - protects the following circuits:

- ^ Illuminated Entry Module

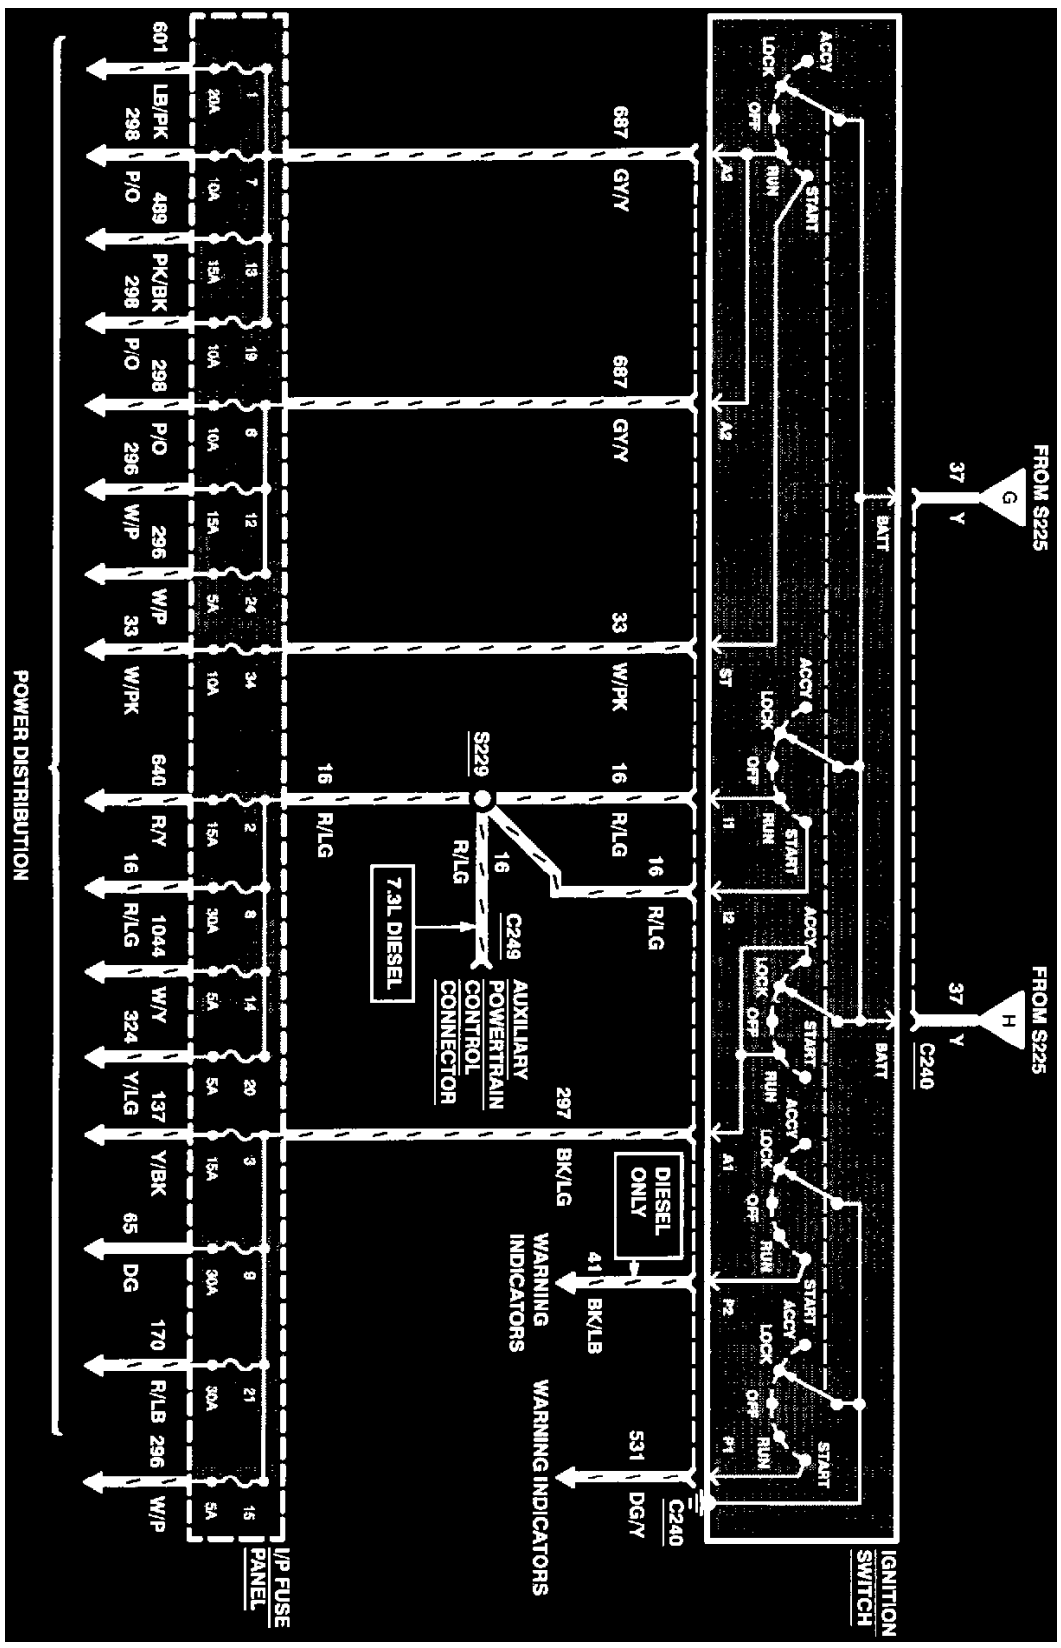

Power Distribution

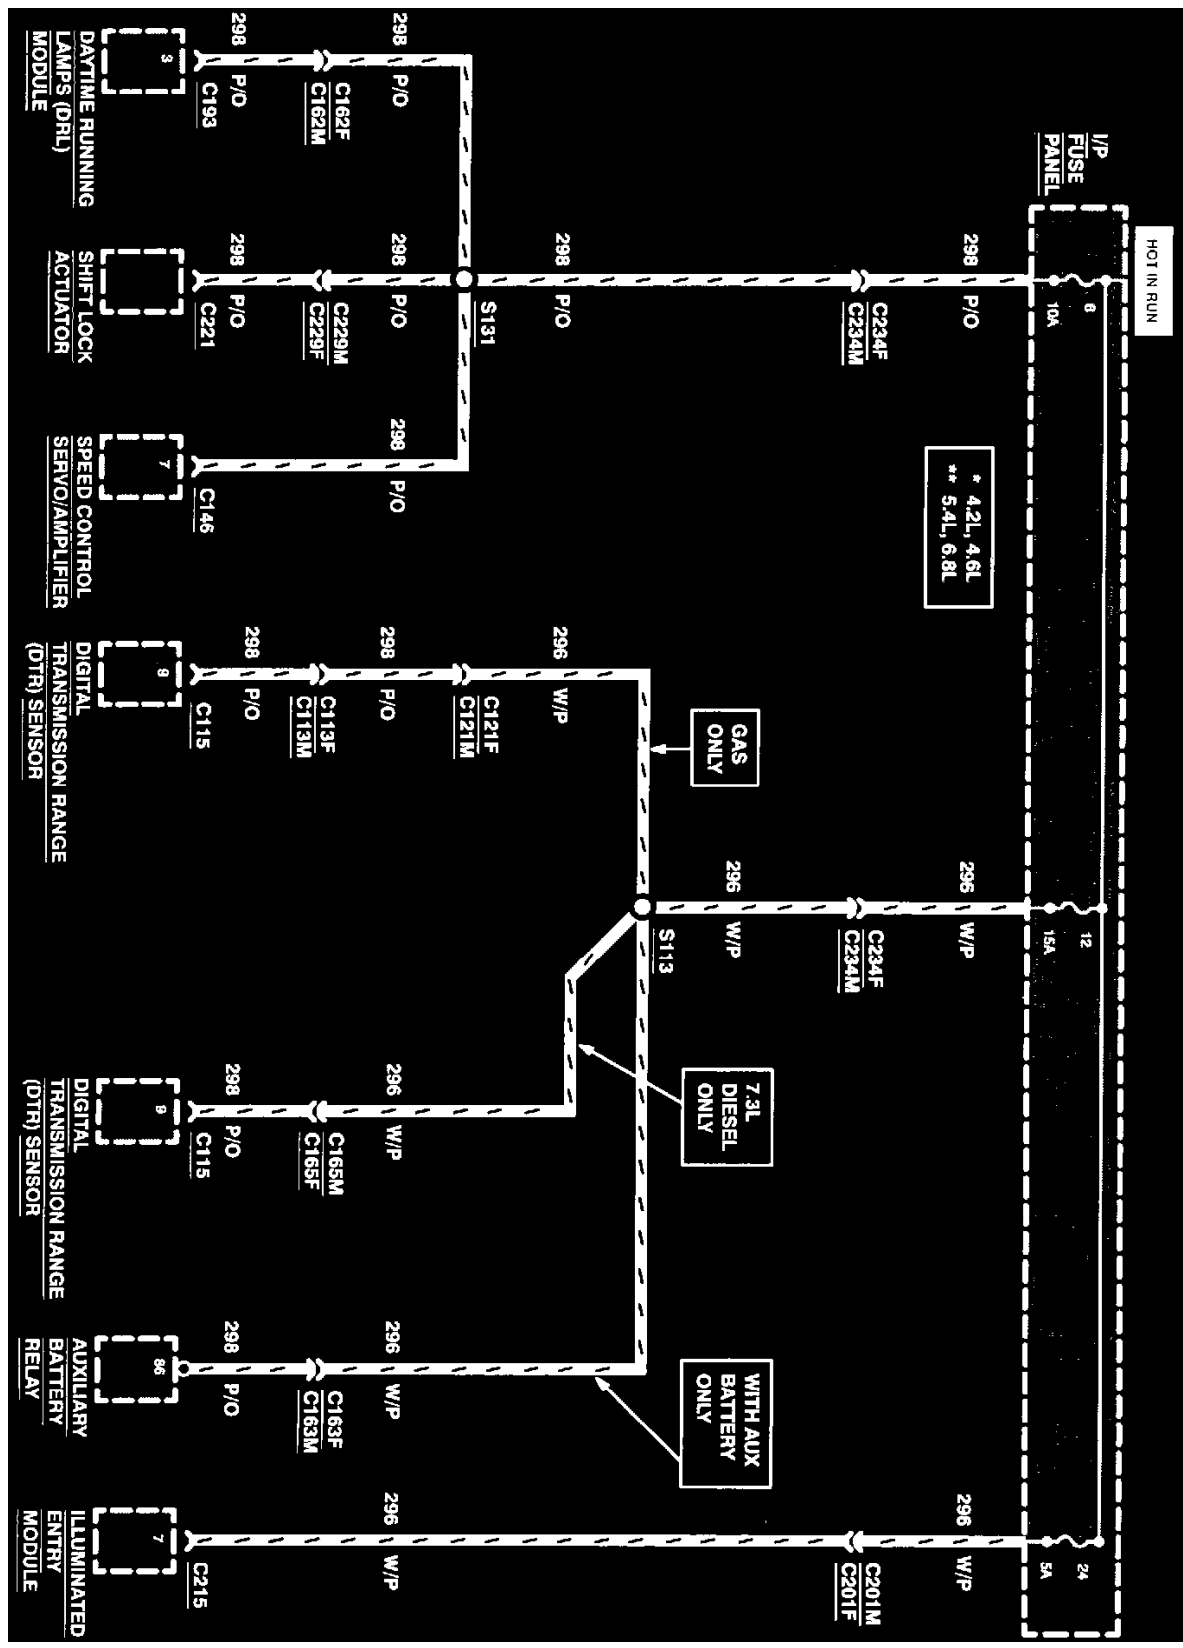


Power Distribution

Fuse 28

Fuse 28 - protects the following circuits:


- ^ Instrument Panel Power Point

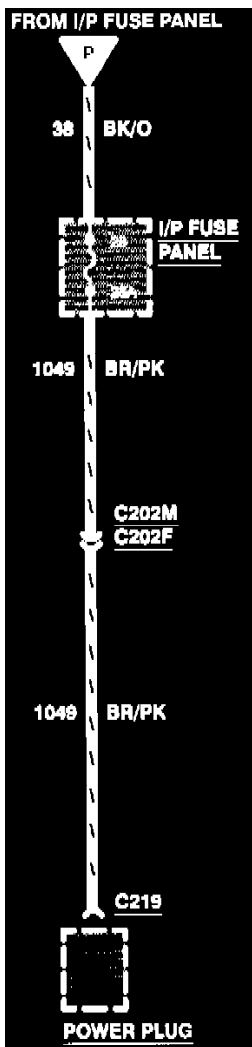


Power Distribution

Fuse 34

Fuse 34 - protects the following circuits:
^ Transmission Range Sensor

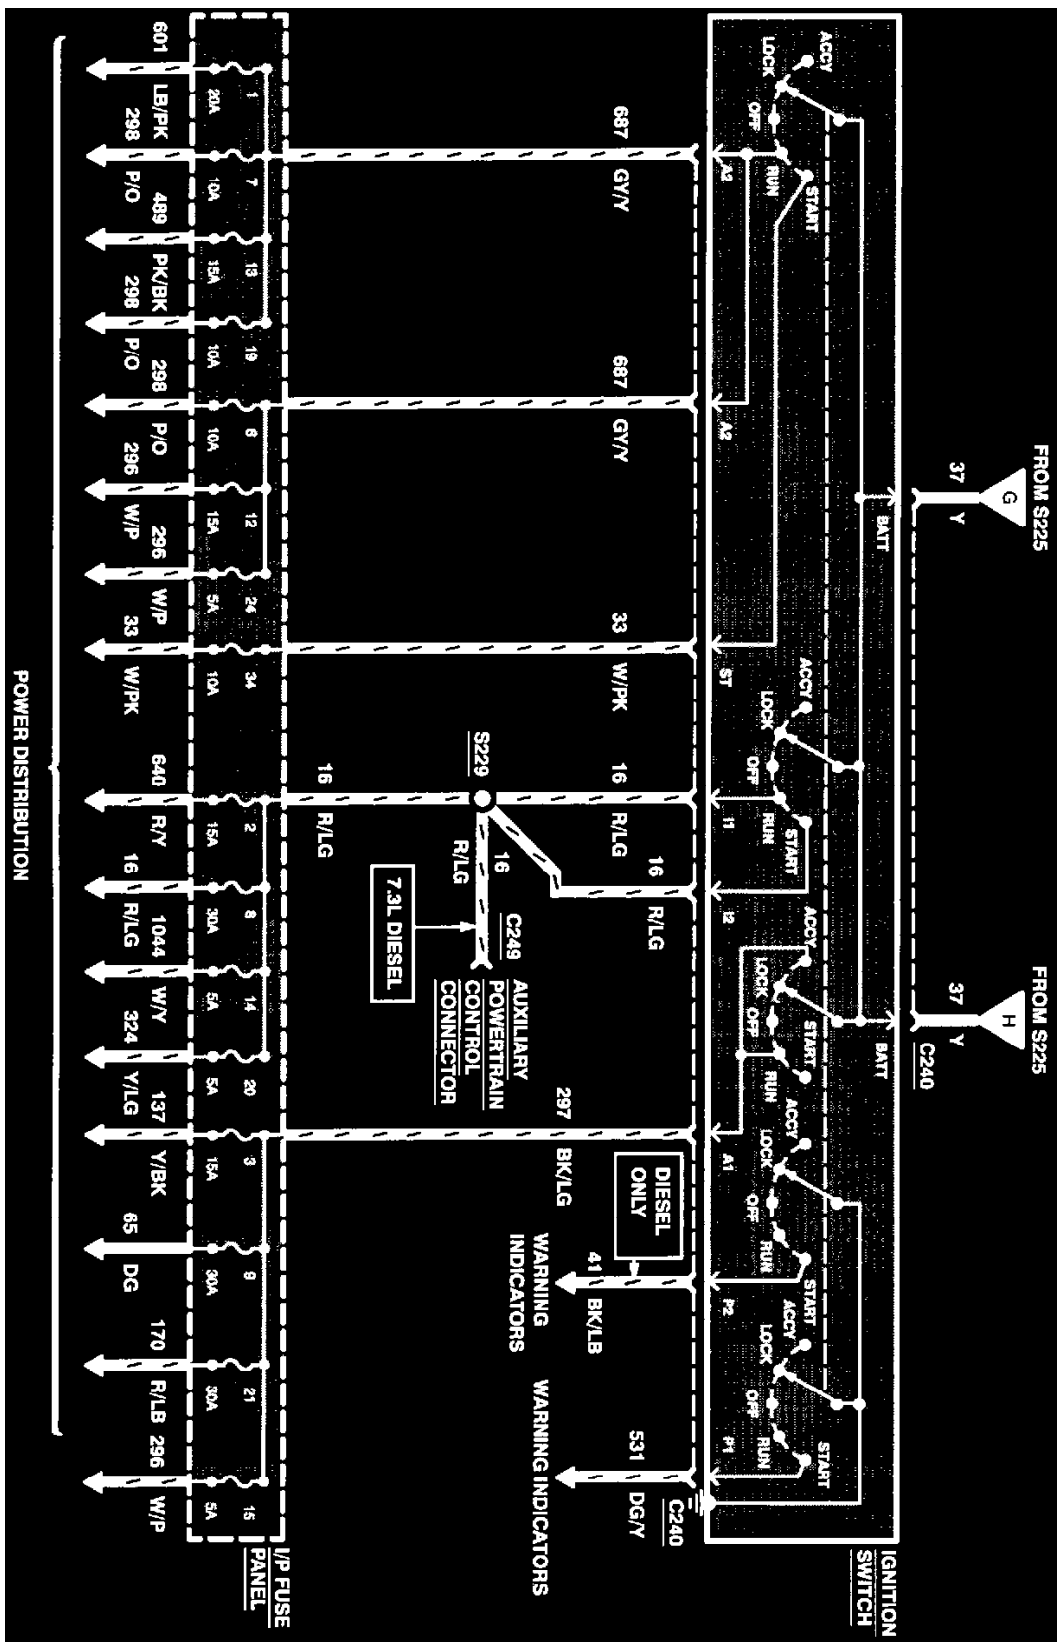

Power Distribution

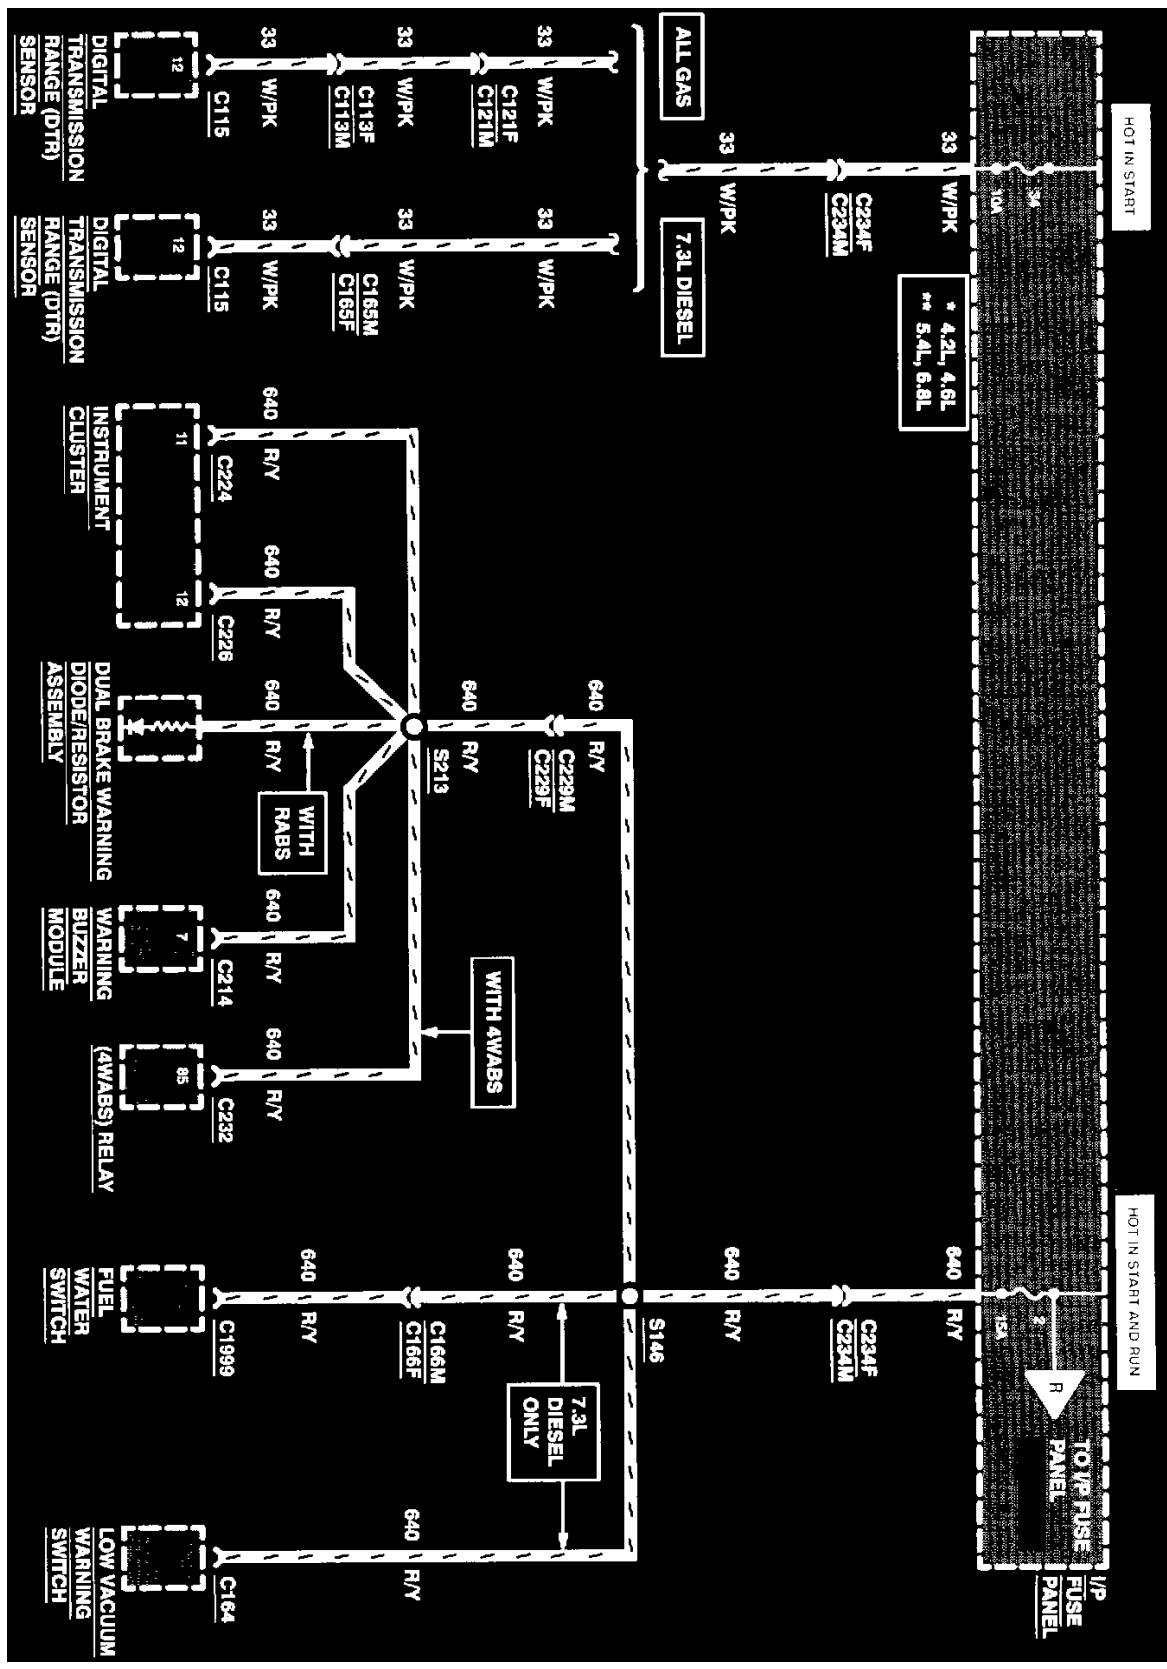


Power Distribution


Fuse 36

Fuse 36 - protects the following circuits:

- ^ Cluster
- ^ A/C
- ^ Illumination
- ^ Radio
- ^ Steering Column Assembly

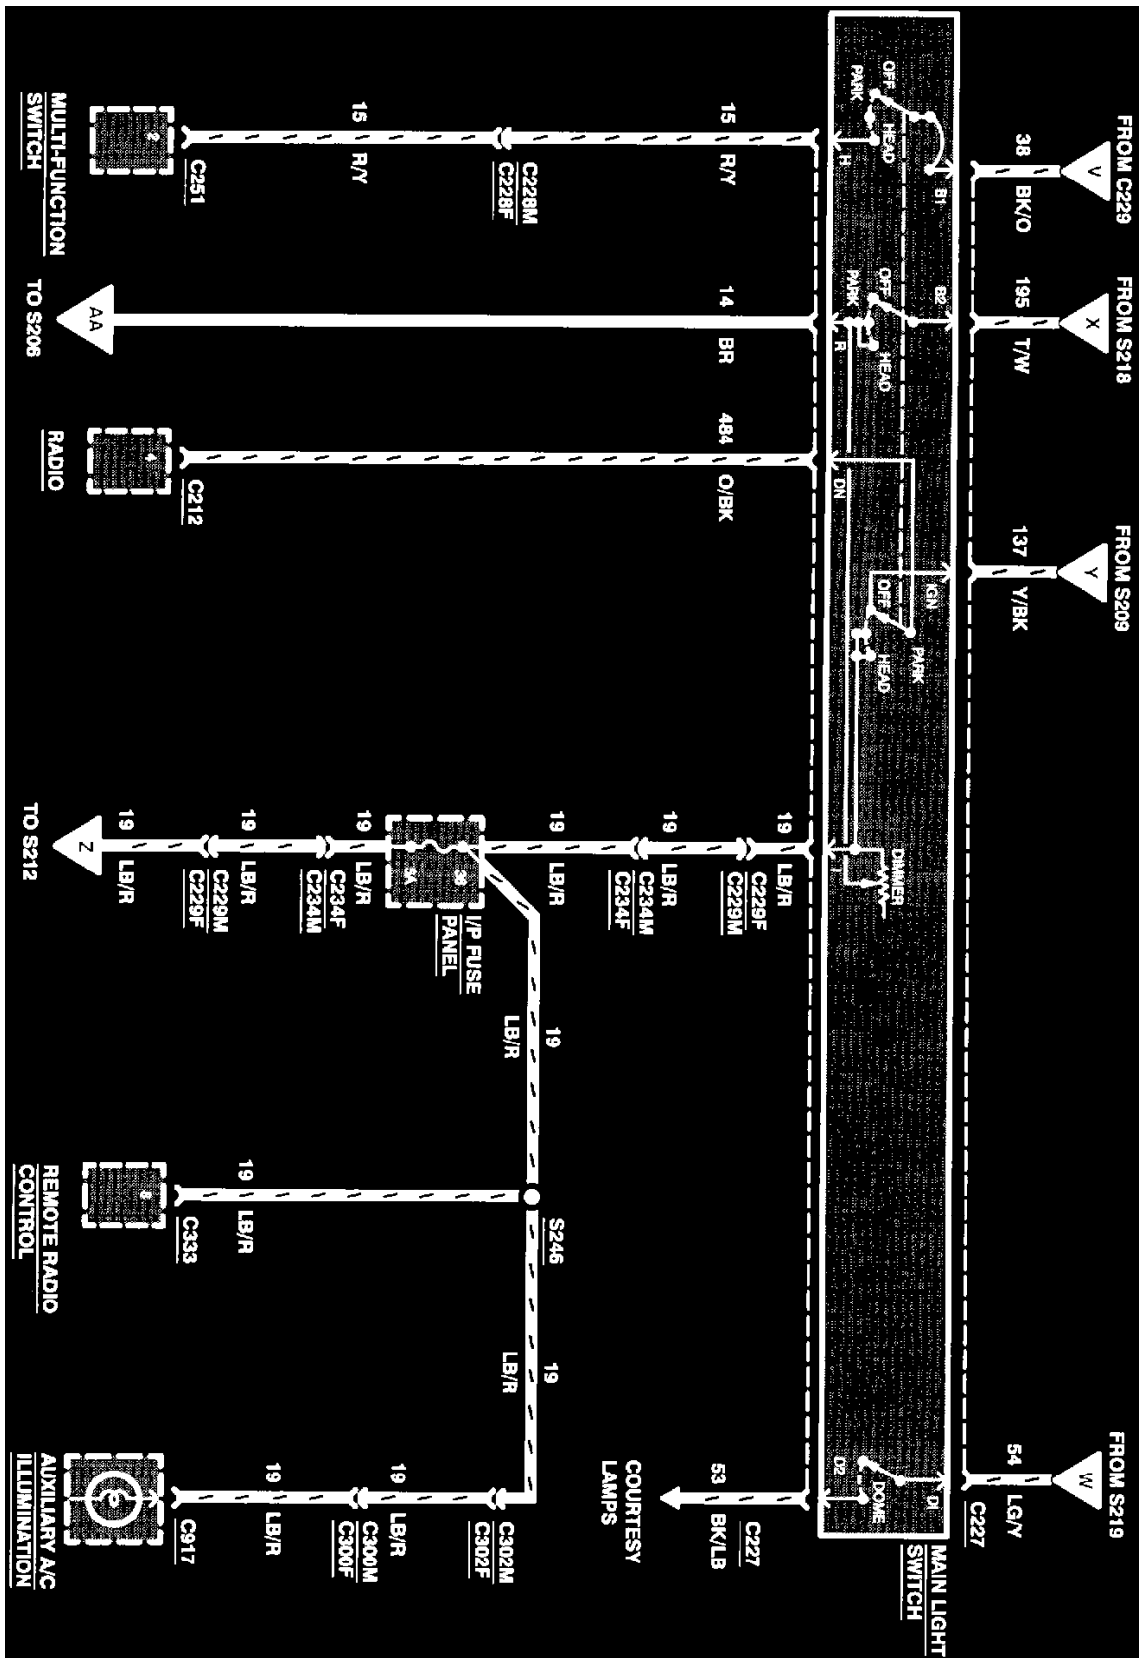

Power Distribution

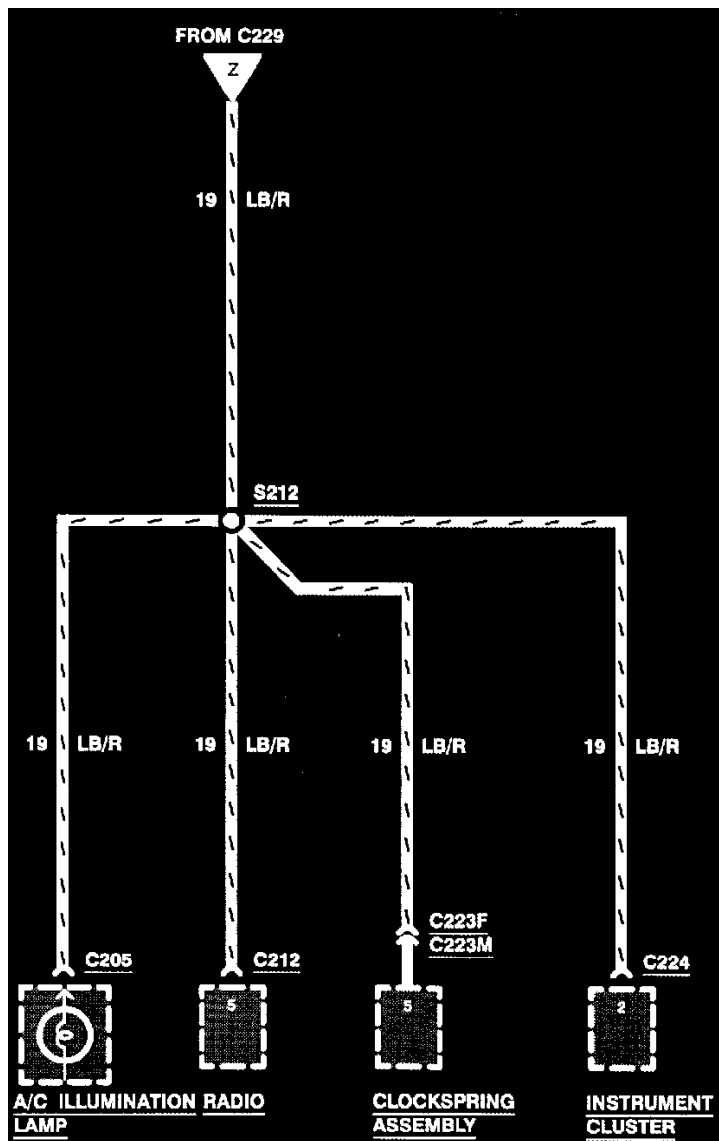


Power Distribution


Fuse 38

Fuse 38 - protects the following circuits:

- ^ Air Bag Monitor

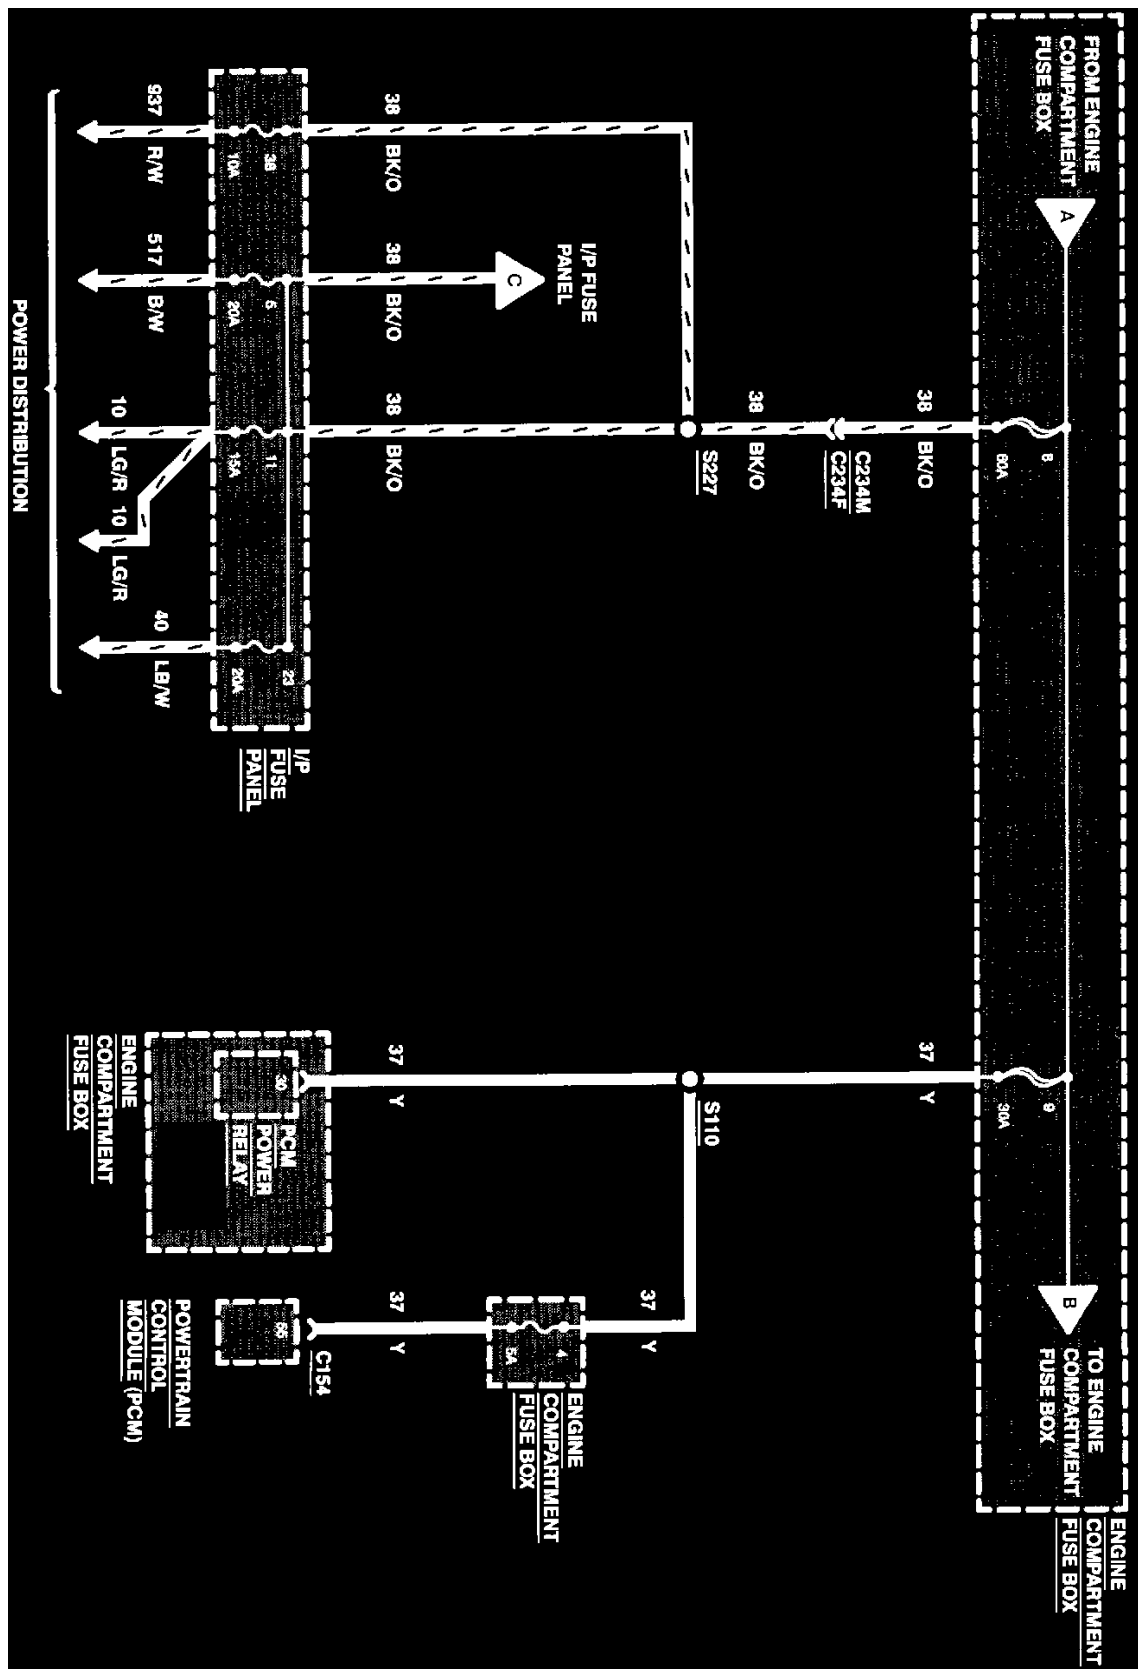

Power Distribution

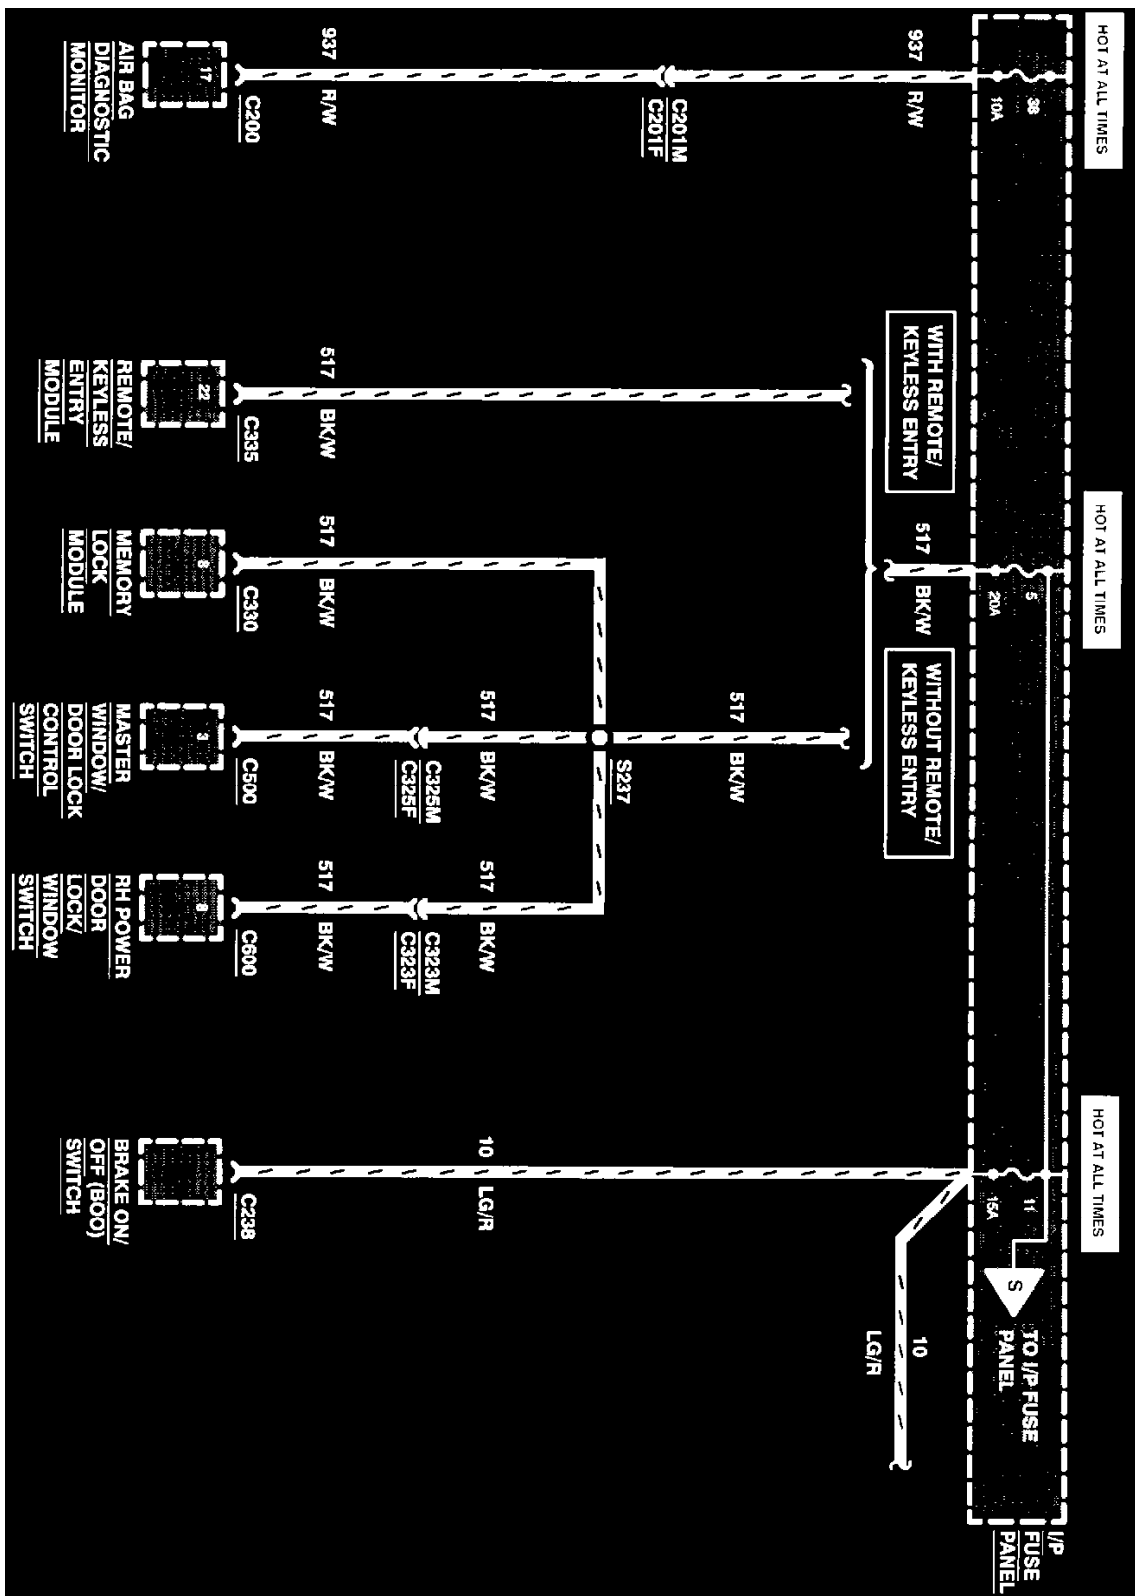


Power Distribution

Fuse 40

Fuse 40 - protects the following circuits:

- ^ Modified Vehicle

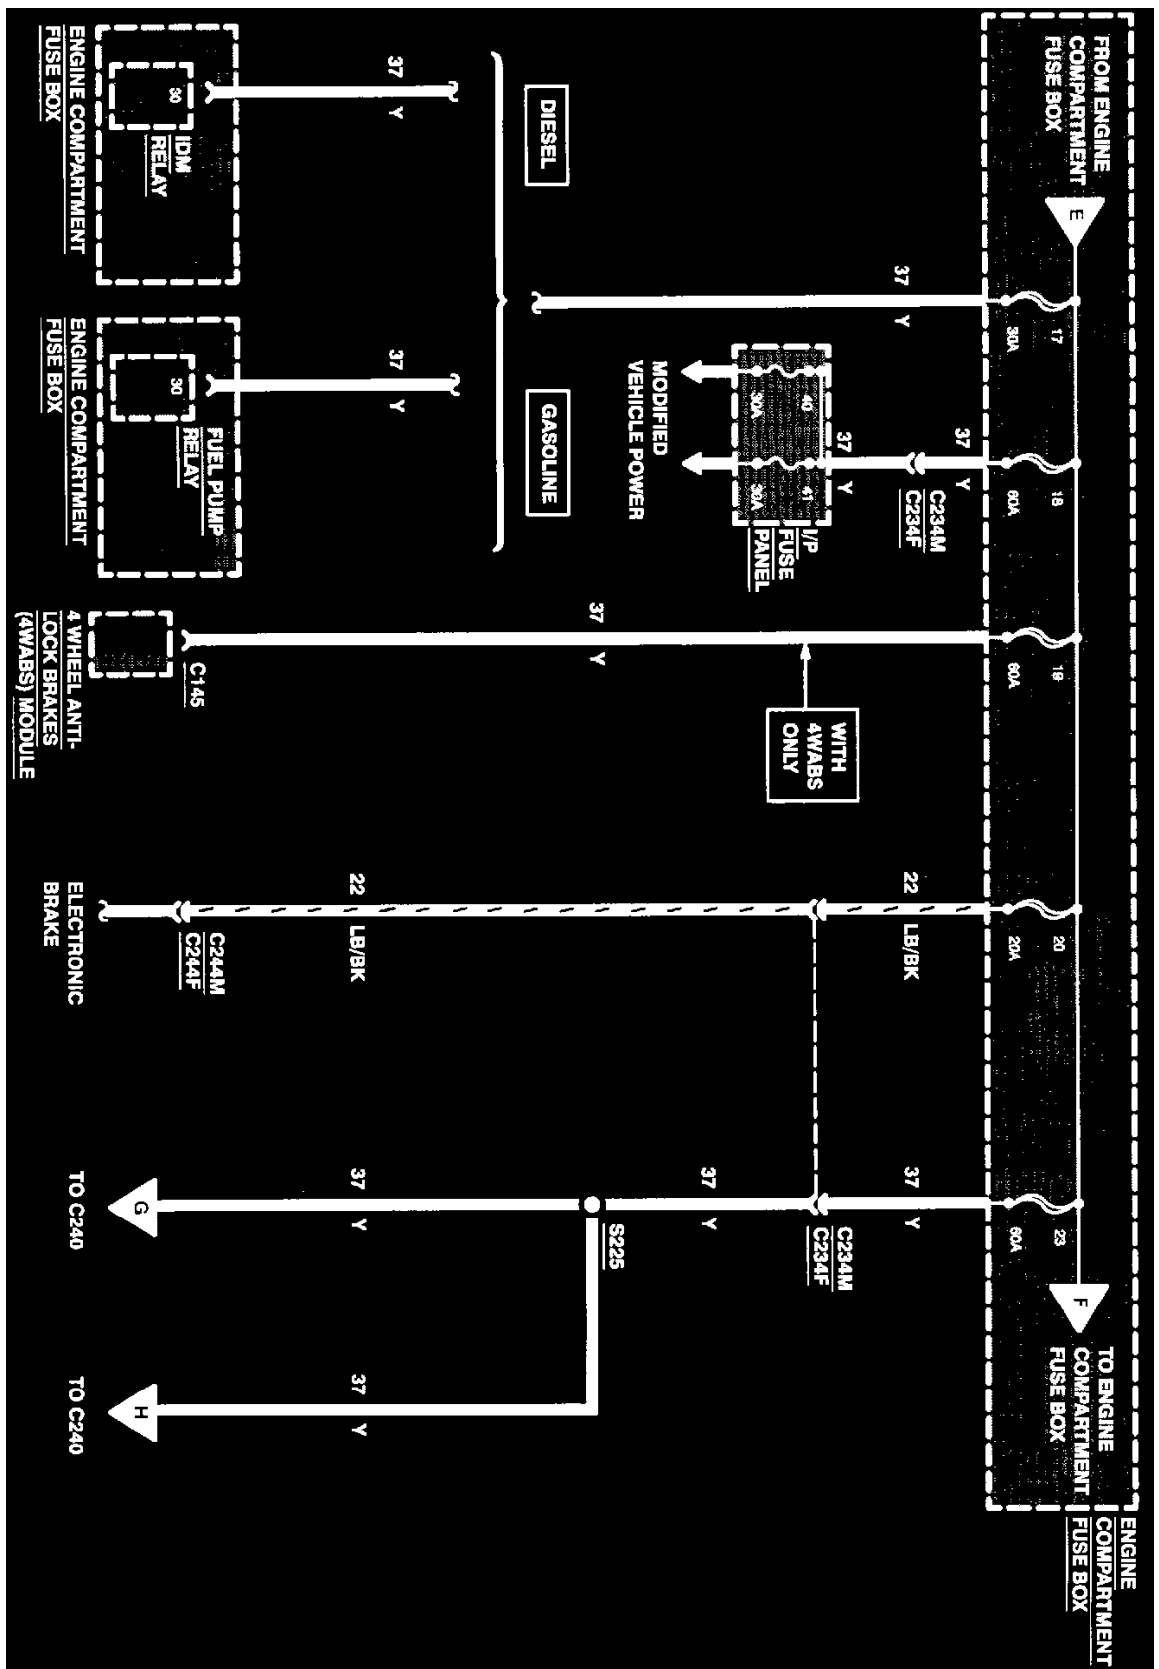

Power Distribution