



Automatic Transmission Dipstick - Dipstick Tube: Service and Repair

Removal


1. Disconnect the battery.

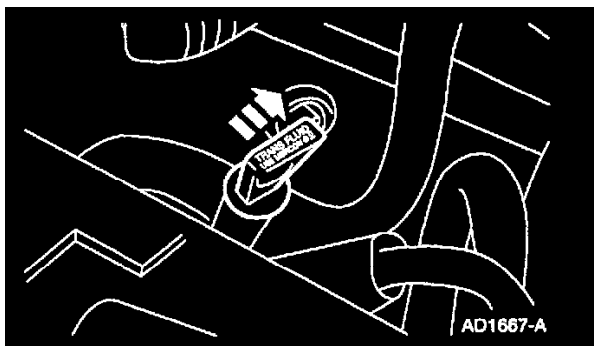

2. Remove the fluid level indicator.
3. Raise the vehicle on a hoist.
4. Remove the RT front wheel.

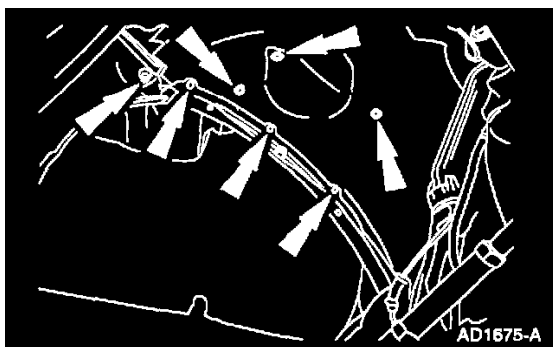


5. Remove the inner wheel liner.

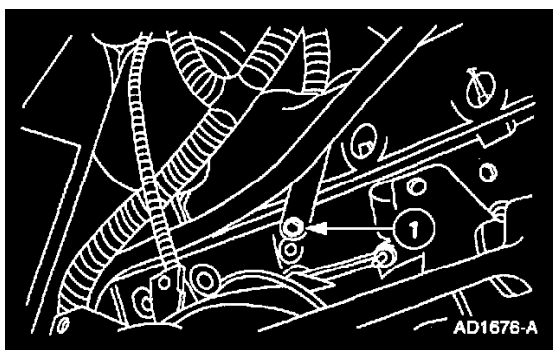

6. Remove the bolt.


7. **NOTE:** It may be necessary to disconnect the wiring harness from the starter motor to remove the oil filler tube.

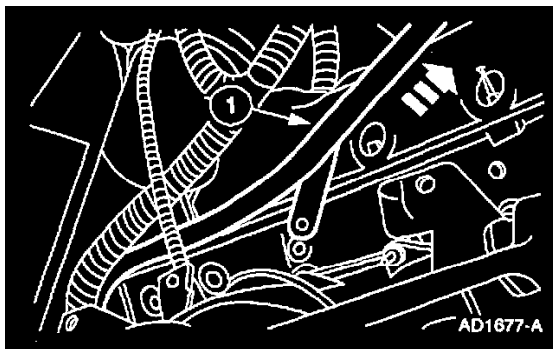


Remove the oil filler tube.

Installation


1. **NOTE:** Coat the O-ring at the bottom of the oil filler tube with transmission fluid. If removed install the starter wiring harness.

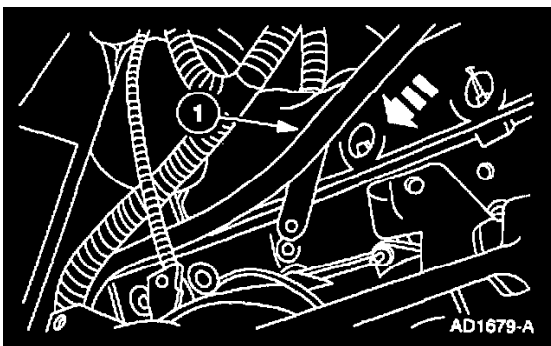


Install the oil filler tube.

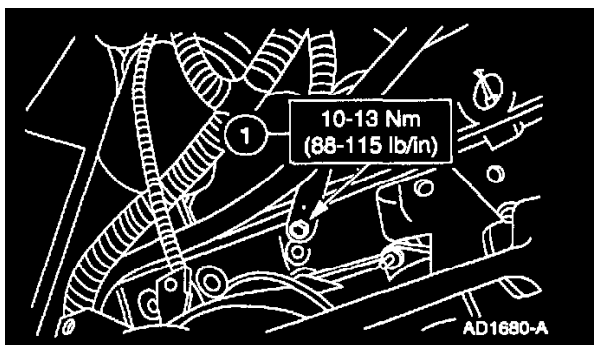

2. Install the bolt.

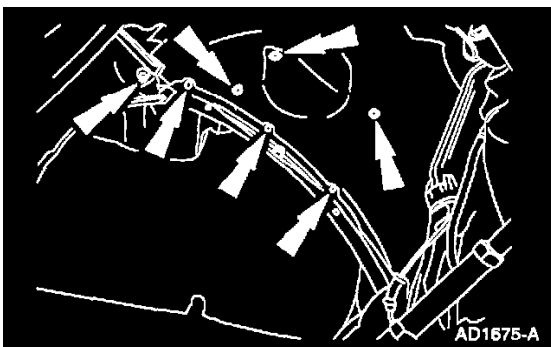

3. Install the inner wheel liner.
4. Install the RT front wheel.
5. Lower the vehicle.

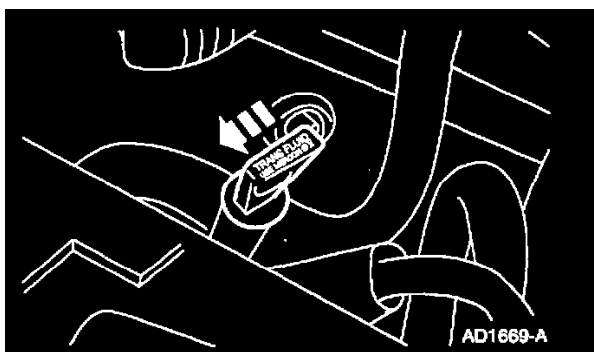

6. Install the fluid level indicator.
7. Connect the battery ground cable.