


Shift Cable: Adjustments


Cable Adjustment

NOTE: The 4R70W transmission is shown, this procedure is also used for the 4R100 transmission.


1. Place the transmission range selector lever in the (D) position.
^ Place a three-pound weight on the transmission range selector lever.
2. Raise and support the vehicle.

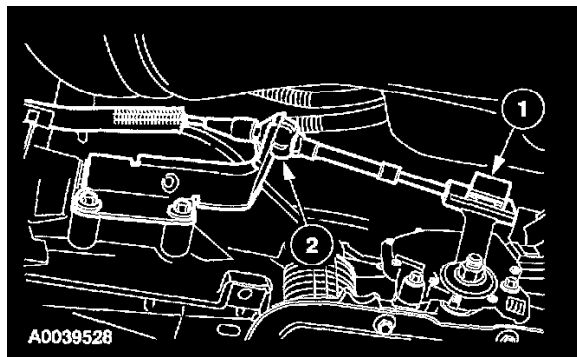


3. Disconnect the shift cable at the manual control lever.
 - 1 Disconnect the cable at the manual control lever.
 - 2 Verify the shift cable is locked in the shift cable bracket.

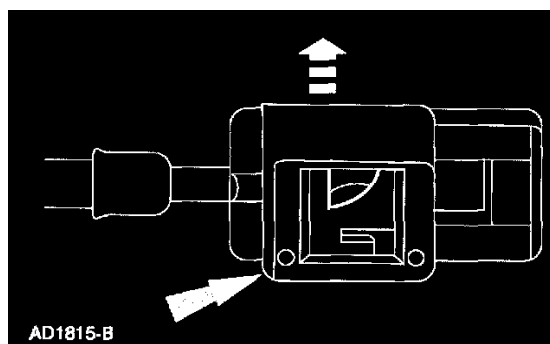


4. Unlock the lock tab on the transmission shift cable.

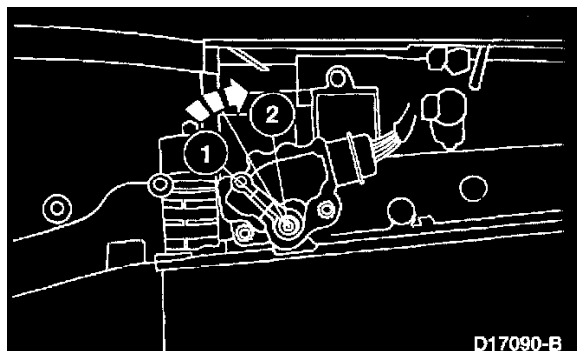

5. Verify the manual control lever is in the (D) position.
 - 1 Place the manual control lever in the first gear position.
 - 2 Move the manual control lever two detents to the (D) position.

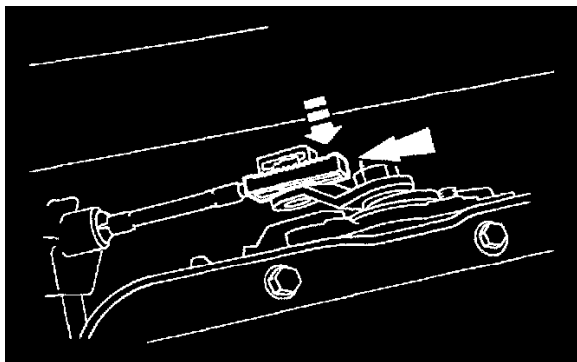

6. Connect the transmission shift cable to the manual control lever.

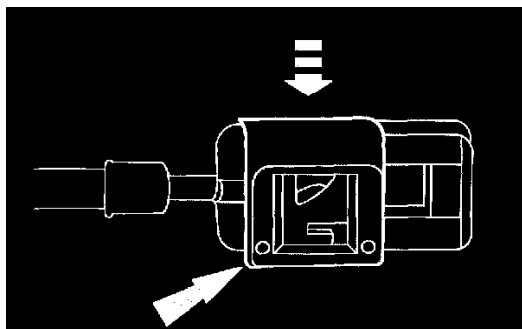

7. Lock the shift cable lock tab.
8. Lower the vehicle.
9. Remove the three-pound weight.
10. Carefully move the transmission range selector lever from detent to detent and compare with the transmission settings.
^ Readjust if necessary.