



# Shifter A/T: Service and Repair

## Selector Lever

### Removal and Installation

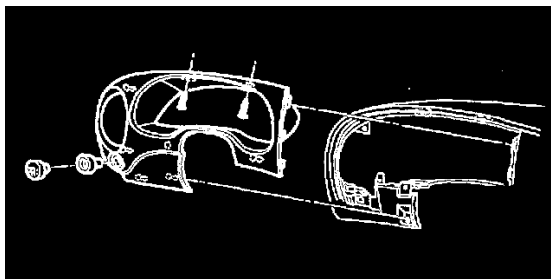


1. Remove the instrument panel cluster opening finish panel assembly.

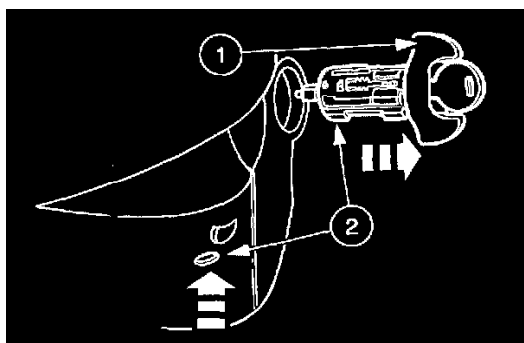


2. Remove the ignition switch lock cylinder.

- 1 Position the lock cylinder to RUN.

- 2 Using a suitable tool, push upward on the cylinder release tab through the hole in the lower shroud while pulling the cylinder outward.

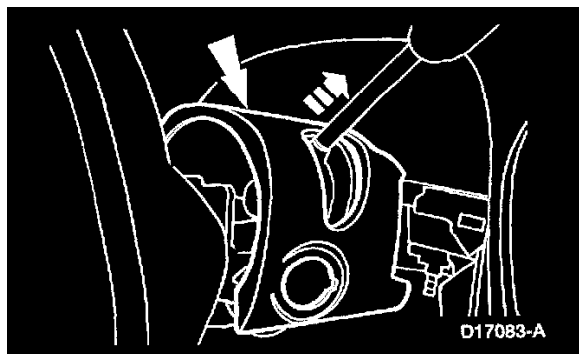

3. Remove the upper steering column shroud.

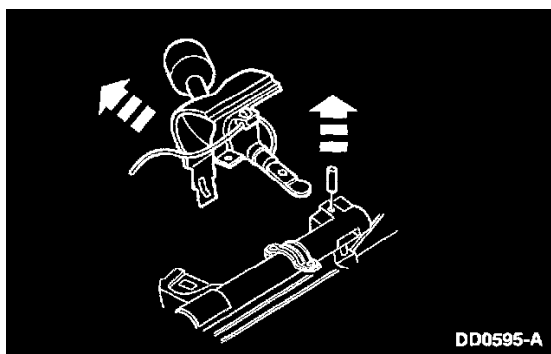

4. Remove the transmission range selector lever. Disconnect the electrical connector.

5. **NOTE:** Install a new transmission range selector lever pin whenever it is removed.

To install, reverse the removal procedure.