



# Fuse Block: Locations Battery Junction Box (BJB)

Engine compartment - 3.0L (2 of 2)

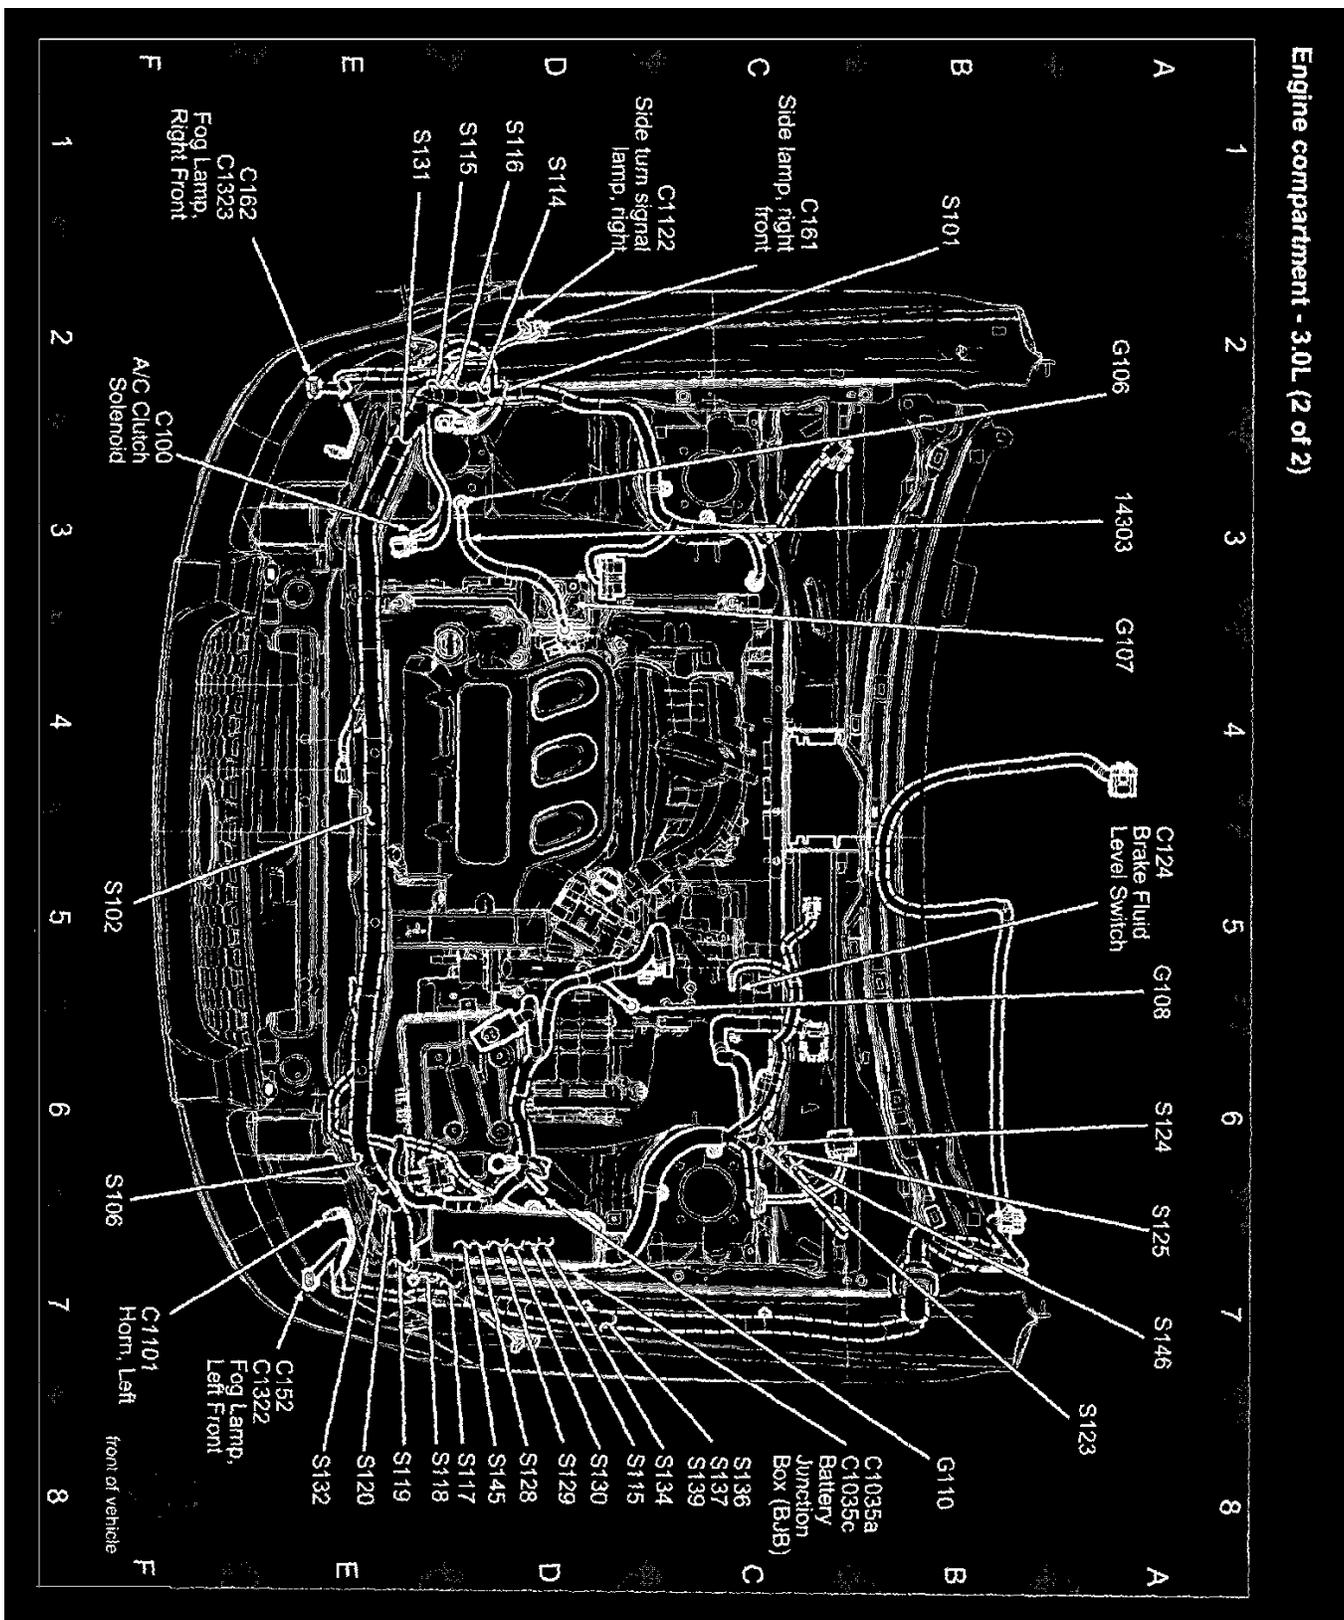

View 151-2 (Engine Compartment - 3.0L (2 Of 2))

3.0L engine, front

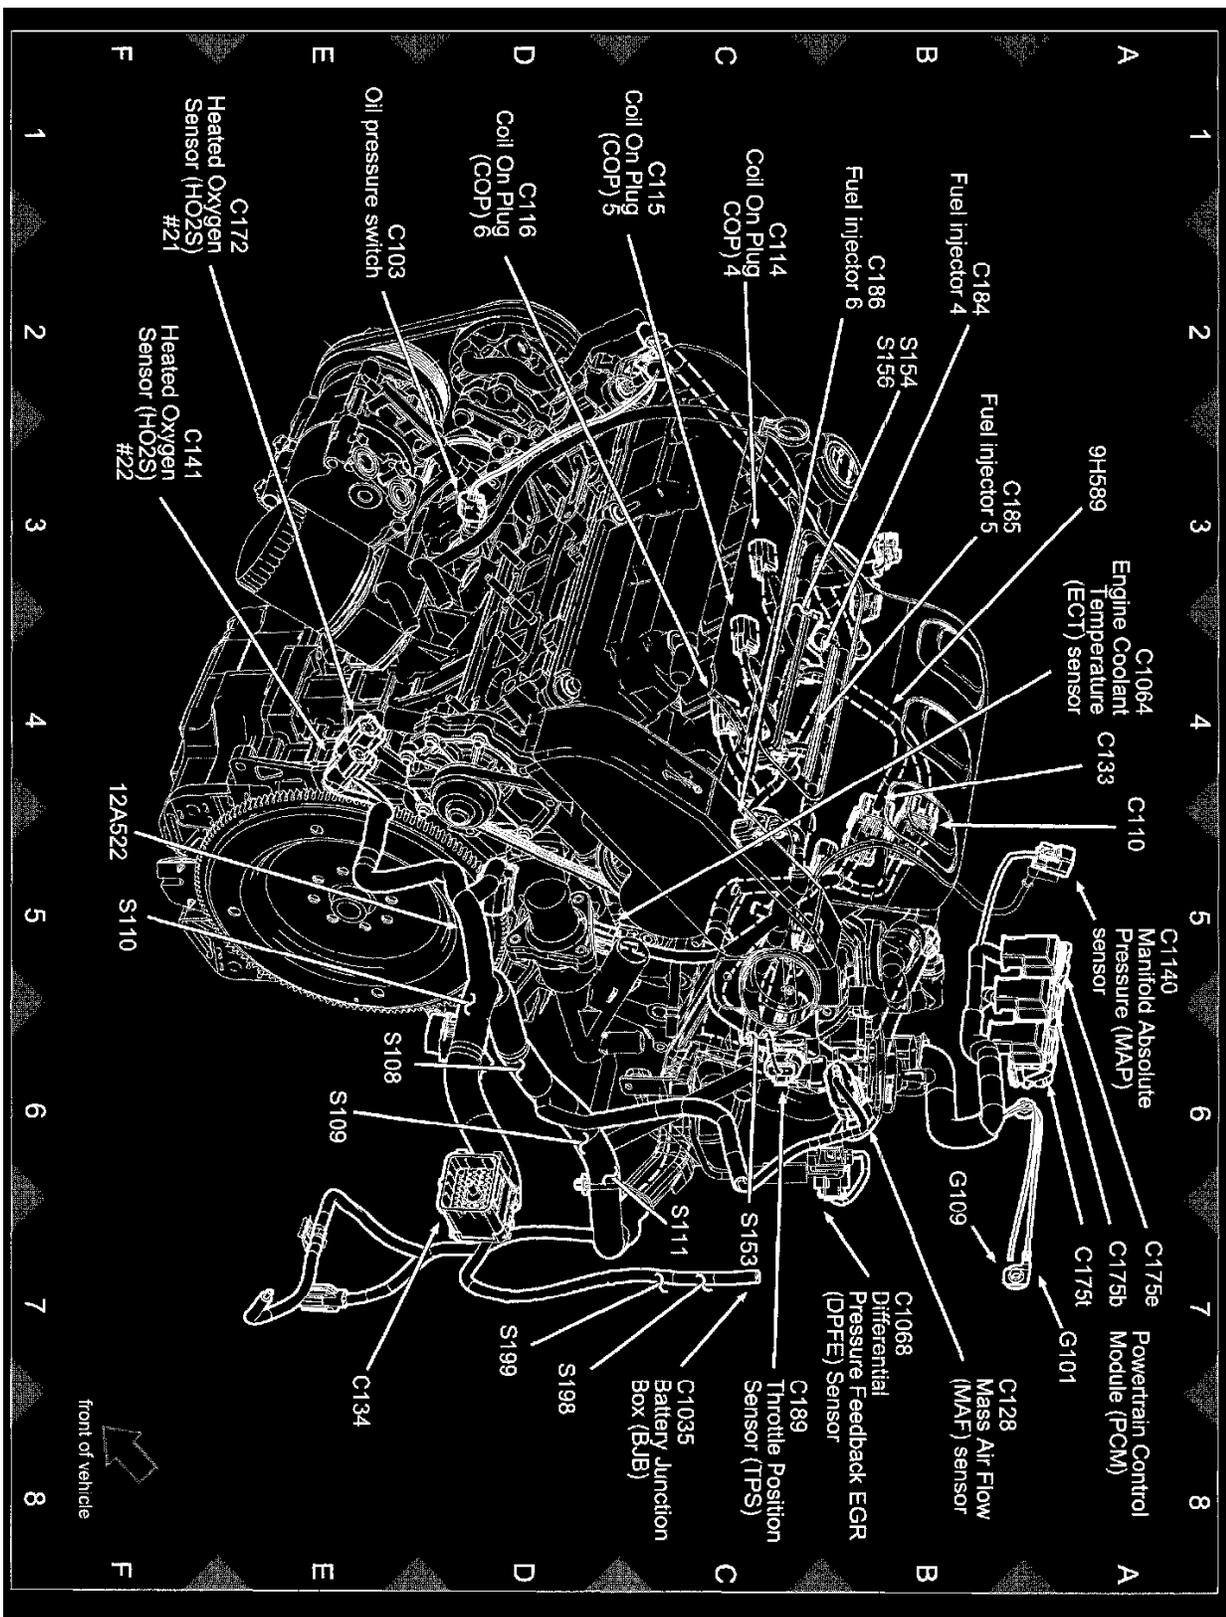

View 151-5 (3.0L Engine, Front)