

Vehicle: Locations**A - O**

A/C Clutch Field Coil: Part Of Compressor Assembly
 A/C Clutch Pressure Cycling Switch: Attached To Suction Accumulator
 A/C Fan Controller: Behind Glove Compartment
 Air Charge Temperature Sensor: Top RH Rear Of Engine
 Blower Motor: Under RH Side Of I/P, In Heater And Duct Assembly
 Blower Motor Resistor: Under RH Side Of I/P, In Heater And Duct Assembly
 Canister Purge Solenoid: LH Fender Apron
 Cargo Lamp Relay: At Rear Of Left Wheel Housing
 Clutch Switch: Attached To Top Of Clutch Support
 Coolant Temperature Sender Switch: LH Rear Of Engine
 Coolant Temperature Sensor: LH Rear Of Engine
 Cooling Fan Diode & Resistor: On LH Front Fender Apron, Near Ignition Coil
 Cooling Fan Relay: On LH Fender Apron, Near Left Headlamp

 Cooling Fan Temperature Switch (CFI Engine): Upper LH Side Of Engine
 Cooling Fan Temperature Switch (EFI Engine): Upper LH Side Of Engine Near Distributor
 DC Motor Idle Speed Control: Upper RH Rear Of Engine
 Diode: LH Fender Apron, Near Shock Tower
 Dual Brake Warning Switch: Attached To Brake Master Cylinder
 EEC Power Relay: LH Side Of I/P
 EGR Solenoid: LH Side Of Dash Extension, Behind Shock Tower
 Electronic Control Assembly (ECA): Near Front Of Console
 Fuel Gauge Sender: Attached To Top Of Fuel Tank
 Fuel Injectors: In Intake Manifold
 Fuel Injector: Top RH Of Engine
 Fuel Pump Relay: LH Side Of I/P
 Fuse Link A: LH Fender Apron, On Starter Relay
 Fuse Link B: LH Fender Apron, On Starter Relay
 Fuse Link C: LH Fender Apron, On Starter Relay
 Fuse Link D: LH Fender Apron, On Starter Relay
 Fuse Link E: LH Fender Apron, On Starter Relay
 Fuse Link F: LH Fender Apron, On Starter Relay
 Fuse Link G: LH Fender Apron, On Starter Relay
 Fuse Link X: LH Front Of Dash Panel
 Hazard Flasher: Rear Of Fuse Panel
 Heated EGO Sensor: In Exhaust Manifold
 High Pitch Horn: Inside RH Fender Well
 Horn Relay (With Speed Control Only): Behind Instrument Panel Left Of Radio
 Ignition Switch: Top RH Side Of Steering Column
 Inertia Switch (Sedan): LH Rear Quarter Panel
 Inertia Switch (Wagon): Behind LH Stop Lamp Assembly
 Key Reminder Switch: Part Of Ignition Switch
 LH Door Open Warning Switch: Top Rear Of Door, In Door Latch Assembly
 Liftgate Switch: LH Side Of Liftgate Jamb
 Liftgate Washer Pump: Side Of Cargo Area
 Low Coolant Switch: Attached Behind Upper Center Of Console
 Low Fuel Warning Module: Attached Behind Upper Center Of Console
 Low Washer Fluid Level Switch: Bottom LH Side Of Washer fluid Reservoir In Water Tray
 Main Lamp Switch: Lower LH Side Of I/P
 Manifold Absolute Pressure Sensor: RH Fender Apron, On RH Shock Tower
 Manifold Vacuum Switch: Near LH Side Of Master Cylinder
 Multi-Function Switch: Top LH Side Of Steering Column
 Neutral Switch: In Transaxle
 Non-Cycling Circuit Breaker: Left Front Fender Apron, Behind Battery
 Oil Pressure Switch: Rear Of Engine Near Oil Filter

P - W

Parking Brake Switch: On Parking Brake Assembly
 RH Door Open Warning Lamp Switch: Top Rear Of Door, In Door Latch Assembly

Seatbelt Buckle Switch: Part Of Driver Seatbelt Assembly
 Shift Contact Relay: RH Cowl Area
 Shorting Plug: LH Side Of Engine
 Speed Control Amplifier: Under LH Side Of I/P, Under Steering Column
 Speed Control Servo: LH Rear Of Engine, On Shock Tower
 Speed Control Switch Assembly: On Crossbar Of Steering Wheel
 Speed Sensor: On LH Rear Of Transaxle Assembly
 Starter Motor: Lower LH Front Of Engine Assembly
 Starter Relay: LH Fender Apron In Front Of Shock Tower
 Stop Lamp Switch: On Brake Pedal Arm
 TFI Module (CFI Engine): RH Side Of Distributor
 TFI Module (EFI Engine): RH Side Of Distributor
 Throttle Position Sensor (CFI): Top RH Rear Of Engine
 Top Gear Switch: Part Of Transaxle
 Turn Signal Flasher: Front Of Fuse Panel
 Vacuum Dump Valve: Top Of Brake Pedal Support
 Vane Air Flow Meter: LH Fender Apron
 Warning Chime: Behind LH Side Of I/P Above Glove Box
 Washer Pump: Bottom RH Side Of Washer Fluid reservoir
 Wiper Motor & Switch: RH Side Of Engine

Additional Information

If the component you are looking for is not listed here, please refer to **System** or **Sub-Assembly Locations**. Example: If Air Flow Meter is not found here, refer to **Powertrain Management/Computers and Control Systems/Air Flow Meter/Locations**.

Connectors C100 Thru C273

Connector C100: LH Front Of Dash
 Connector C102: Under LH Side Of Rear Seat
 Connector C104: RH Front Of Engine Compartment, Near Alternator
 Connector C105: Behind LH Stop Lamp Assembly
 Connector C106: Underneath Rear Of Hatchback
 Connector C110: RH Front Dash
 Connector C115: Near LH Cowl
 Connector C116: LH Fender Apron, Ahead Of Shock Tower
 Connector C117: LH Cowel Panel
 Connector C127: Front Of Radiator Support RH Side
 Connector C128: Front Of Radiator Support LH Side
 Connector C138: Behind LH Side Of I/P, Above Fuse Panel
 Connector C150: LH Fender Apron
 Connector C160: On Radiator Support Near Battery

 Connector C201: LH Front Of Dash Panel
 Connector C202: Attached To Graphic Display Module
 Connector C203: Attached To Graphic Display Module
 Connector C204: Attached To Graphic Display Module
 Connector C205: Behind LH Side Of I/P, Right Of Steering Column
 Connector C208: Behind LH Side of I/P Behind Fuse Panel
 Connector C215: Rear Lower LH Corner Of Liftgate
 Connector C216: Under LH Side Of I/P Near Stoplamp Switch
 Connector C219: Under LH Side Of I/P Above Speed Control Amplifier
 Connector C220: Above Clutch Switch, On Support Brace
 Connector C221: Attached To Stop Lamp Switch
 Connector C222: LH Fender Apron, Front Of Shock Tower
 Connector C223: LH Fender Apron, Taped To Harness Near Ignition Coil
 Connector C224: LH Rear Cargo Area
 Connector C225: Behind Center Of I/P, Behind Radio
 Connector C227: Behind Center Of I/P, Behind Radio
 Connector C228: Behind RH Side of I/P, Right Of Glove Box
 Connector C229: LH Cowl Panel
 Connector C230: Behind Center Of I/P Behind Radio
 Connector C231: Near LH Cowl Panel
 Connector C232: Near RH Cowl Panel
 Connector C233: Attached To Amplifier
 Connector C234: Attached To Amplifier
 Connector C235: Behind Center of I/P, Behind Radio

Connector C236: LH Fender Apron, Taped To Harness Near Ignition Coil
 Connector C240: In LH Cowl Side
 Connector C241: Underneath Power Mirror Switch
 Connector C244: Behind LH Side Of I/P
 Connector C248: Behind I/P, Right Of Steering Column
 Connector C256: LH Cowl Panel
 Connector C258: LH Cowl Panel
 Connector C260: Attached To A/C Pushbutton Switch
 Connector C270: RH Fender Apron, Near Shock Tower
 Connector C272: RH Fender Apron, Near Shock Tower
 Connector C273: LH Fender Apron, Front Of Shock Tower

Connectors C277 Thru C1985

Connector C277: Inside Top Of RH Front Door
 Connector C278: Inside Top Of LH Front Door
 Connector C278: Inside Top Of LH Front Door
 Connector C280: RH Cowl Panel
 Connector C281: Behind RH Shock Tower
 Connector C283: LH Front Of Engine, Near Exhaust Manifold
 Connector C300: LH Side Of I/P Behind Fuse Panel
 Connector C301: LH Side I/P Behind Fuse Panel
 Connector C303: Behind LH Side Of I/P, Right Of Steering Column
 Connector C304: Inside LH Rear Lamp Opening
 Connector C306: Under Drivers Seat
 Connector C308: Near LH Quarter Panel
 Connector C309: In Hatchback Near Wiper Motor
 Connector C310: In Hatchback Near Wiper Motor
 Connector C311: Inside RH Corner Of Cargo Area
 Connector C313: Behind LH Side Of I/P, Harness Near Fuse Panel
 Connector C314: Under LH Side Of I/P Above Fuse Panel
 Connector C315: Behind LH Stop Lamp Assembly
 Connector C320: Behind License Plate Opening
 Connector C321: Above Liftgate Opening
 Connector C322: LH At Corner Of Cargo Area
 Connector C328: Above Liftgate Opening
 Connector C333: Top RH Side Of Steering Column
 Connector C352: Behind I/P Below Instrument Cluster
 Connector C1984: RH Fender Apron
 Connector C1985: RH Fender Apron

Ground Locations

Ground G100: In LH Rear Corner Of Liftgate
 Ground G101: Under Driver's Seat On Crossmember
 Ground G102: LH Fender Apron Behind Battery
 Ground G103: RH Fender Apron Behind Coolant Overflow
 Ground G104: RH Cowl Panel
 Ground G105: Behind Roof Console
 Ground G106: LH Fender Apron
 Ground G107: LH Front Of Engine, Above Starter Motor
 Ground G109: LH Corner of Hatchback Near Wiper Motor
 Ground G110: LH Rear Cargo Area
 Ground G112: Behind RH Stop Lamp Assembly
 Ground G115: Inside LH Rear Lamp Opening
 Ground G118: RH Quarter Panel Behind Rear Lamp
 Ground G119: In Front Of Battery
 Ground G120: In LH Corner Of Hatchback
 Ground G121: LH Corner Of Hatchback
 Ground G122: LH Front Of Engine, Above Exhaust Manifold

S100 - S127

Splice S100: Rear Lamp Harness, LH Rear Lamp Opening

Splice S101: Rear Lamp Harness, Near Take Out To LH Back-Up Lamp
 Splice S102: Rear Lamp Harness, Under Driver Seat
 Splice S103: Rear Lamp Harness, Near Take Out To Fuel Gauge Sender
 Splice S104: Headlamp Jumper Harness, Near Take Out To Starter Relay
 Splice S105: Headlamp Jumper Harness, Near Take Out To Horns
 Splice S106: Rear Lamp Harness, Near Take Out To Inertia Switch
 Splice S107: Rear Window Wiper Motor Jumper, Near Take Out To Cargo Lamp Switch
 Splice S108: Rear Window Wiper Motor Jumper Harness, Near Take Out To Cargo Lamp Splice S109: Main Harness, Behind I/P, Near Take Out To Seatbelt Warning Buzzer
 Splice S110: Headlamp Jumper Harness, LH Front Of Dash, Above Master Cylinder
 Splice S111: Main Harness, Near Take Out To Key Reminder Switch
 Splice S112: Main Harness, Near Take Out To Radio
 Splice S113: Rear Lamp Harness, Near LH Cowl Panel
 Splice S114: Rear Lamp Harness, Near Take Out To Inertia Switch
 Splice S115: Rear Lamp Harness, Near Take Out To Backup Switch
 Splice S116: Rear Lamp Harness, Near Take Out PRNDL Lamp
 Splice S117: Rear Lamp Harness, Near Take Out PRNDL Lamp
 Splice S118: Rear Lamp Harness, Near Take Out To RH Stop/Park/Turn Lamp
 Splice S119: Rear Lamp Harness, Near Take Out To Inertia Switch
 Splice S120: Main Harness, Near Take Out To Main Light Switch
 Splice S121: Main Harness, Near Take Out To Ignition Key Warning Switch
 Splice S122: Main Harness, Behind LH Side Of I/P, Near Take Out To Ignition Key Warning Switch
 Splice S123: In Engine Gauge Feed Harness, Near Take Out to Fan Temperature Switch
 Splice S124: Rear Lamp Harness, Near LH Cowl
 Splice S125: Rear Lamp Jumper Harness, Near Take Out To High Level Stop Switch
 Splice S126: License Lamp Jumper Harness, Near Take Out To License Lamp
 Splice S127: Main Harness, Near Take Out To Main Light Switch

S129 - S373

Splice S129: Console Jumper Harness, Near Take Out To Console Cigar Lighter
 Splice S132: Rear Lamp Harness, Behind LH Side Of I/P Near Fuse Panel
 Splice S133: Rear Lamp Harness, Near Take Out To LH Backup Lamp
 Splice S134: Rear Lamp Harness, Near Take Out To LH Rear Seat Speaker
 Splice S135: Engine Harness, RH Front of Dash
 Splice S136: Headlamp Jumper Harness, LH Front Of Dash
 Splice S138: Rear Lamp Harness, Near Take Out To Cargo Lamp Switch
 Splice S139: Rear Lamp Harness, Near Take Out To RH Backup Lamp
 Splice S140: Main Harness, Near Take Out To Fuse Panel
 Splice S142: Rear Lamp Harness, Near Take Out To LH Rear Side Marker Lamp
 Splice S143: Rear Lamp Harness, Near Take Out To RH Rear Side Marker Lamp
 Splice S148: Main Harness, Near Take Out To Stop Lamp Switch
 Splice S149: Main Harness, Near Take Out To Stop Lamp Switch
 Splice S150: Forward Lamp Harness, At Fuse Link D
 Splice S152: Forward Lamp Harness, At Fuse Link C
 Splice S155: Main Harness, Near Battery
 Splice S157: A/C Compressor Clutch Jumper Harness, Near Take Out To A/C Clutch Field Coil
 Splice S160: Console Jumper Harness, Near Take Out To Cigar Lighter
 Splice S171: Main Harness, Near Take Out To Radio
 Splice S172: Main Harness, Near Take Out To Courtesy Lamp Switch
 Splice S174: Engine Harness, LH fender Apron, Near Shock Tower
 Splice S175: Fuel Injection Feed Harness, Near Take Out To No. 1 Injector
 Splice S176: LH Side Of I/P Behind Fuse Panel
 Splice S178: Fuel Injection Feed Harness, Near Take Out To No. 1 Injector
 Splice S179: Fuel Injection Feed Harness, Near Take Out To No. 1 Injector
 Splice S180: Engine Harness, Behind RH Shock Tower
 Splice S181: Fuel Injection Feed Harness, Near Take Out To Throttle Position Sensor
 Splice S182: Engine Harness, Behind RH Shock Tower
 Splice S191: Interior Lamp Harness, Near Take Out To Courtesy Lamp Switch
 Splice S195: Main Harness, Near Take Out To Fuse Panel
 Splice S199: Radio Jumper Harness, Take Out To Radio
 Splice S210: Interior Lamp Harness, Near Take Out To Courtesy Lamp Switch
 Splice S211: Interior Lamp Harness, Near Take Out To Console Map Lamp

Splice S251: A/C Compressor Clutch Jumper Harness, Near Take Out To A/C Clutch Field Coil

Splice S252: Main Harness, Near Take Out To Fuse Panel

Splice S298: Main Harness, Near Take Out To Fuse Panel

Splice S373: Rear Lamp Harness, Near Take Out To LH License Lamp