



# Transfer Case: Exploded Views Manual Shift

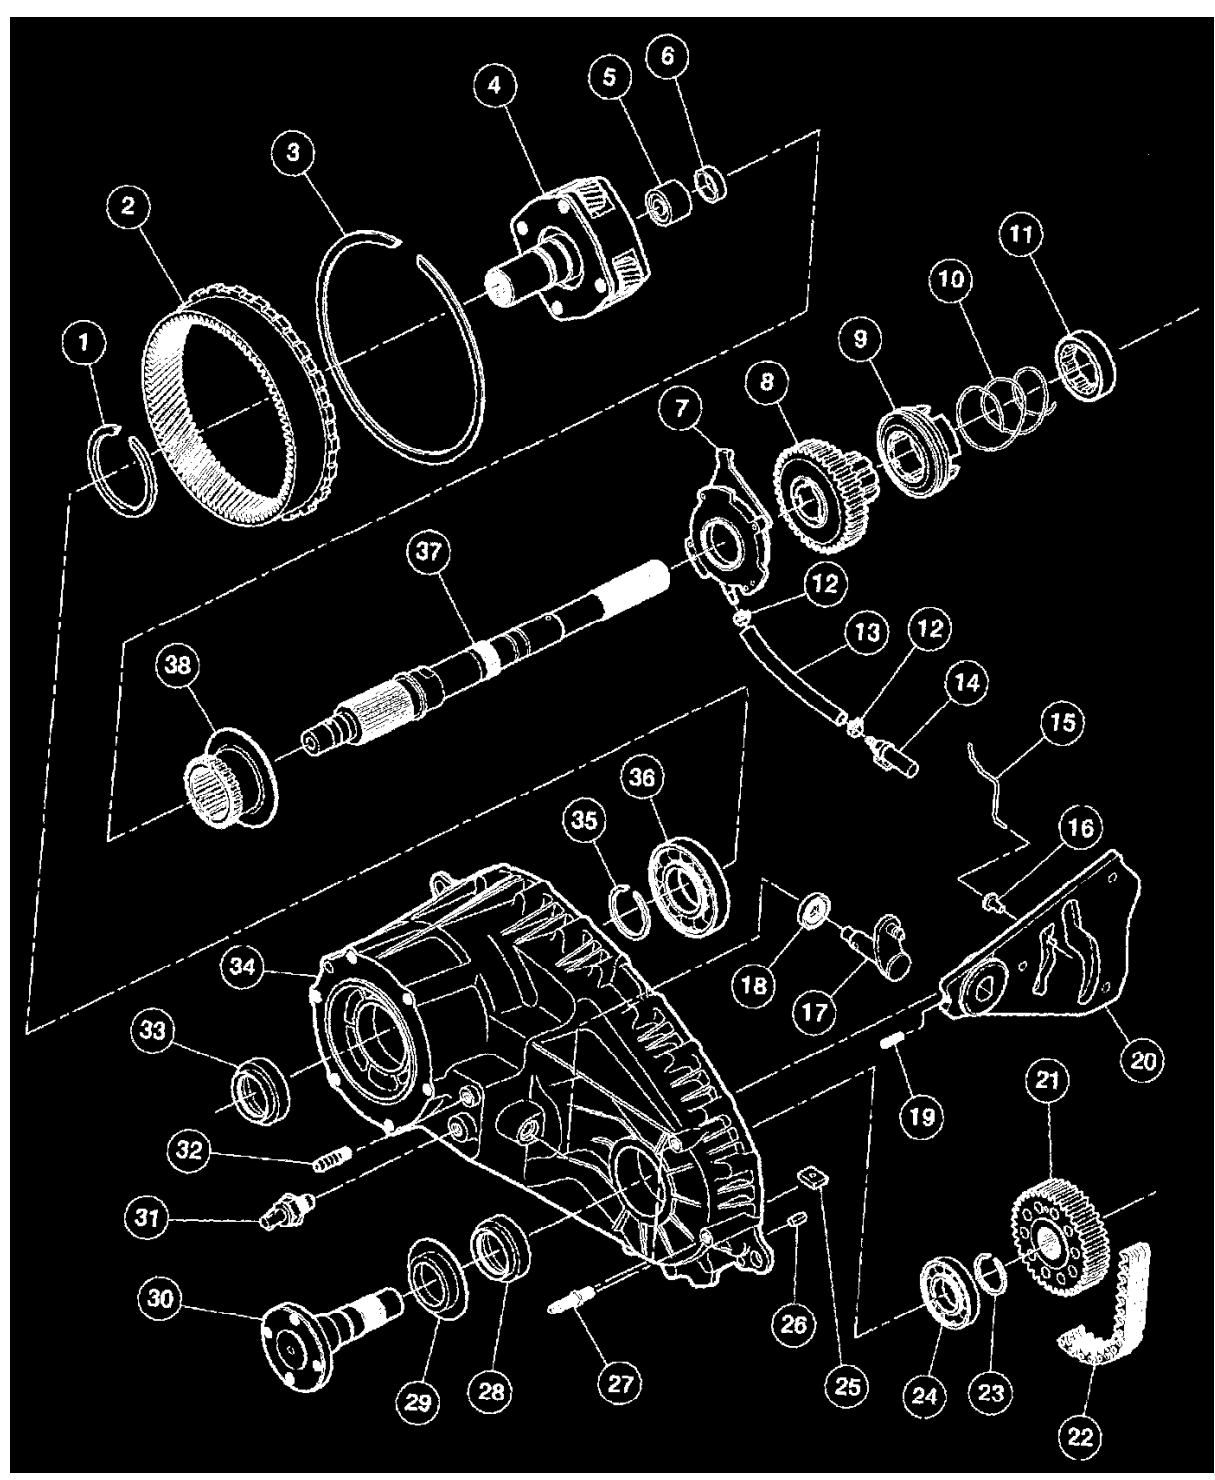

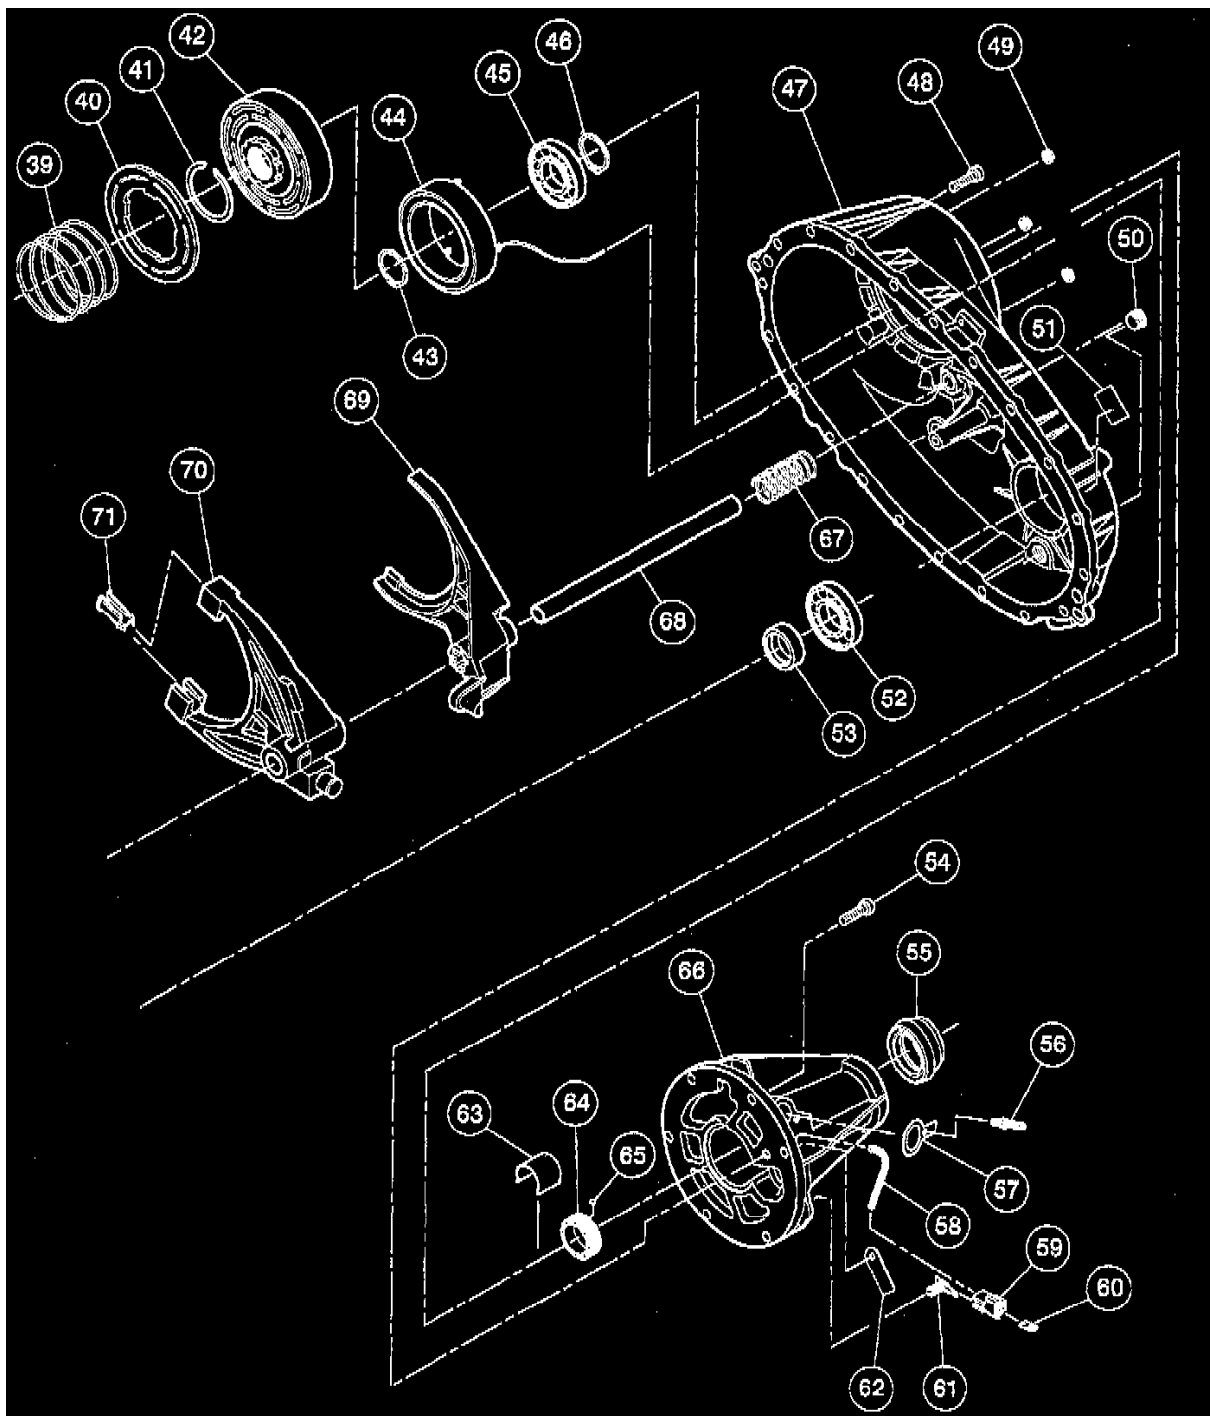

Transfer Case - Manual Shift (Part 2 Of 3)

Item	Description
1	Snap Ring
2	Ring Gear
3	Snap Ring
4	Carrier Assembly
5	Needle Bearing
6	Bushing
7	Pump Assembly
8	Drive Sprocket
9	Lock Up Collar
10	Spring
11	Lock Up Hub
12	Hose Clamp (Cut From Fuel Tube Hose)
13	Hose
14	Lube Pickup and Filter
15	Detent Spring
16	Detent Roller
17	Shift Lever Assembly
18	Shift Shaft Oil Seal
19	Set Screw
20	Mechanical Shift Cam
21	Driven Sprocket
22	Drive Chain Assembly
23	Snap Ring
24	Bearing
25	Magnet
26	Dowel
27	Case Stud
28	Yoke to Flange Seal
29	Shield
30	Front Output Shaft With Shield
31	Three Position Switch
32	Breather Barb
33	Yoke to Flange Seal
34	Case
35	Input Snap Ring
36	Bearing

Item	Description
37	Output Shaft
38	Reduction Hub
39	Spring
40	Armature
41	Snap Ring
42	Hub and Coil Housing Assembly
43	Snap Ring
44	Coil
45	Bearing
46	Snap Ring
47	Case
48	Bolt
49	Nut
50	Case Plug
51	Bar Code Label
52	Bearing
53	Spacer
54	Bolt
55	Yoke to Flange Seal
56	Case Stud
57	Speedometer Isolator Plate
58	Wire Convolute
59	Connector Harness
60	Wire Connector Spacer
61	Harness Connector Retainer
62	Identification Tag
63	Speedometer Gear Spacer
64	Speedometer Drive Gear
65	Ball
66	Extension Housing Assembly
67	Lock-up Fork Spring
68	Shift Rail
69	Lock-up Fork
70	Reduction Shift Fork Assembly
71	Shift Fork Pad

Transfer Case - Manual Shift (Part 3 Of 3)