



## Shifter Transfer Case: Service and Repair

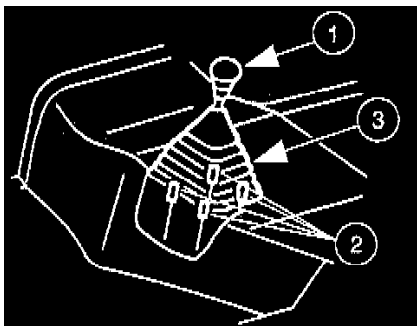


### REMOVAL


1. Remove the gearshift lever boot.
  - (1) Remove the gearshift lever knob.
  - (2) Remove the four gearshift lever boot screws.
  - (3) Remove the gearshift lever boot.

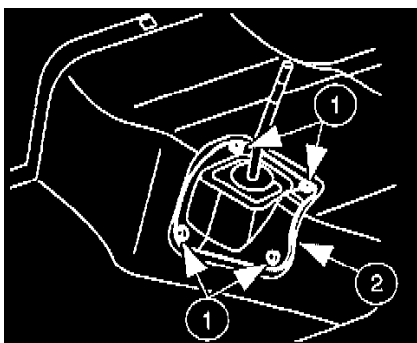

2. Remove the gearshift lever cover.
  - (1) Remove the four gearshift lever cover bolts.
  - (2) Remove the gearshift lever cover.

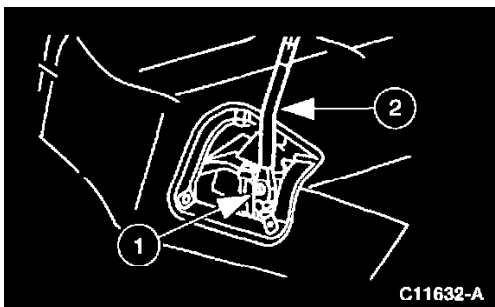


3. Remove the upper gearshift lever-.
  - (1) Remove the upper gearshift lever bolt.
  - (2) Remove the upper gearshift lever.

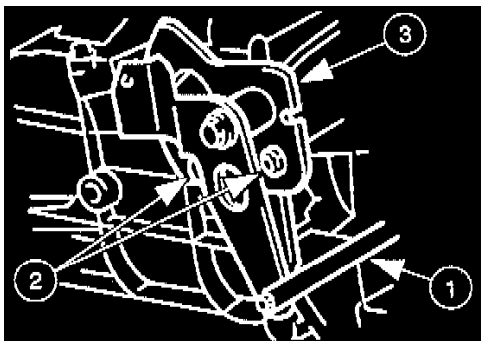


4. Remove the lower gearshift lever.
  - (1) Use Shift Linkage Insulator Tool to disconnect the lower gearshift lever to transfer case rod.

- (2) Remove the two lower gearshift lever bolts.
- (3) Remove the lower gearshift lever.

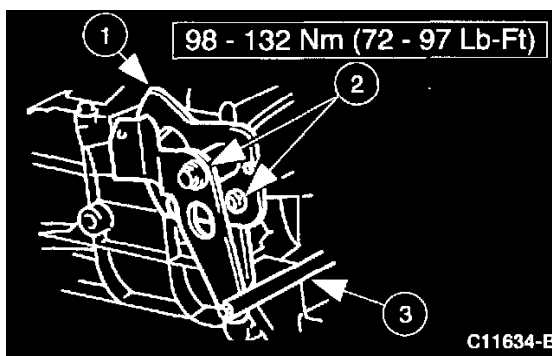


## INSTALLATION


1. Install the lower gearshift lever.
  - (1) Position the lower gearshift lever.
  - (2) Install the two lower gearshift lever bolts.
  - (3) Use Shift Linkage Insulator Tool to connect the lower gearshift lever to transfer case rod.

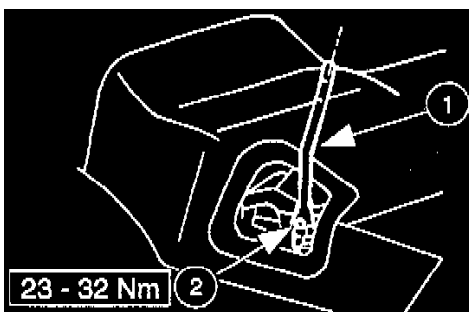

2. Install the upper gearshift lever.
  - (1) Position the upper gearshift lever.
  - (2) Install the upper gearshift lever bolt.

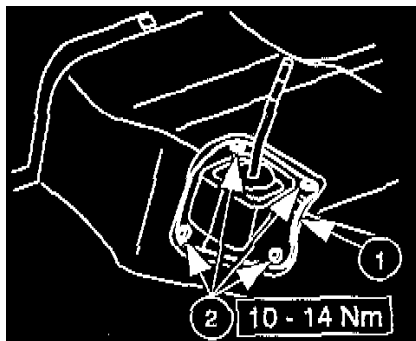

3. Install the gearshift lever cover.
  - (1) Position the gearshift lever cover.
  - (2) Install the four gearshift lever cover bolts.

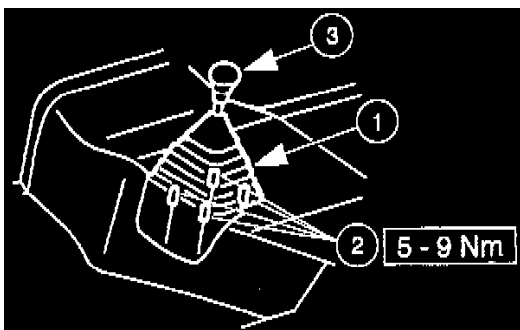

4. Install the gearshift lever boot.

- (1) Position the gearshift lever boot.
- (2) Install the four gearshift lever boot screws.
- (3) Install the gearshift lever knob.