



Ignition Coil: Service and Repair Removal

REMOVAL


NOTE: Procedure is for either RH or LH ignition coil; RH ignition coil is shown.

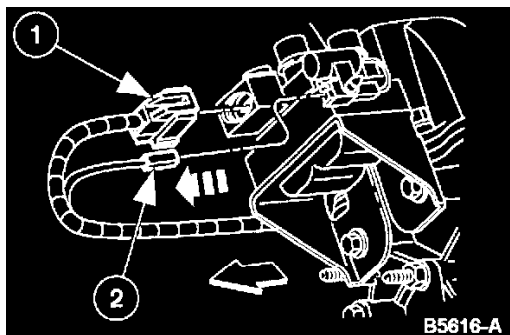


1. Disconnect the ignition coil electrical connections.
 - 1 Disconnect the ignition coil electrical connector.
 - 2 Disconnect the radio capacitor electrical connector.

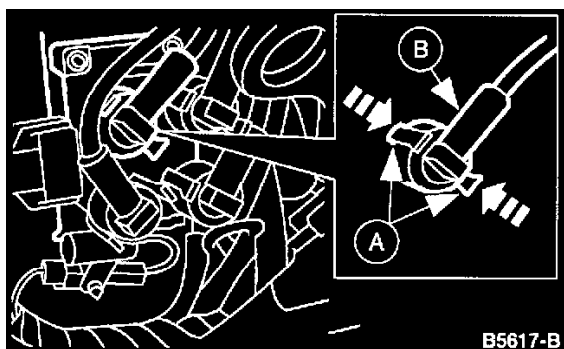

2. Squeeze the (A) locking tabs and disconnect the (B) spark plug wires (four each side).

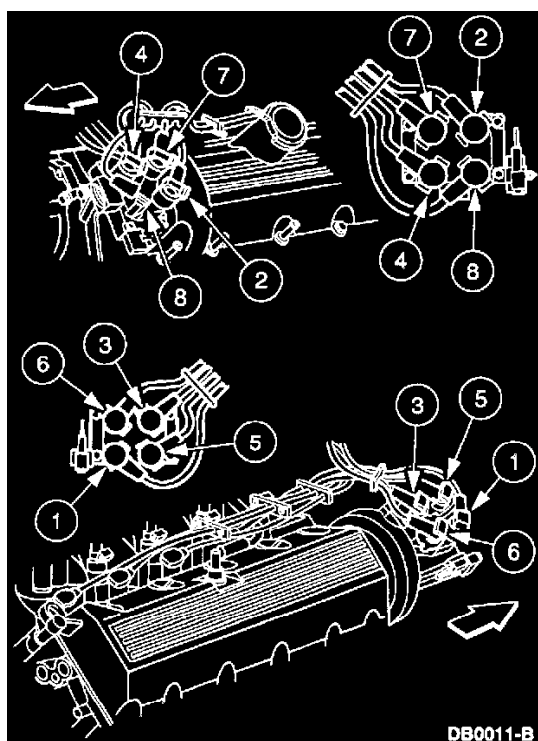

NOTE: Spark plug wires must be connected to the proper ignition coil terminal. Mark spark plug wire locations.

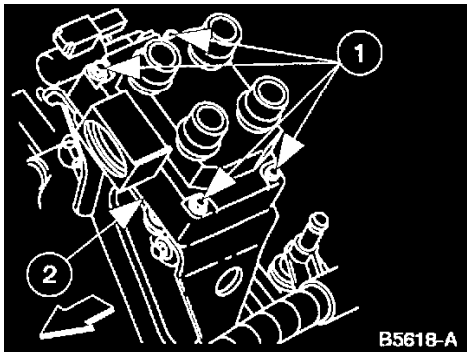

3. Remove the ignition coil.
 - 1 Remove the ignition coil bolts.
 - 2 Remove the ignition coil.

4. Inspect the ignition coil for carbon tracks or damage.