



## Horn: Service and Repair

### REMOVAL


1. Remove the battery tray.

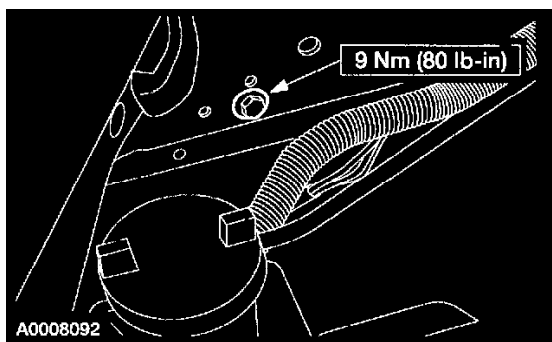

2. Remove the horn assembly bolt.

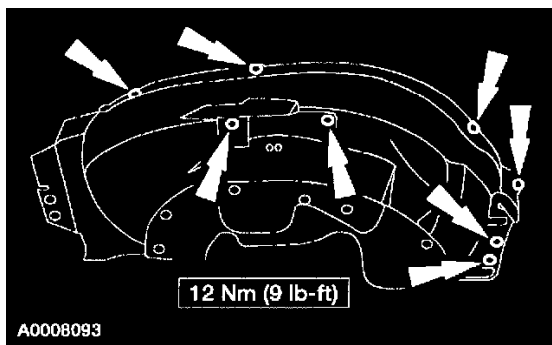

3. Remove the RH fender apron retainers.
  - ^ Remove the RH fender lip to RH fender apron screws.
  - ^ Remove the RH fender apron to inner fender bolts.

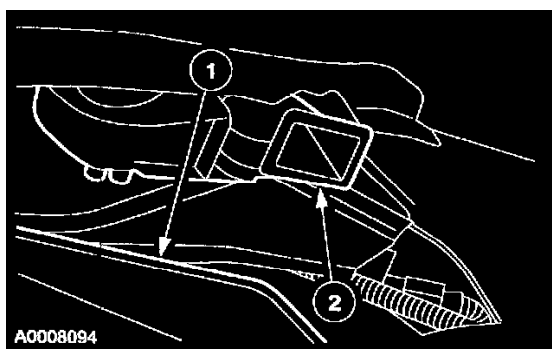

4. Remove the horn assembly.
  - 1 Position the fender apron aside to gain access to the horn assembly.
  - 2 Remove the horn assembly.
    - ^ Disconnect the electrical connector.

### INSTALLATION

1. To install, reverse the removal procedure.