


## Instrument Panel, Gauges and Warning Indicators: Service and Repair

### Key-In-Ignition Warning Switch


#### REMOVAL

1. To replace the brush assembly, refer to Cruise Control.

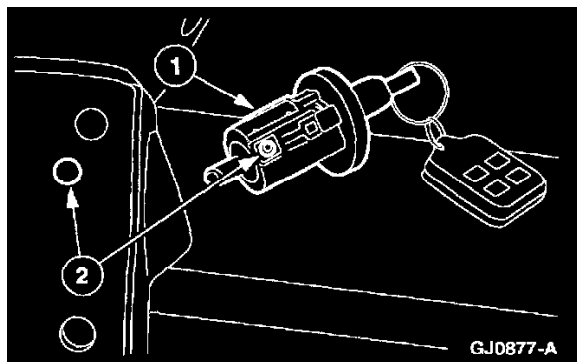

2. Remove the ignition switch lock cylinder.


1. Insert the ignition key and turn to the RUN position.
2. Insert a punch in the access hole of the steering column and press the release tab while pulling out the ignition switch lock cylinder.

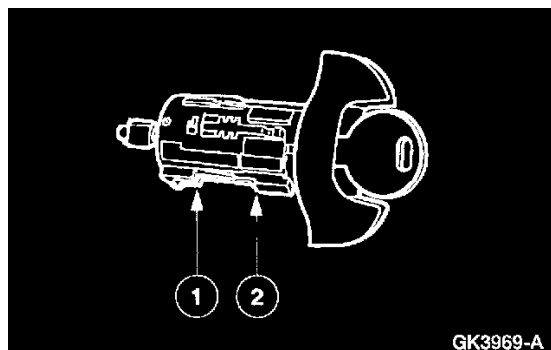

3. Remove the key-in-ignition warning switch.

1. Pry the clip downward.
2. Release the key-in-ignition warning switch from the rear of the ignition switch lock cylinder.

#### INSTALLATION

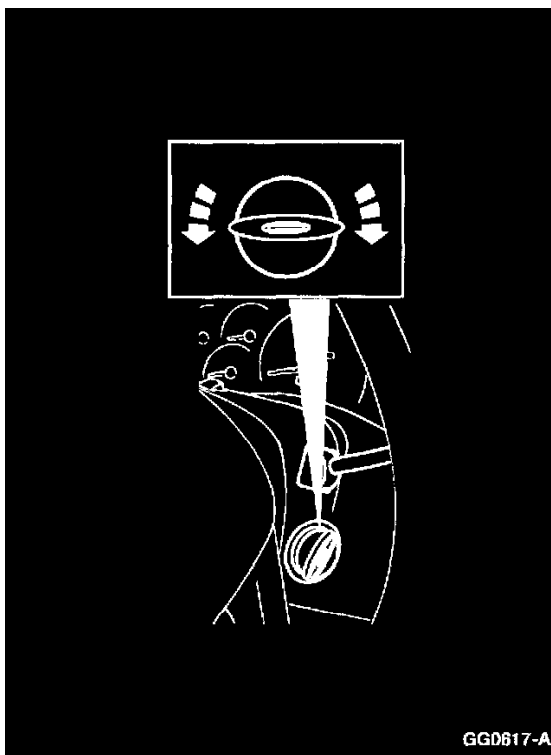

1. To install, reverse the removal procedure. Verify the ignition switch lock cylinder operation.