

## Vehicle: Component Locations

### Component Location Index

**PLEASE NOTE:** If a link on the Component Location Index to a View is not provided, that means that the Component and/or View in question does NOT apply to the vehicle model selected.

<b>Components Location</b>	<b>View 151-*/Coordinates</b>	
A/C clutch cycling pressure switch (19D594) engine compartment, front, RH side	4-D2	Anti-theft hood switch (19A434) engine compartment, rear, RH side
A/C clutch field coil (19D798) engine, front, bottom	5-F6	Anti-theft horn RH C-pillar
A/C clutch relay in Bussed Electrical Center (BEC)	4-C8	Anti-theft inhibit switch in driver door
A/C Compressor clutch diode in Bussed Electrical Center (BEC)	4-C8	Audio unit (18808) dash panel, center
A/C Compressor clutch diode in Bussed Electrical Center (BEC)	4-C8	Autolamp/sunload sensor (13A018) behind dash panel, center
A/C high pressure switch (19D594) engine, front, bottom	5-E7	Auxiliary blower motor (19805) LH side, rear, behind trim panel
ABS control module (2C219) vehicle underbody, under driver seal	14-A4	Auxiliary blower motor relay in Bussed Electrical Center (BEC)
ABS test connector engine compartment, LH side	3-A5	Auxiliary blower motor resistor assembly (19A706) LH side, rear, behind trim panel
Accessory delay relay 1 in Smart Junction Box (SJB)	11-E5	Auxiliary blower relay module LH side, rear, behind trim panel
Accessory delay relay 2 in Smart Junction Box (SJB)	11-E5	Auxiliary blower speed relay 1 in auxiliary blower relay module
Adjustable pedal memory potentiometer on accelerator pedal support	11-A5	Auxiliary blower speed relay 2 in auxiliary blower relay module
Adjustable pedal motor (2C429) on accelerator pedal support – with memory	11-A5	Auxiliary park lamp, left front front of vehicle, LH side
Adjustable pedal motor (2C429) on accelerator pedal support – without memory	11-A1	Auxiliary park lamp, right front front of vehicle, RH side
Adjustable pedal switch dash panel, LH side	8-B8	Auxiliary relay box 1 engine compartment, RH side
Air bag sliding contact (14A664) behind dash panel, driver side	9-B7	AX4S/4F50N Transmission LH side, engine compartment
Ambient air temperature sensor (19E702) behind radiator grille, center	2-C7	Battery (10655) engine compartment, front, LH side
Antenna right fender	14-A5	Blend door actuator, rear (19E616) behind trim panel, LH side, rear

Components	View 1S1-*/Coordinates		
Location			
Brake booster sensor			
engine compartment, LH side	3 - F 2		
Brake fluid level switch (2L414)			
engine compartment, rear, LH side	3 - A 2		
Brake pedal position switch (13480)			
on brake pedal support	11 - D 7		
Brake pressure switch (2B264)			
engine compartment, rear, LH side	13 - B 6		
Brake shift interlock (3Z719)			
bottom of steering column	10 - F 3		
Bussed Electrical Center (BEC)			
engine compartment, LH side	4 - C 8		
Camshaft position sensor (6B288)			
engine, RH side	5 - E 1		
Cargo lamp			
in roof panel, behind trim panel, center	28 - A 7		
Cigar lighter, front (15055)			
dash panel, center	8 - F 5		
Climate controlled seat backrest element, driver side			
in driver's seat back rest	16 - A 6		
Climate controlled seat backrest element, passenger side			
in passenger's seat back rest	17 - C 7		
Climate controlled seat cushion element, driver side			
in driver's seat face	16 - D 7		
Climate controlled seat cushion element, passenger side			
in passenger's seat face	17 - D 7		
Climate controlled seat fan, driver side			
under driver seat			
Climate controlled seat fan, passenger side			
under passenger seat			
Climate controlled seat module, driver side			
under driver seat	16 - D 2		
Climate controlled seat module, passenger side			
under passenger seat			
Clock (15000)			
dash panel, center	17 - D 2		
Clutch, left power sliding door			
rear, wheelwell, LH side	9 - A 3		
Clutch, right power sliding door			
rear, wheelwell, RH side			
Courtesy lamp, left front			
front of vehicle, LH side	4 - D 8		
Courtesy lamp, right front			
front of vehicle, RH side	2 - E 2		
Courtesy lamp, left footwell			
under dash panel, LH side	8 - F 7		
Courtesy lamp, right footwell			
under dash panel, RH side	8 - F 2		
Crankshaft position sensor (6C315)			
engine, rear, center	5 - F 3		
Cylinder-head temperature sensor (6G004)			
engine, LH side	6 - C 1		
Data Link Connector (DLC) (14489)			
under dash panel, LH side	8 - E 7		
Detent switch, LH			
in LH rear door	21 - D 2		
Detent switch, RH			
in RH rear door	20 - D 7		
Digital Transmission Range (DTR) sensor (7F293)			
transmission	6 - E 3		
Door ajar switch, left front			
in driver door	18 - E 2		
Door ajar switch, right front			
in passenger door	19 - C 7		
Door lock actuator, left front			
in driver door	18 - F 2		

Components Location	View 151-*/Coordinates		
Door lock actuator, right front in passenger door	19-D7	Electrochromatic inside mirror unit (17700) windshield, center of vehicle	25-E2
Door lock actuator assembly, left sliding door in LH rear door	21-B7	Electronic Automatic Temperature Control (EATC) module (19980)	9-E5
Door lock actuator assembly, right sliding door in RH rear door	20-C2	dash panel, center	9-E5
Door lock relay in Smart Junction Box (SJB), (not serviceable)	11-E5	Electronic Manual Temperature Control (EMTC) module (19980)	9-F5
Door lock switch, passenger side (14028) in passenger door	19-A4	dash panel, center	9-F5
Door unlock relay in Smart Junction Box (SJB), (not serviceable)	11-E5	Engine cooling fan circuit breaker in Auxiliary relay box 1	4-A4
Driver air bag unit (78043B13) in steering wheel	10-E7	Engine cooling fan motor 1	1-E5
Driver door unlock relay in Smart Junction Box (SJB), (not serviceable)	11-E5	Engine compartment, front	1-D7
Driver memory seat front height sensor	16-E2	Engine cooling fan relay 1	4-A4
Driver memory seat horizontal sensor under driver seat	16-B7	in Auxiliary relay box 1	4-A4
Driver memory seat rear height sensor under driver seat	16-E7	Engine cooling fan relay 2 in Auxiliary relay box 1	4-A4
Driver safety belt retractor pretensioner near, center console, LH side	29-F5	Engine cooling fan relay 3 in Auxiliary relay box 1	4-A4
Driver seat module (14C708) under driver seat	16-F6	Engine cooling fan relay 4 in Auxiliary relay box 1	4-A4
Dropping resistor front of vehicle, LH side	4-C7	EVAP canister purge valve	6-C7
DVD player (10E947) in roof panel	28-A4	engine compartment, rear, center	13-E5
EGR system module engine, top, LH side	6-A1	Evaporative emission (EVAP) canister vent valve (9F945) vehicle underbody, rear	18-B6
		Exterior rear view mirror, left in driver door - with memory	19-D2
		Exterior rear view mirror, right in passenger door - with memory	18-A5
		Exterior rear view mirror switch (17B676) in driver door	

Components	View 151-*/Coordinates		
Location			
Fog lamp, left front (15200)	7 - F 4	Fuel pump driver module	
front of vehicle, LH side		LH B-pillar, bottom	15 - E 4
Fog lamp, right front (15200)	2 - E 5	Fuel pump relay	
front of vehicle, RH side		in Bussed Electrical Center (BEC)	4 - C 8
Fog lamp relay	4 - C 8	Fuel rail pressure transducer sensor	
in Bussed Electrical Center (BEC)		engine, top	5 - B 2
Forward crash sensor	1 - A 5	Fuel tank pressure transducer sensor (9C047)	
engine, RH side		in fuel tank	6 - C 1
Fresh/recirculation door actuator (19E616)	9 - C 2	Fuel tank unit (9H307)	
dash panel, center		in fuel tank	13 - E 7
Front blower motor (19805)	8 - C 2	Fusible link A	
behind dash panel, RH side		engine compartment, LH side	
Front blower motor relay	11 - D 1	Generator	
behind dash panel, center		engine, front, RH side	5 - D 7
Front blower motor resistor assembly (19A706)	8 - A 2	Headlamp, left (13008)	
behind dash panel, RH side		front of vehicle, LH side	4 - E 6
Front blower motor speed controller	8 - B 2	Headlamp, right (13008)	
behind dash panel, RH side		front of vehicle, RH side	4 - F 2
Fuel door interlock switch	13 - B 2	Heated Oxygen Sensor (HO2S) #11 (9F472)	
LH side, rear, behind trim panel		in exhaust system	6 - E 5
Fuel injector 1	5 - C 2	Heated Oxygen Sensor (HO2S) #12 (9G444)	
engine, rear, RH side		in exhaust system	6 - F 6
Fuel injector 2	6 - C 6	Heated Oxygen Sensor (HO2S) #21 (9F472)	
engine, rear, center		in exhaust system	5 - E 7
Fuel injector 3	6 - C 6	Heated Oxygen Sensor (HO2S) #22 (9G444)	
engine, rear, LH side		in exhaust system	5 - F 3
Fuel injector 4	6 - A 3	Heated seat module, driver side front (14C724)	
engine, front, RH side		under driver seat	16 - D 2
Fuel injector 5	5 - C 7	Heated seat module, passenger side front (14C724)	
engine, front, center		under passenger seat	17 - E 7
Fuel injector 6	5 - B 7	High beam relay	
engine, front, LH side		in Bussed Electrical Center (BEC)	4 - C 8
		High mounted stoplamp (13A613)	
		in liftgate	22 - A 6

<b>Components</b>	<b>View 151-*/Coordinates</b>		
<b>Location</b>			
Horn (13832)	engine compartment, LH side, front	7-E 6	Key pad switch assembly
Horn relay	in Bussed Electrical Center (BEC)	4-C 8	in driver door
Idle Air Control (IAC) valve (9F715)	engine, throttle body	5-A 5	Key warning switch (11A127)
Ignition coil (12029)	engine compartment, rear, center	5-A 2	on steering column
Ignition switch (11572)	dash panel, LH side	10-F 6	Latch reverse actuator, left power sliding door
Illumination dimmer	dash panel, LH side	8-C 8	in LH rear door
In-vehicle temperature sensor (19C734)	behind dash panel, LH side	9-A 2	Latch reverse actuator, right power sliding door
Inertia Fuel Shutoff (IFS) switch (9D362)	in rear, RH side	13-E 3	in RH rear door
Inlet Manifold Runner Control (IMRC) module	engine, top	5-E 2	License lamps (13550)
Instrument cluster	dash panel, driver side	8-A 6	in liftgate
Interior/map lamps assembly, front	in roof panel, rear, center	28-B 5	Liftgate ajar switch
Interior/map lamps assembly, rear	in roof panel, rear, center	28-A 6	in liftgate
Interior lamp, front	in roof panel, front of vehicle, center	28-B 4	Liftgate drive motor assembly
Joint connector 1	behind dash panel, center	9-D 8	vehicle rear end, LH side
Joint connector 2	behind dash panel, center	8-A 5	Liftgate latch/unlatch assembly
Joint connector 4	under dash panel, driver side	11-B 1	in liftgate
			Liftgate lock actuator
			in liftgate
			Liftgate obstacle detection strip, left
			vehicle rear end, LH side
			Liftgate obstacle detection strip, right
			vehicle rear end, RH side
			Main light switch (11654)
			dash panel, LH side
			Mass Air Flow (MAF) sensor (12B579)
			engine compartment, LH side, front
			Master window/door lock/unlock switch
			in driver door
			Memory set switch (14776)
			High, in driver door
			Message center switch
			dash panel, near steering column
			Mode door actuator, rear (19E616)
			LH side, rear, behind trim panel



<b>Components</b>	<b>View 151-#/Coordinates</b>
<b>Location</b>	
Positive crankcase ventilation heater engine, top, front	5 - C 7
Power antenna module behind dash panel, RH side	15 - A 7
Power liftgate module vehicle rear end, LH side	
Power liftgate open/close switch in liftgate	22 - E 7
Power point, C pillar (19N236) LH C-pillar	13 - B 2
Power point, instrument panel (19N236) dash panel, center	8 - F 4
Power point, rear (19G247) RH D-pillar	13 - C 1
Power quarter window switch dash panel, center	9 - E 2
Power seat motor assembly, left under driver seat - without memory	16 - C 2
Power seat motor assembly, right under passenger seat - with memory	17 - F 2
Power sliding door switch, left LH B-pillar	28 - E 4
Power sliding door switch, right RH B-pillar	28 - B 2
Power steering pressure switch engine compartment, rear	6 - D 7
Powertrain Control Module (PCM) (12A650) engine compartment, rear, RH side	4 - B 2
Power window motor, left front in driver door	18 - E 5
Power window motor, right front in passenger door	19 - E 2
Power window switch, RH side front in passenger door	19 - E 6
Quarter window motor, LH side rear RH side, rear window	15 - A 4
Quarter window motor, RH side rear LH side, rear window	15 - E 3
Rear Integrated Control Panel (RICP) (19980) in roof panel, center of vehicle	28 - A 5
Rear window defrost grid (18C618) in liftgate	22 - A 4
Rear window defrost relay in Bussed Electrical Center (BEC)	4 - C 8
Rear window washer pump motor front of vehicle, RH side	2 - B 2
Rear wiper motor assembly in liftgate	22 - A 5
Rear wiper relay in liftgate, (not serviceable)	22 - A 5
Resistor cap 1 headliner, rear	15 - E 2
Resistor cap 2 in driver's seat back rest	14 - B 3
Resistor cap 3 in passenger's seat back rest	14 - B 5
Restraints control module (14B321) under center console	8 - F 4
Reversing lamp, left (13411) vehicle rear end, LH side	15 - D 1
Reversing lamp, right (13411) vehicle rear end, RH side	13 - E 2
RKE antenna under dash panel, driver side	24 - B 2
Safety belt buckle switch, driver seat belt buckle, driver side	14 - E 7
Safety belt buckle switch, passenger seat belt buckle, passenger side	14 - C 7



Components Location	View 151-*/Coordinates		
Starter relay (11450) in Bussed Electrical Center (BEC)	4 - C 8	Washer pump relay, front engine compartment, rear, LH side, (not serviceable)	4 - A 7
Steering position sensor (18B015) behind dash panel, driver side	9 - A 6	Washer pump relay, rear in liftgate, (not serviceable)	22 - A 5
Steering wheel/speed control switch (9F924) in steering wheel	10 - E 6	Wheel speed sensor, left front (2C205) engine compartment, LH side	
Steering wheel radio switch in steering wheel	10 - E 8	Wheel speed sensor, left rear wheel hub, LH side, rear	26 - A 7
Temperature blend door actuator, driver (19E616) behind dash panel, LH side	9 - E 7	Wheel speed sensor, right front (2C204) engine compartment, RH side	4 - C 2
Temperature blend door actuator, passenger (19E616) behind dash panel, RH side	8 - E 3	Wheel speed sensor, right rear wheel hub, RH side, rear	26 - E 2
Throttle Position Sensor (TPS) (9B989) engine, throttle body	6 - B 1	Windshield washer pump motor (17618) front of vehicle, RH side	2 - A 3
Traction assist/Parking aid disable switch dash panel, center		Windshield wiper motor (17508) engine compartment, rear, LH side	4 - A 7
Trailer tow connector (15A416) vehicle rear end, center	14 - E 2	Wiper high/low relay engine compartment, rear, LH side, (not serviceable)	4 - A 7
Trailer tow relay, left turn in Bussed Electrical Center (BEC)	4 - C 8	Wiper run/park relay engine compartment, rear, LH side, (not serviceable)	4 - A 7
Trailer tow relay, parking lamp in Bussed Electrical Center (BEC)	4 - C 8	Yaw velocity sensor under driver seat	29 - D 2
Trailer tow relay, right turn in Bussed Electrical Center (BEC)	4 - C 8		
Turbine Shaft Speed (TSS) sensor transmission, top	6 - F 4		
Vanity mirror lamp, left (04100) below LH sun visor	24 - D 5		
Vanity mirror lamp, right (04100) below RH sun visor	25 - E 5		
Washer fluid level switch engine compartment, front, RH side	2 - D 2		