


# Oxygen Sensor: Service and Repair


## Heated Oxygen Sensor (HO2S)

### HEATED OXYGEN SENSOR (HO2S)

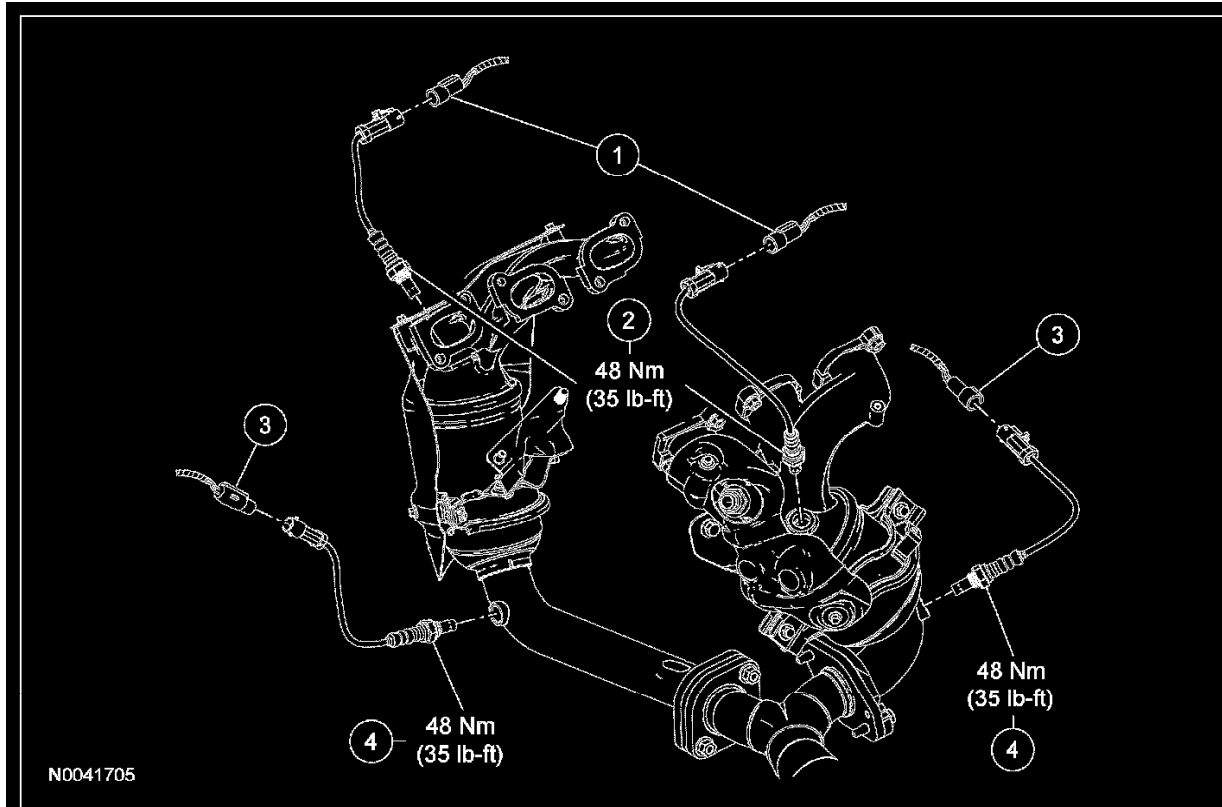

Item	Description
1	Heated oxygen sensor (HO2S) electrical connectors
2	HO2S
3	Catalyst monitor sensor (CMS) electrical connectors
4	CMS

#### Exploded View

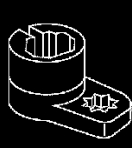Special Tool(s)	
 <p>ST1447-A</p>	Socket, Exhaust Gas Oxygen Sensor 303-476 (T94P-9472-A)

#### Special Tool(s)

#### Special Tool(s)


#### Removal and Installation

##### Rear sensor


1. With the vehicle in NEUTRAL, position it on a hoist.

##### Both Sensors

2. Disconnect the battery ground cable.

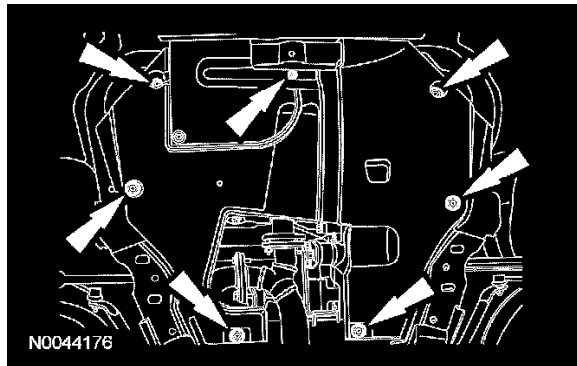

3. If equipped, remove the 7 screws and the underbody cover.
4. Disconnect the heated oxygen sensor (HO2S) electrical connector.

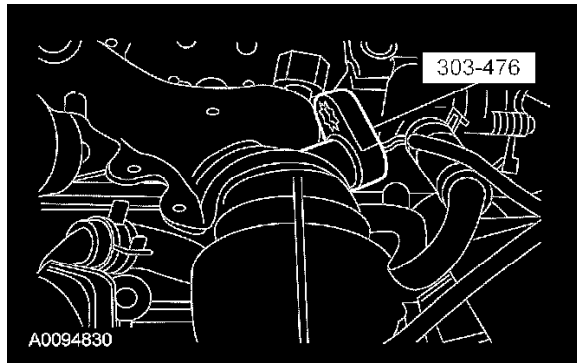

5. **NOTE:** If necessary, lubricate the sensor threads with penetrating and lock lubricant to assist in removal.

Using the special tool, remove the HO2S.

- To install, tighten to **48 Nm (35 lb-ft)**.

6. **NOTE:** Apply a light coat of anti-seize lubricant to the threads of the HO2S.

To install, reverse the removal procedure.