

Convertible Top: Testing and Inspection

Test B

PINPOINT TEST B: THE CONVERTIBLE TOP HESITATES/COMES UP UNEVEN

PINPOINT TEST B: THE CONVERTIBLE TOP HESITATES/COMES UP UNEVEN	
Test Step	Result / Action to Take
B1 CHECK THE CONVERTIBLE TOP UP/DOWN OPERATION	Yes ADJUST the convertible top linkage. TEST the system for normal operation. No GO to B2 .
NOTE: The parking brake must be applied for the convertible top system to operate. <ul style="list-style-type: none"> • Key in ON position. • Actuate the convertible top switch to the LOWER and RAISE positions. • Did the convertible top operate to the full down and full up position without hesitating? 	

(Continued)

Test B1

DIAGNOSIS AND TESTING (Continued)	
PINPOINT TEST B: THE CONVERTIBLE TOP HESITATES/COMES UP UNEVEN (Continued)	
Test Step	Result / Action to Take
B2 CHECK THE MOTOR OPERATION	Yes GO to Pinpoint Test A. No GO to B3 .
<ul style="list-style-type: none"> • Gain access to the convertible top motor/pump assembly. • Operate the convertible top to the LOWER and RAISE positions while listening to the motor. • Did the motor stop and then continue at any time? 	
B3 CHECK THE CONVERTIBLE TOP LINKAGE	Yes GO to Pinpoint Test D. No ADJUST the convertible top linkage. TEST the system for normal operation.
<ul style="list-style-type: none"> • Operate the convertible top to the LOWER and RAISE positions while observing the convertible top linkage. • Did the linkage operate smoothly without binding? 	

Test B2-B3