

**Convertible Top: Testing and Inspection****Test C****PINPOINT TEST C: THE CONVERTIBLE TOP DOES NOT RAISE OR DOES NOT GO UP ALL THE WAY**

<b>PINPOINT TEST C: THE CONVERTIBLE TOP DOES NOT RAISE OR DOES NOT GO UP ALL THE WAY</b>	
<b>Test Step</b>	<b>Result / Action to Take</b>
<b>C1</b>   <b>CHECK THE CONVERTIBLE TOP OPERATION</b>	<b>Yes</b> GO to <b>C2</b> . <b>No</b> GO to Pinpoint Test A.
NOTE: The parking brake must be applied for the convertible top system to operate. <ul style="list-style-type: none"> <li>• Key in ON position.</li> <li>• Actuate the convertible top switch to the RAISE position.</li> <li>• <b>Did the motor operate?</b></li> </ul>	
<b>C2</b>   <b>CHECK THE CONVERTIBLE TOP LINKAGE</b>	<b>Yes</b> ADJUST the convertible top linkage. TEST the system for normal operation. <b>No</b> GO to Pinpoint Test D.
<ul style="list-style-type: none"> <li>• Operate the convertible top to the LOWER and RAISE positions while observing the convertible top linkage.</li> <li>• <b>Did the linkage bind and prevent the convertible top from raising?</b></li> </ul>	

Test C1-C2