

Vehicle: Locations**A - I**

Component	Location	Connector
* Denotes Information Not Available		
4x4 Indicator Switch	Top front of transfer case assembly	C1023
A4LD Transmission	LH side of transmission	C158
A/C Clutch Diode	LH front of engine compartment, taped in harness, near A/C clutch field coil	*
A/C Clutch Field Coil	Top LH front of engine, part of A/C compressor assembly	C160
A/C-Heater Control Assembly	Center of I/P, above ashtray assembly	C214, C215
A/C High Pressure Cutoff Switch	LH front of engine, at A/C compressor assembly	C102
Ashtray Assembly	Lower center of I/P	C271
Ashtray Illumination	Behind lower center of I/P, in ashtray assembly	C277
Backup Lamp Switch	Top LH side of transmission	C162
Blower Motor	RH rear of engine compartment, on safety wall	C148
Blower Motor Resistor Assembly	RH rear of engine compartment, near blower motor	C149
Brake Fluid Level Switch	LH rear of engine compartment, on brake fluid reservoir	C165
Brake ON/OFF (BOO) Switch	Behind LH side of I/P, on brake pedal support	C291
Brake Warning Diode/Resistor Assembly	LH side of engine compartment, above wheel well, taped in harness	C105
Camshaft Position Sensor	Top rear of engine	C150
Canister Purge (CANP) Solenoid	Lower LH front of engine compartment	C166
Cigar Lighter	Behind lower center of I/P, in ashtray assembly	C295, C296
Clutch Cycling Pressure Switch	RH rear of engine compartment, on A/C accumulator	C167
Clutch Pedal Position Switch	Behind LH side of I/P, top of clutch pedal support	C274
Clutch Pedal Position Switch Jumper	Behind LH side of I/P, left of Steering Column	C274
Coolant Temperature Sender	Top LH front of engine	C168
Courtesy Lamp Diode (Regular Cab)	Top LH corner of cab roof, taped in harness, near cargo lamp	*
Courtesy Lamp Diode (Supercab)	Center rear of cab roof, near cargo lamp	*
Crankshaft Position (CKP) Sensor	RH front of engine	C1009
Data Link Connector (DLC) C198	LH side of engine compartment, on rear of engine compartment fuse/relay box	C198
Daytime Running Lamps (DRL) Module	LH side of upper radiator support, near G101	C170
Distributor	LH rear of engine	C126
Dome Lamp	Center rear of roof	C900
EGR Vacuum Regulator (EVR) Solenoid	LH rear of engine	C174
EGR Valve Position (EVP) Sensor	Top LH side of engine	C175
Electric Shift Control Module (Regular Cab)	Lower LH rear corner of cab	C204, C205, C206
Electric Shift Control Module (Supercab)	Between bottom of LH "B" pillar and rear of cab	C204, C205, C206
Electric Shift Control Switch	Top center of I/P, above radio	C278
Engine Compartment Fuse/Relay Box	LH side of engine compartment	*
Engine Compartment Lamp	LH underside of engine compartment hood	C159
Engine Coolant Temperature (ECT) Sensor	Top LH front of engine	C177
Fog Lamp Relay	LH side of engine compartment, in engine compartment fuse/relay box	C184

Fog Lamp Switch	LH side of I/P	C201
Foglamps	Front of vehicle, on respective sides	C1051, C1052
Four Channel Amplifier	Behind RH side of I/P	C297, C298
Front Park/Turn Lamps	Front of vehicle, on respective sides	C1014, C1015
Fuel Injectors	Top of each cylinder	C178, C179, C180, C181, C182, C183
Fuel Pump Relay	Center of LH fender apron, in engine compartment fuse/relay box	C186
Fuel Pump/Fuel Gauge Sender	Below rear of vehicle, top center of fuel tank	C409
Fuse Link C	LH fender apron, at starter relay	*
Fuse Panel	Behind I/P, left of steering column	*
Glove Box Lamp And Switch	Behind RH side of I/P, in glove box	C281
Hazard Flasher	Behind LH side of I/P, on fuse panel	
Head lamps	Front of vehicle, on respective sides	C1018, C1019
Heated Oxygen Sensor (HO2S) #1	Lower RH rear of engine, on exhaust manifold	C187
Heated Oxygen Sensor (HO2S) #2	Lower LH rear of engine, on exhaust manifold	C135
Heater Control Assembly	Center of I/P, above ashtray assembly	C214, C215
Horn Relay	Behind I/P, RH side of steering column, on bracket	C189
Horn Switch	On steering wheel	C282
Idle Air Control (IAC) Valve	Top LH rear of engine	C190
Ignition Coil	Top RH rear of engine	C191
Ignition Control Module (ICM)	LH front corner of engine compartment, mounted on upper radiator support	C176
Ignition Key Warning Switch	Top of steering column, part of ignition switch assembly	C283
Ignition Switch	RH side of steering column	C284
Inertia Fuel Shut-off Switch	Below RH side of I/P, below glove box	C285
Instrument Cluster (Standard)	Top LH side of I/P	C250, C251
Instrument Cluster (Sport)	Top LH side of I/P	C250, C251
Intake Air Temperature (IAT) Sensor	Top LH rear of engine	C161
Integral Alternator Regulator (IAR)	RH front of engine	C103, C154
Interval Governor	Behind lower center of I/P, LH side of ashtray assembly	C294

L - Z

Component	Location	Connector
------------------	-----------------	------------------

* Denotes Information Not Available

Left Backup Lamp	Rear of vehicle	C406
Left Courtesy Lamp Switch	In front of LH door jamb	C275
Left Door Lock Motor	In rear of LH door	C500
Left Door Lock Switch	Center of LH door	C507
Left Door Speaker	In lower front corner of LH door	C505
Left Front Window Motor	Lower center of LH door	C503
Left Horn	Lower LH front corner of engine compartment	C1021
Left Power Lumbar Motor	Under front of LH front seat assembly	C305
Left Power Lumbar Switch	Lower LH side of LH front seat	C309
Left Power Mirror	On front of left door	C508
Left Rear Speaker (Regular Cab)	Behind LH front seat	C311
Left Rear Speaker (Supercab)	Top LH rear of cab	C311
License Lamp (without Rear Bumper)	LH rear of vehicle, near license plate	C408
License Lamps (with Rear Bumper)	Center rear of vehicle, on respective sides	C407, C408
Low Oil Level Relay	Behind lower LH side of I/P, on bracket	C287
Low Oil Level Switch	Lower LH side of engine, on side of oil pan	C194
Main Light Switch	LH side of I/P, left of steering column	C286
Map Lamp	Center rear of roof	C901
Mass Air Flow (MAF) Sensor	RH side of engine compartment, on air cleaner assembly	C195
Master Window Control Switch	Center of LH door	C502
Multi-Function Switch	Top LH side of steering column	C268, C269, C270
Neutral Sensing Switch	Top of transmission	C196
Noise Capacitor	Top RH front of engine, near secondary coil (LH)	C1000
Oil Pressure Switch	Lower LH front of engine	C197

Outside Cargo/High Mount Stop Lamp	Top center of rear window header	C410
Park Brake Switch	Below LH side of I/P, on park brake assembly	C288
Park/Neutral Position Switch	LH side of transmission	C163
PCM Power Diode	Center of LH fender apron, in engine compartment fuse/relay box	*
PCM Power Relay	Center of LH fender apron, in engine compartment fuse/relay box	C171
PCM Shorting Bar	LH side of engine compartment, near rear of engine compartment fuse/relay box	C173
Power Mirror Switch	In left door panel	C506
Power Steering Pressure (PSP) Switch	Lower LH front of engine compartment, on power steering gear	C125
Powertrain Control Module (PCM)	LH rear corner of engine compartment	C279
Powertrain Control Module (PCM) (California Only)	LH rear corner of engine compartment	C279
Pressure Feedback EGR (PFE) Sensor	LH side of engine	C1022
Primary Coil (RH)	Top RH side of engine	C192
RABS Proportioning Valve Switch Assembly	Below LH side of vehicle, on frame rail	C1024
RABS Test Connector	Top of LH fender apron, on rear of engine compartment fuse/relay box	C140
RABS Test Connector	Behind I/P, near park brake assembly	C212
Radio (AM/FM Stereo)	Center of I/P	C257, C258
Radio (Electronic Premium Cassette)	Center of I/P	C257, C258
Radio Noise Capacitor	RH rear of engine, near ignition coil	C1002
Rear Anti-Lock Brake (RABS) Module	Behind lower center of I/P, LH side of ashtray assembly	C289
Rear Axle Sensor	Top of rear differential	C304
Rear Park/Stop Lamps	Rear of vehicle, on respective sides	C403, C404
Rear Turn Lamps	Rear of vehicle, on respective sides	C411, C412
Right Backup Lamp	Rear of vehicle	C405
Right Courtesy Lamp Switch	In front of RH door jamb	C276
Right Door Lock Motor	In rear of RH door	C600
Right Door Lock Switch	Center of RH door	C607
Right Door Speaker	In lower front corner of RH door	C605
Right Front Window Motor	In lower center of RH door	C603
Right Front Window Switch	Center of RH door	C602
Right Horn	Lower LH front corner of engine compartment	C188, C1020
Right Power Lumbar Motor	Under front of RH front seat assembly	C306
Right Power Lumbar Switch	On lower RH side of RH front seat	C308
Right Power Mirror	On front of right door	C606
Right Rear Speaker (Regular Cab)	Behind RH front seat	C310
Right Rear Speaker (Supercab)	Top RH rear of cab	C310
Self-Test Input (STI) Connector	LH side of engine compartment, on rear of engine compartment fuse/relay box	C199
Seat Belt Switch	Inside LH front seat belt buckle assembly	C307
Secondary Coil (LH)	Top RH front of engine	C193
Speed Control Amplifier	Behind RH side of I/P, near glove box	C248, C249
Speed Control Servo	LH rear corner of engine compartment	C1003
Speed Control Switch Assembly	On steering wheel	C211
SPOUT Check Connector C127	RH front of engine compartment, taped to harness, in front of battery	C127
Starter Motor/Solenoid	Lower LH rear of engine	*
Starter Relay	LH fender apron, near battery	*
Tachometer Service Connector	LH side of engine compartment, on rear of engine compartment fuse/relay box	C1005
Throttle Position (TP) Sensor	Top LH front of engine, on throttle body	C1007
Transfer Case Assembly	Below vehicle, behind transmission	C1008
Turn Signal Flasher	Behind LH side of I/P, on fuse panel	*
Vehicle Speed Sensor (VSS)	Top of transfer case	C1010
Warning Chime Module	Behind lower center of I/P, below ashtray assembly	C293
Windshield Washer Pump	RH side of engine compartment, on windshield washer fluid reservoir	C1011


Windshield Wiper Motor
WOT Cutout Relay

Top LH center of safety wall
Center of LH fender apron, in engine
compartment fuse/relay box


C143

C1013

Behind Instrument Panel Views

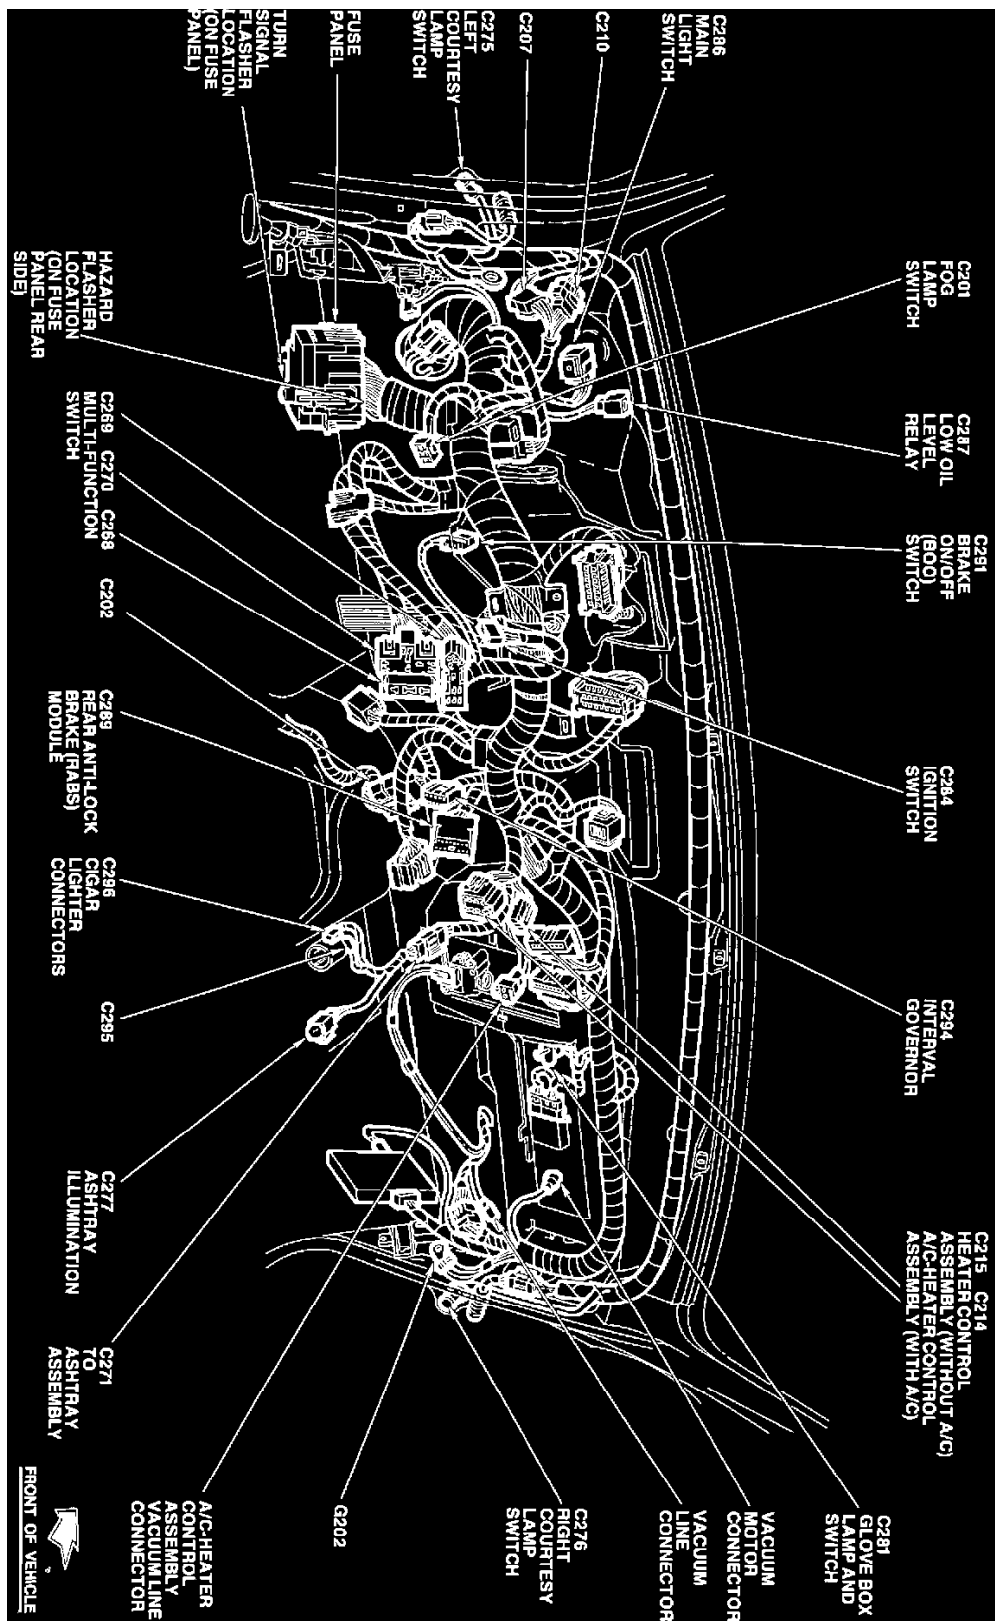


Component Locations

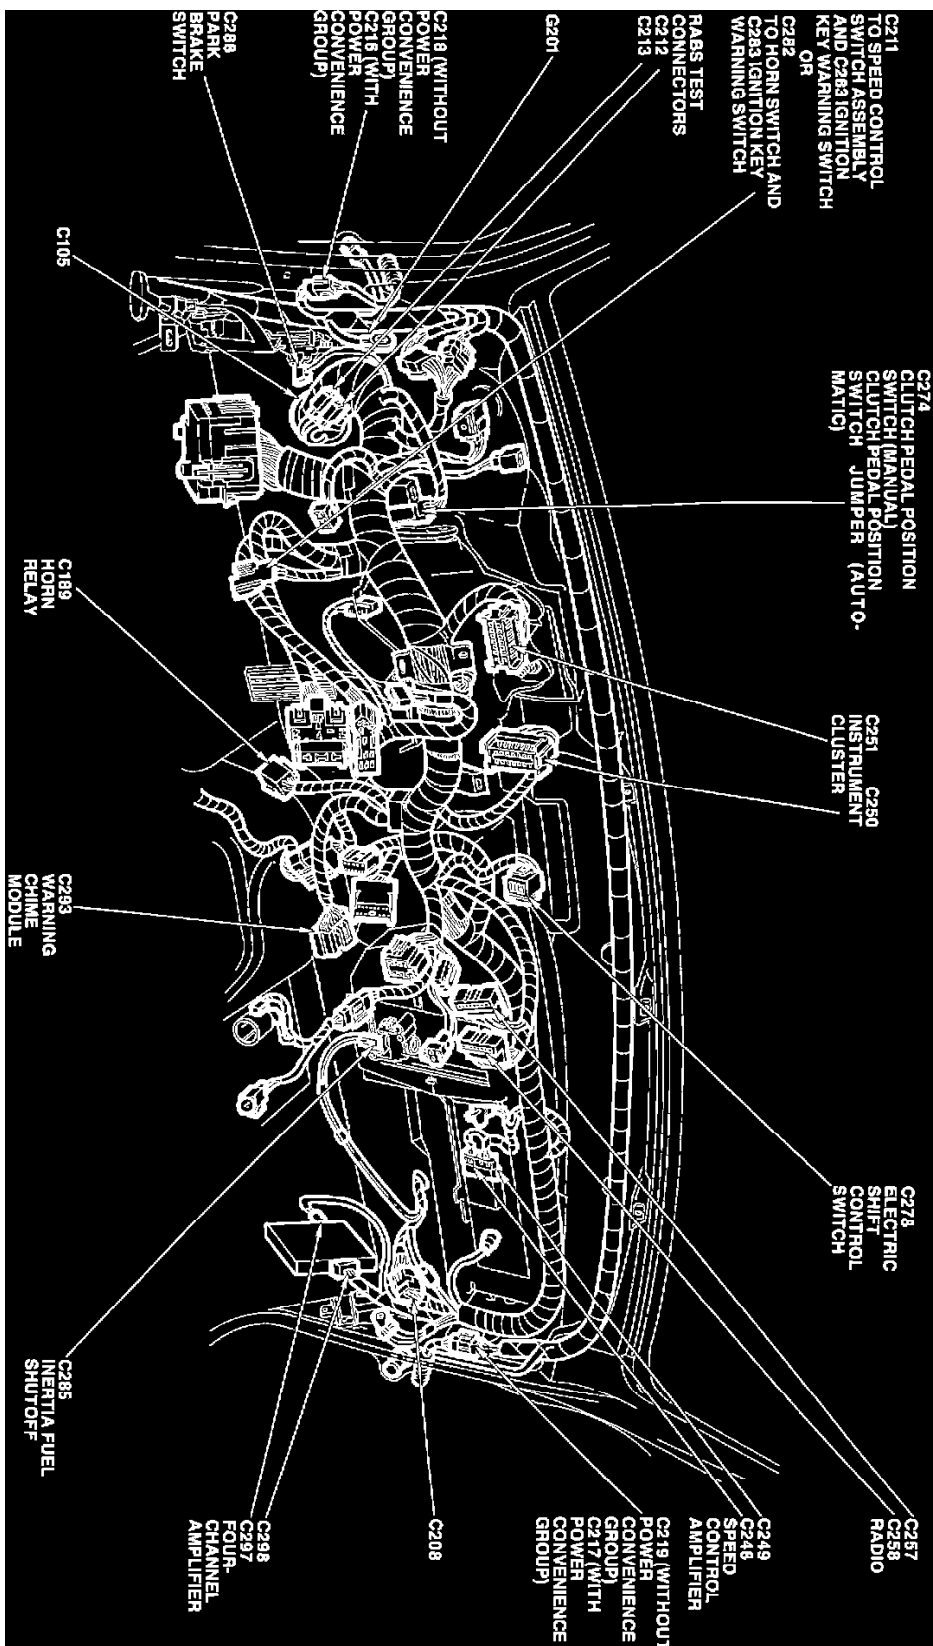


Component Locations

Engine Views

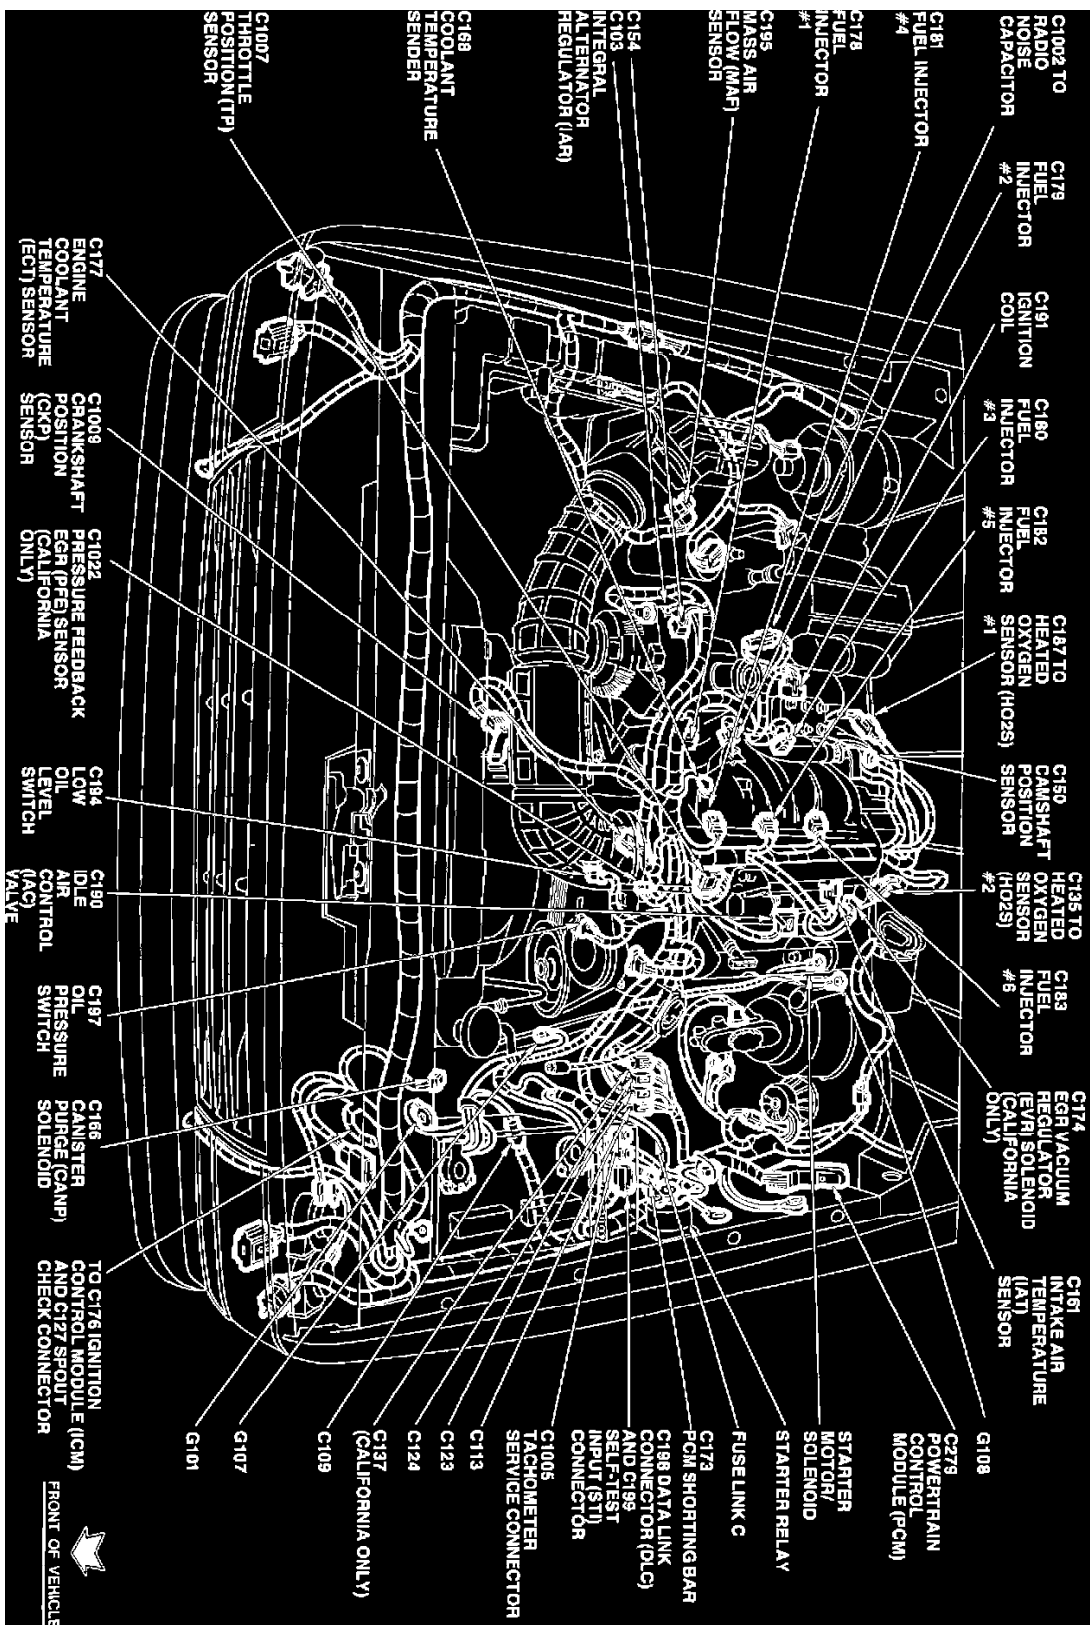


Component Locations

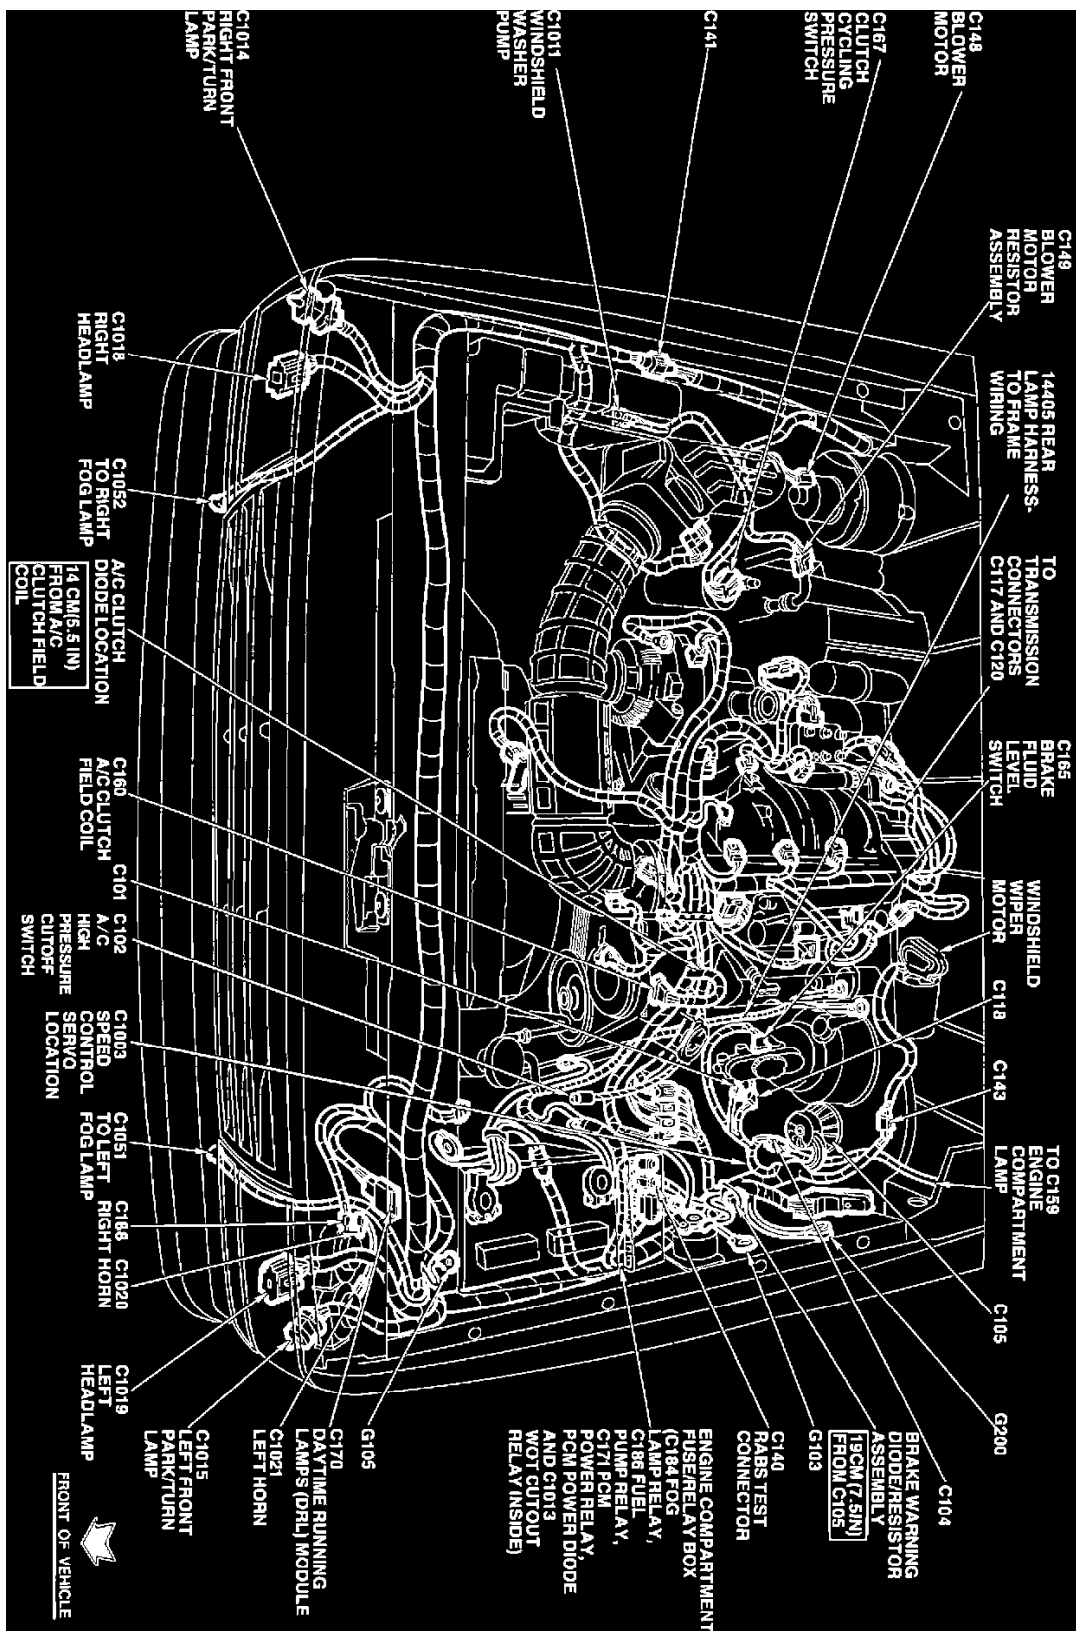

Component Locations

Full Body Views

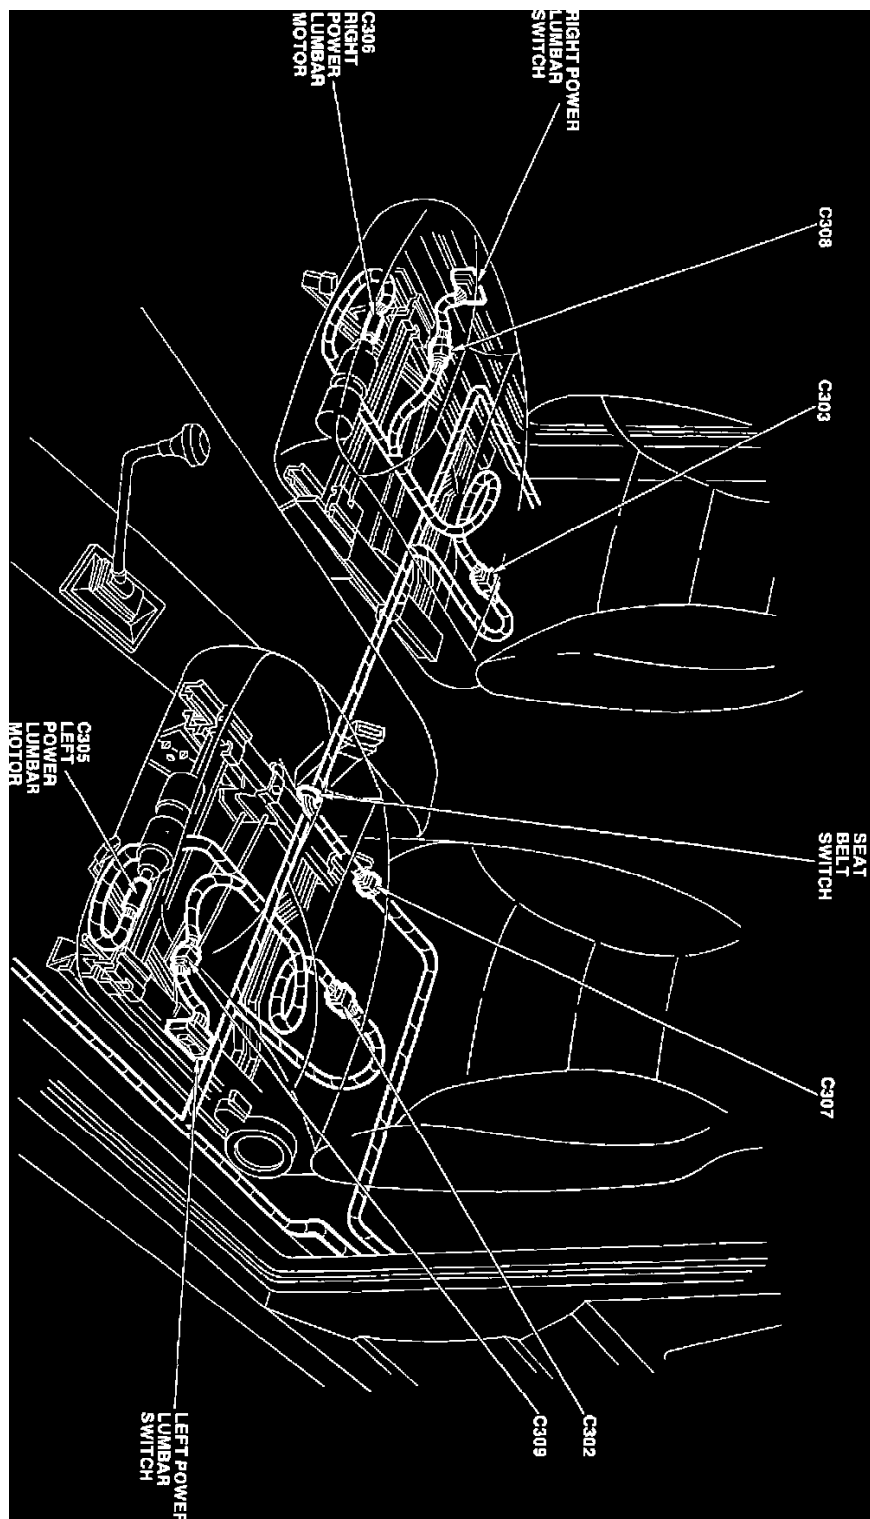

Component Locations

C100-C199

Connector	Location
C101	LH rear of engine compartment
C102	LH front of engine compartment, at A/C Compressor Clutch
C103	RH front of engine, on Integral Alternator Regulator (IAR)
C104	LH rear of engine compartment, near hinge
C105	LH rear of engine compartment, on safety wall
C109	LH side of engine compartment, behind battery
C113	(With A/C), LH side of engine compartment, behind battery
C117	LH rear of engine compartment
C118	LH rear of engine compartment

C120	LH rear of engine compartment
C123	LH side of engine compartment, on wheel well
C124	LH side of engine compartment, on wheel well
C125	Lower LH front of engine compartment, on Power Steering Pressure (PSP) switch
C126	LH rear of engine, on distributor
C127	SPOUT Check Connector , LH front corner of engine compartment, taped to harness
C128	LH side of engine compartment, on wheel well
C135	LH rear of engine, to Heated Oxygen Sensor (HO2S) #2
C137	LH side of engine compartment, on wheel well
C140	RABS Test Connector , Top of LH fender apron, on rear of engine compartment fuse/relay box
C141	RH side of engine compartment
C143	Top LH side of safety wall, to windshield wiper motor
C148	RH rear of engine compartment, on blower motor
C149	RH rear of engine compartment, on blower motor resistor assembly
C150	Top front of engine, on camshaft position sensor
C154	RH front of engine, on Integral Alternator Regulator (IAR)
C155	LH top front of engine, on top of Ignition Control Module (ICM)
C156	LH top front of engine, on bottom of Ignition Control Module (ICM)
C157	Top of transfer case assembly
C158	LH side of transmission, on A4LD transmission
C159	LH underside of engine compartment hood, on engine compartment lamp
C160	Top LH front of engine, on A/C clutch field coil
C161	Top LH rear of engine, on Intake Air Temperature (IAT) sensor
C162	Top LH side of transmission, on backup lamp switch
C163	LH side of transmission, on park/neutral position switch
C165	LH rear of engine compartment, on brake fluid level switch
C166	Lower LH front of engine compartment, on Canister Purge (CANP) solenoid
C167	RH rear of engine compartment, on clutch cycling pressure switch
C168	Top LH front of engine, near thermostat housing, on coolant temperature sender
C169	Top front of engine, to crankshaft position (CKP) sensor
C170	LH side of upper radiator support, near G101, on Daytime Running Lamps (DRL) module
C171	Center of LH fender apron, in engine compartment fuse/relay box, on PCM power relay
C172	Top RH side of engine, on ignition coil
C173	LH side of engine compartment, near rear of engine compartment fuse/relay box, on PCM shorting bar
C174	LH rear of engine, on EGR Vacuum Regulator (EVR) solenoid
C175	Top LH side of engine, to EGR Valve Position (EVP) sensor
C176	LH front corner of engine compartment, on Ignition Control Module (ICM)
C177	Top LH front of engine, on Engine Coolant Temperature (ECT) sensor
C178	Top RH front of engine, on fuel injector #1
C179	Top RH side of engine, on fuel injector #2
C180	Top RH rear of engine, on fuel injector #3
C181	Top LH front of engine, on fuel injector #4
C182	Top LH side of engine, on fuel injector #5
C183	Top LH rear of engine, on fuel injector #6
C184	LH side of engine compartment, on fog lamp relay
C185	Lower RH rear of engine compartment, to Heated Oxygen Sensor (HO2S)
C186	Center of LH fender apron, in engine compartment fuse/relay box, on fuel pump relay
C187	Lower RH rear of engine, to Heated Oxygen Sensor (HO2S) #1
C188	Lower LH front corner of engine compartment, on right horn
C189	Behind I/P, RH side of steering column, on horn relay
C190	Top LH rear of engine, on Idle Air Control (IAC) valve
C191	Top RH rear of engine, on ignition coil
C192	Top RH side of engine, on primary coil (RH)
C193	Top RH front of engine, on secondary coil (LH)
C194	Lower LH side of engine, on low oil level switch
C195	RH side of engine compartment, on Mass Air Flow (MAF) sensor
C196	Top LH side of transmission, to neutral sensing switch
C197	Lower LH front of engine, on oil pressure switch
C198	Data Link Connector(DLC) , LH side of engine compartment, on rear of engine compartment fuse/relay box
C199	Self-Test Input (STI) Connector , LH side of engine compartment, on rear of engine compartment fuse/relay box

C201-C1052

Connector	Location
------------------	----------

C201	Behind LH side of I/P, on fog lamp switch
------	---

C202	Below center of I/P
C204	(Regular Cab) , Lower LH rear corner of cab, on electric shift control module
C204	(Supercab) , Behind bottom of LH "B" pillar, on electric shift control module
C205	(Regular Cab) , Lower LH rear corner of cab, on electric shift control module
C205	(Supercab) , Behind bottom of LH "B" pillar, on electric shift control module
C206	(Regular Cab) , Lower LH rear corner of cab, on electric shift control module
C206	(Supercab) , Behind bottom of LH "B" pillar, on electric shift control module
C207	Behind I/P, left of steering column
C208	Below RH side of I/P
C210	Behind I/P, left of steering column
C211	Bottom of steering column, to speed control switch assembly
C212	RABS Test Connector , Behind LH side of I/P, taped to main harness, near park brake assembly
C213	RABS Test Connector , Behind LH side of I/P, taped to main harness, near park brake assembly
C214	(with A/C) , Behind center of I/P, on rear of A/C-heater control assembly
C214	(without A/C) , Behind center of I/P, on rear of heater control assembly
C215	(with A/C) , Behind center of I/P, on rear of A/C-heater control assembly
C215	(without A/C) , Behind center of I/P, on rear of heater control assembly
C216	Behind LH side of I/P, at cowl panel
C217	Behind RH side of I/P, at cowl panel
C218	Behind LH side of I/P, at cowl panel
C219	Behind RH side of I/P, at cowl panel
C248	Behind RH side of I/P, on speed control amplifier
C249	Behind RH side of I/P, on speed control amplifier
C250	(Standard) , Behind top LH side of I/P, on rear of instrument cluster
C250	(Sport) , Behind top LH side of I/P, on rear of instrument cluster
C251	(Standard) , Behind top LH side of I/P, on rear of instrument cluster
C251	(Sport) , Behind top LH side of I/P, on rear of instrument cluster
C257	(AM/FM Stereo) , Behind center of I/P, on rear of radio
C257	(Electronic Premium Cassette) , Behind center of I/P, on rear of radio
C258	(AM/FM Stereo) , Behind center of I/P, on rear of radio
C258	(Electronic Premium Cassette) , Behind center of I/P, on rear of radio
C268	Top of steering column, on bottom of multi-function switch
C269	Top of steering column, on bottom of multi-function switch
C270	Top of steering column, on bottom of multi-function switch
C271	Behind lower center of I/P, on ashtray assembly
C274	(Automatic) , Behind I/P, left of steering column, on clutch pedal position switch jumper
C274	(Manual) , Behind I/P, left of steering column, on clutch pedal position switch
C275	In front of LH door jamb, on left courtesy lamp switch
C276	In front of RH door jamb, on right courtesy lamp switch
C277	Behind lower center of I/P, on ashtray illumination
C278	Behind top center of I/P, above radio, on electric shift control switch
C279	LH rear of engine compartment, on Powertrain Control Module (PCM)
C279	(California) , LH rear of engine compartment, on Powertrain Control Module (PCM)
C281	Behind RH side of I/P, on glove box lamp and switch
C282	Bottom of steering column, to horn switch
C283	Top of steering column, to ignition key warning switch
C284	RH side of steering column, on ignition switch
C285	Below RH side of I/P, below glove box, on inertia fuel shut-off switch
C286	Behind I/P, left of steering column, on main light switch
C287	Behind lower LH side of I/P, on low oil level relay
C288	Below LH side of I/P, on park brake switch
C289	Behind lower center of I/P, on Rear Anti-Lock Brake (RABS) module
C291	Behind LH side of I/P, on Brake ON/OFF (BOO) switch
C293	Behind lower center of I/P below ashtray assembly, on warning chime module
C294	Behind lower center of I/P, on interval governor
C295	Behind lower center of I/P, on cigar lighter
C296	Behind lower center of I/P, on cigar lighter
C297	Behind RH side of I/P, on four-channel amplifier
C298	Behind RH side of I/P, on four-channel amplifier
C300	LH rear corner of cab
C302	Below LH front seat
C303	Below RH front seat
C304	Top of rear differential, on rear axle sensor
C305	Under front of LH front seat assembly, on left power lumbar motor
C306	Under front of RH front seat assembly, on right power lumbar motor

C307	Below LH front seat assembly, to seat belt switch
C308	Under lower RH side of RH front seat, near right power lumbar switch
C309	Under lower LH side of LH front seat, near left power lumbar switch
C310	(Regular Cab) , Behind LH front seat, on right rear speaker
C310	(Supercab) , Top LH rear of cab, on right rear speaker
C311	(Regular Cab) , Behind RH front seat, on left rear speaker
C311	(Supercab) , Top RH rear of cab, on left rear speaker
C400	Under LH rear of vehicle, near rear of frame
C401	Under LH rear of vehicle, near rear of frame
C403	RH rear of vehicle, on right rear park/stop lamp
C404	LH rear of vehicle, on left rear park/stop lamp
C405	RH rear of vehicle, on right backup lamp
C406	LH rear of vehicle, on left backup lamp
C407	Center rear of vehicle, on right license lamp
C408	(with Rear Bumper) , Center rear of vehicle, on left license lamp
C408	(without Rear Bumper) , LH rear of vehicle, on license lamp
C409	Top center of fuel tank, on fuel pump/fuel gauge sender
C410	Top center of rear window header, on outside cargo/high mount stop lamps
C411	RH rear of vehicle, on right rear turn lamp
C412	LH rear of vehicle, on left rear turn lamp
C500	In rear of LH door, on left door lock motor
C502	In center of LH door, on master window control switch
C503	In lower center of LH door, to left front window motor
C505	In lower front corner of LH door, on left door speaker
C506	In left door, on power mirror switch
C507	In left door, on left door lock switch
C508	In LH door, to left power mirror
C600	In rear of RH door, on right door lock motor
C602	In center of RH door, on right window switch
C603	In lower center of RH door, to right front window motor
C605	In lower front corner of RH door, on right door speaker
C606	In right door, to right power mirror
C607	In right door, on right door lock switch
C900	Center rear of roof, on dome lamp
C901	Center rear of roof, on map lamp
C1000	Top RH front of engine, near secondary coil (LH), to noise capacitor
C1002	RH rear of engine, near radio noise capacitor
C1003	LH rear corner of engine compartment, on speed control servo
C1004	Top front of engine, to Crankshaft Position (CKP) sensor
C1005	Tachometer Service Connector , LH side of engine compartment, on rear of engine compartment fuse/relay box
C1006	LH front of engine compartment, on Ignition Control Module (ICM)
C1007	Top LH front of engine, on Throttle Position (TP) sensor
C1008	Below vehicle, behind transmission, to transfer case assembly
C1009	Lower RH front of engine, near crank pulley, on Crankshaft Position (CKP) sensor
C1010	Top of transfer case, on Vehicle Speed Sensor (VSS)
C1011	RH side of engine compartment, on windshield washer pump
C1013	Center of LH fender apron, in engine compartment fuse/relay box, on WOT cutout relay
C1014	RH front of vehicle, on right front park/turn lamp
C1015	LH front of vehicle, on left front park/turn lamp
C1018	RH front of vehicle, on right headlamp
C1019	LH front of vehicle, on left headlamp
C1020	Lower LH front corner of engine compartment, on right horn
C1021	Lower LH front of engine compartment, on left horn
C1022	LH side of engine, on Pressure Feedback EGR (PFE) sensor
C1023	Rear of transmission, on 4x4 indicator switch
C1024	On RABS proportioning valve switch assembly
C1051	LH front of vehicle, on left fog lamp
C1052	RH front of vehicle, on right fog lamp

C100-C199

Connector	Wire Assembly
------------------	----------------------

C101 (F)	12A581
C101 (M)	14405
C103	14305

C104 (F)	12A581
C104 (M)	15A702
C105 (F)	14401
C105 (M)	12A581
C109 (F)	12A581
C109 (M)	14B060
C113 (F)	12A581
C113 (M)	14305
C117 (F)	9D930
C117 (M)	12A690
C118 (F)	12A581
C118 (M)	14405
C120 (F)	9D930
C120 (M)	12A690
C123 (F)	9D930
C123 (M)	12A581
C124 (F)	9D930
C124 (M)	12A581
C125	12A581
C126	9D930
C127	12A581
C128 (F)	12A581
C128 (M)	9D930
C133	12A581
C135	9D930
C137 (F)	9D930
C137 (M)	12581
C140	12A581
C141 (F)	19D605
C141 (M)	12A581
C143	12A581
C148	19D605
C149	19D605
C150	9D930
C154	14305
C155	9D930
C156	9D930
C157 (F)	14K067
C157 (M)	7A786
C158	12A690
C159	15A702
C160	14305
C161	9D930
C162	12A690
C163	12A960
C165	12A581
C166	12A581
C167	19D605
C168	9D930
C169	9D930
C170	12A581
C171	12A581
C172	9D930
C173	12A581
C174	9D930
C175	9D930
C176	12A581
C177	9D930
C178	9D930
C179	9D930
C180	9D930
C181	9D930
C182	90930
C183	9D930
C184	12A581

C185	Part In Assembly (PIA)
C186	12A581
C187 (F)	12A581
C187 (M)	9D930
C188	12A581
C189	14401
C190	9D930
C191	9D930
C192	9D930
C193	9D930
C194	14305
C195	12A581
C196	12A690
C197	9D930
C198	12A581
C199	12A581

C201-C1052

Connector	Wire Assembly
C201	14401
C202 (F)	7A786
C202 (M)	14401
C204	7A786
C205	7A786
C206	7A786
C207 (F)	(Regular Cab) 13A724
C207 (F)	(Super cab) 14334
C207 (M)	14401
C208 (F)	19D605
C208 (M)	14401
C210 (F)	(Regular Cab) 13A724
C210 (F)	(Super cab) 14334
C210 (M)	14401
C211 (F)	Part In Assembly (PIA)
C211 (M)	14401
C212 (M)	14401
C212 (F)	14401
C214	14401
C215	14401
C216 (F)	(Regular Cab) 13A724
C216 (F)	(Super cab) 14334
C216 (M)	14631
C217 (F)	13A724
C217 (M)	14630
C218 (F)	19A044
C218 (M)	14334
C219 (F)	19A044
C219 (M)	14334
C248	14401
C249	14401
C250	14401
C251	14401
C257	14401
C258	14401
C268	14401
C269	14401
C270	14401
C271 (F)	14401
C271 (M)	13B712
C274	14401
C275	(Regular Cab) 13A724
C275	(Supercab) 14334
C276	(Regular Cab) 13A724
C276	(Supercab) 14334

C277	13B712
C278	14401
C279	12A581
C2S1	14401
C282 (F)	PIA
C282 (M)	14401
C283	PIA
C284	14401
C285	19D605
C286	14401
C287	14401
C288	14401
C289	14401
C291	14401
C293	14401
C294	14401
C295	13B712
C296	13B712
C297 (F)	14401
C297 (M)	18B864
C298	14401
C300 (F)	14334
C300 (M)	13A724
C302	(Regular Cab) 13A724
C302	(Supercab) 14334
C303	(Regular Cab) 13A724
C303	(Supercab) 144334
C304	14405
C305	PIA
C306	PIA
C307	(Regular Cab) 13A724
C307	(Supercab) 14334
C308	PIA
C309	PIA
C310	(Regular Cab) 13A724
C310	(Supercab) 14334
C311	(Regular Cab) 13A724
C311	(Supercab) 14334
C400 (F)	14405
C400 (M)	13412
C401 (F)	13A409
C401 (M)	14405
C403	13A409
C404	13A409
C405	13A409
C406	13A409
C407	(Long Wheelbase) 14405
C407	(Short Wheelbase) 13412
C408	(Long Wheelbase) 14405
C408	(Short Wheelbase) 13412
C409	14405
C410	14334
C411	13A409
C412	13A409
C500	14631
C502	14631
C503	14631
C505	14631
C506	14631
C507	14631
C508	14631
C600	14630
C602	14630
C603	14630
C605	14630

C606	14630
C607	14630
C900	14334
C901	14334
C1000	9D930
C1002	9D930
C1003	14401
C1004	9D930
C1005	12A581
C1006	12A581
C1007	9D930
C1008	7A786
C1009	9D930
C1010	14405
C1011	19D605
C1013	12A581
C1014	12A581
C1015	12A581
C1018	12A581
C1019	12A581
C1020	PIA
C1021	PIA
C1022	9D930
C1023	14K067
C1024	14405
C1051	12A581
C1052	12A581

Ground Locations

Ground Location

G101	LH side of upper radiator support
G103	Top center of LH fender apron
G105	Front of LH fender apron, near battery
G107	Lower LH front of engine compartment, on frame rail
G108	Lower LH side of engine
G200	LH rear corner of engine compartment, near Powertrain Control Module (PCM)
G201	Behind LH cowl panel
G202	Behind RH cowl panel
G203	On floor pan, below LH front seat

Splice Locations

Splice	Location
S101	Near Take Out (T/O) for battery negative post
S103	Engine control sensor harness, near T/O to Ignition Control Module (ICM)
S105	Engine control sensor harness, near T/O to G103
S106	Alternator rectifier system harness, near A/C clutch diode
S107	Engine control sensor harness, near T/O to C113
S108	Engine control sensor harness, near T/O to Ignition Control Module (ICM)
S110	Engine control sensor harness, near T/O to left front side marker lamp
S112	Engine control sensor extension harness, near T/O to C117
S114	Engine control sensor harness, near T/O to engine compartment fuse/relay box
S115	Fuel charge harness, near T/O to fuel injector #3
S116	Engine control sensor harness, 60 mm from T/O for C105
S118	Engine control sensor harness, 60 mm from T/O for C105
S119	Fuel charge harness, near T/O to fuel injector #6
S120	Engine control sensor harness, LH rear of engine compartment, near T/O to C105
S121	Engine control sensor harness, near T/O to left front fog lamp
S124	Fuel charge harness, near T/O to Ignition Control Module (ICM)
S126	Engine control sensor harness, near T/O to C105
S127	Engine control sensor harness, near T/O to G200
S129	Engine control sensor harness, near T/O to primary coil
S130	Fuel charge harness, near T/O to Ignition Control Module (ICM)

S134	Engine control sensor harness, near T/O to LH front exterior lamps
S135	Fuel charge harness, near T/O to fuel injector #2
S136	Fuel charge harness, near T/O to fuel injector #2
S137	Fuel charge harness, near T/O to fuel injector #1
S138	Fuel charge harness, near T/O for injector #1
S138	Fuel charge harness, near T/O to Throttle Position (TP) sensor
S139	Fuel charge harness, near T/O to coolant temperature sender
S146	Fuel charge harness, near T/O to fuel injector #5
S147	Fuel charge harness, 100 mm from T/O for injector #2
S148	Fuel charge harness, at T/O for injector #2
S149	Engine control sensor harness, near T/O to C105
S150	Engine control sensor harness, 40 mm from T/O for RABS test connector
S152	Fuel charge harness, near T/O to fuel injector #4
S154	Engine control sensor harness, near T/O to C104
S155	Engine control sensor harness, near T/O to G103
S158	Alternator rectifier system harness, near A/C clutch diode
S162	(with DRL) , Engine control sensor harness, near T/O to starter motor relay
S162	(with Power Convenience Group [GFD]) , Engine control sensor harness, near T/O to C114
S162	(without Power Convenience Group [GFD]) , Engine control sensor harness, near T/O to C145
S164	Engine control sensor harness, near T/O to left front side marker lamp
S166	Engine control sensor harness, near T/O to G102
S167	Engine control sensor harness, near T/O to G102
S168	Fuel charge harness, near T/O to EGR Vacuum Regulator (EVR) solenoid
S170	Fuel charge harness, near T/O to fuel injector #5
S171	Fuel charge harness, in T/O to C1053
S200	Engine control sensor harness, 100 mm from T/O for left headlamp
S201	Main harness, near T/O to C251
S202	Courtesy lamp switch jumper harness, 200 mm from T/O to G201
S203	Main harness, near T/O to C251
S205	Main harness, near T/O for C251
S206	Main harness, in T/O to C251
S207	Main harness, near T/O to C250
S208	Main harness, 125 mm from T/O for C250
S209	Main harness, near T/O for C282
S211	Main harness, near T/O to rear anti-lock brake module
S212	Main harness, 150 mm from T/O for C250
S215	Courtesy lamp switch jumper harness, on T/O to left courtesy lamp switch
S218	Main harness, near T/O to C282
S400	Rear lamp harness, near T/O to fuel pump/fuel gauge sender
S401	Rear lamp harness, near T/O to C401
S404	Rear license lamp harness, near T/O to left license lamp
S405	Rear lamp connector harness, near T/O to C401
S406	Rear lamp connector harness, near T/O to right backup lamp
S410	Rear lamp harness, near T/O to rear axle sensor
S411	Rear lamp harness, near T/O to rear axle sensor
S413	Rear lamp connector harness, near T/O to C401
S414	Rear lamp harness, near T/O to C400
S415	Rear license lamp harness, near T/O to left license lamp
S416	Rear lamp connector harness, near T/O to C401
S500	Window regulator LH front door harness, near T/O to master window control switch
S600	Window regulator RH front door harness, near T/O to right door lock switch
S601	Window regulator RH front door harness, near T/O to right door lock switch