


Ignition Switch: Testing and Inspection Component Testing Procedures

TO TEST	Connect Self-Powered Test Light or Ohmmeter to Terminals	Move Key to These Positions	A Good Switch Will Indicate
Starter Relay Circuit	B4, 1050 (LG/VT) and STA, 32 (RD/LB)	Acc. Lock, Off, Run, Start	Closed Circuit in Start position only
Bulb Prove-Out Circuit	P1, 547 (LG/YE) 547 (LG/YE) and GND, 57 (BK)	Acc. Lock, Off, Run, Start	Closed Circuit in Start position only


Component Testing Procedure

TO TEST	Connect Self-Powered Test Light or Ohmmeter to Terminals	Move Key to These Positions	A Good Switch Will Indicate
Ignition Coil Circuit	B5, 1050 (LG/VT) and I1, 16 (RD/LG)	Acc. Lock Off, Run, Start	Closed Circuit in Start and Run positions only
Acc Power Circuit	B1, 37 (YE) and A1, 297 (BK/LG)	Acc. Lock, Off, Run, Start	Closed Circuit in Acc or Run positions only
Run Power Circuit	B3, 37 (YE) and A3, 1040 (RD/LB)	Acc. Lock, Off, Run, Start	Closed Circuit in Run position only
	B4, 1050 (LG/VT) and A4, 687 (GY/YE)	Acc. Lock, Off, Run, Start	Closed Circuit in Run position only

Component Testing Procedure

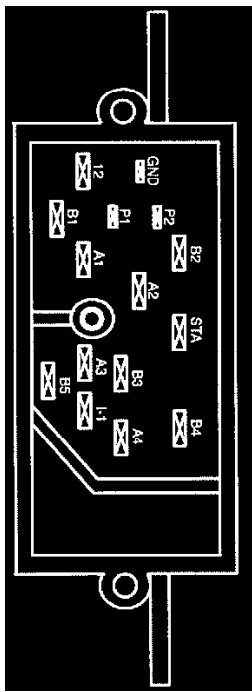

Terminal Locations

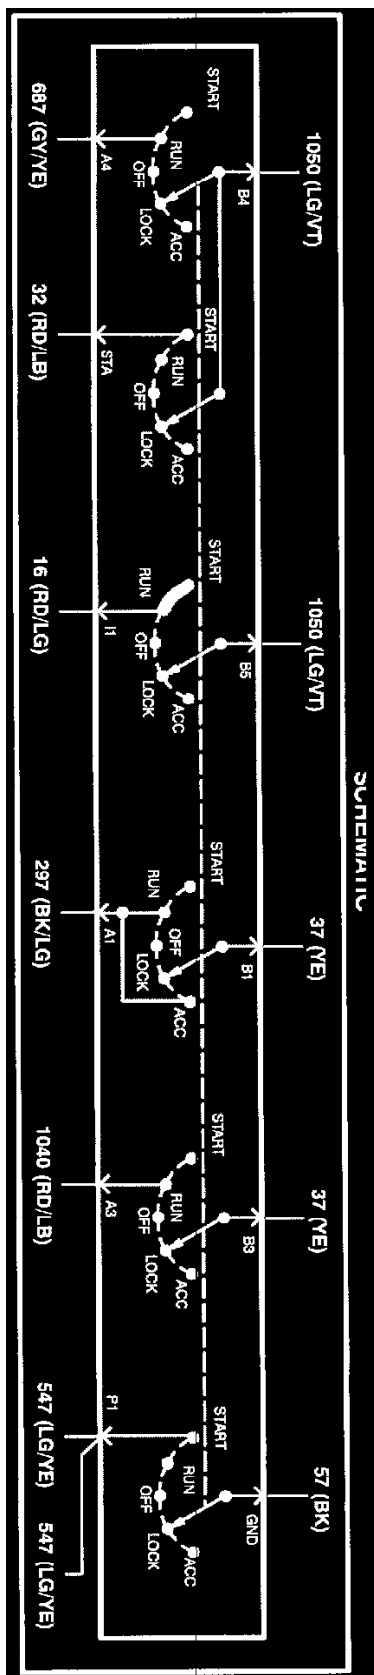

Schematic