


Instrument Cluster: Service and Repair

Instrument Cluster - Replacement


REMOVAL

1. Remove the headlamp switch knob and bezel.

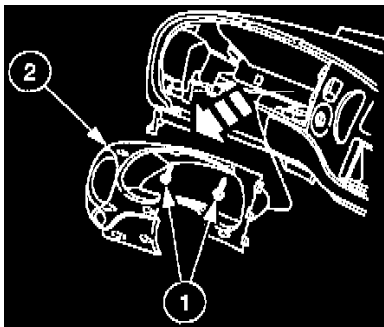

2. Remove the left instrument panel finish panel.



- 1 Remove the bolts.
- 2 Remove the instrument panel finish panel.

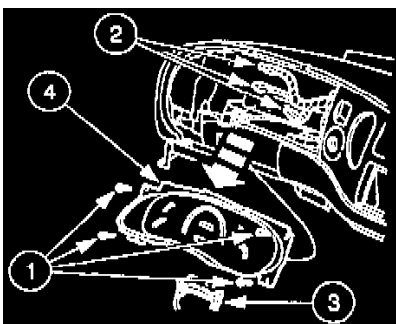

3. Remove the instrument cluster.

- 1 Remove the bolts.
- 2 Disconnect the electrical connectors.
- 3 Remove the transmission range indicator.
- 4 Remove the instrument cluster.

INSTALLATION

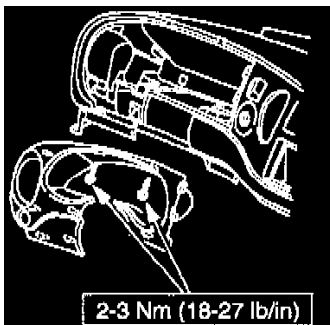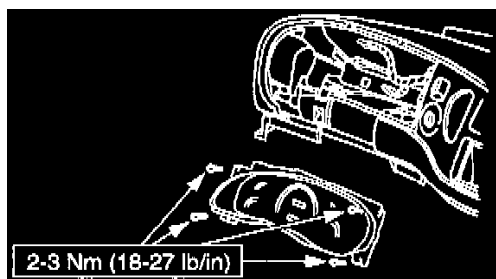

1. To install, reverse the removal procedure.

NOTE: When the battery is disconnected and reconnected, some abnormal drive symptoms may occur while the vehicle relearns its adaptive

strategy. The vehicle may need to be driven **16 km (10 mi)** or more to relearn the strategy.