

## Instrument Cluster / Carrier: Service and Repair

### Instrument Cluster


#### INSTRUMENT CLUSTER

##### Removal and Installation

**CAUTION:** Electronic modules are sensitive to electrical charges. If exposed to these charges, damage may result.

**NOTE:** Prior to removal of the module, it is necessary to upload module configuration information to the diagnostic tool. this information needs to be downloaded into the new module once installed.


1. Depower the supplemental restraint system (SRS).
2. Remove the audio unit.

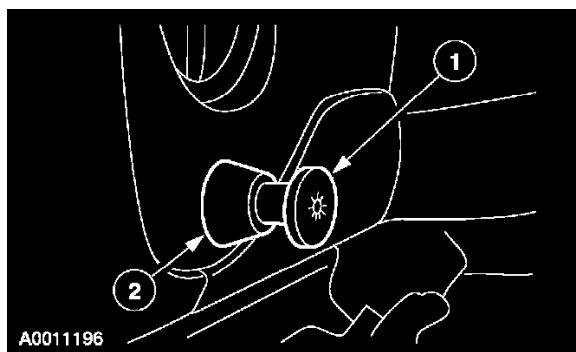

3. Remove the headlamp switch knob.
  - 1 Remove the headlamp switch knob.
  - 2 Rotate the headlamp switch bezel counterclockwise and remove.



4. Remove the instrument panel finish panel.
  - 1 Remove the bolts.
  - 2 Remove the instrument panel finish panel.
    - Disconnect the electrical connectors.

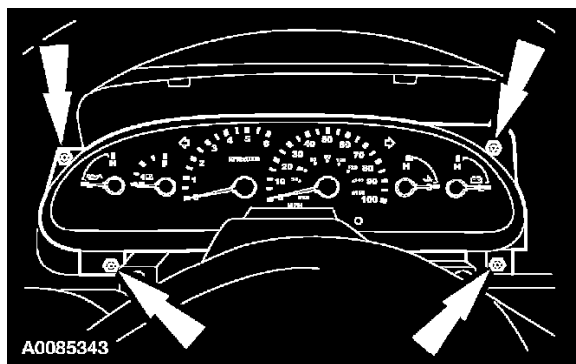

5. Remove the instrument cluster.
  - 1 Remove the bolts.
    - Remove the transmission range indicator and disconnect the electrical connectors.

- 2 Remove the instrument cluster.
6. To install, reverse the removal procedure.